

Manuals.plus /

› SideKing /

› SideKing 2 Gallon Battery Powered Garden Sprayer Instruction Manual

SideKing PWQ-8L-B

SideKing 2 Gallon Battery Powered Garden Sprayer

Model: PWQ-8L-B

INTRODUCTION

Thank you for choosing the SideKing 2 Gallon Battery Powered Garden Sprayer. This electric backpack sprayer is designed for efficient and effortless application of various liquids for gardening, lawn care, pest control, and cleaning tasks. Its powerful battery and versatile features make it an ideal tool for both home and professional use. Please read this manual thoroughly before operation to ensure safe and optimal performance.

PRODUCT FEATURES

- **No More Pumping Again:** The upgraded USB-charging battery powered sprayer has powerful long-lasting battery, with 2x 2000mAh built-in battery, it sprays continuously for 2.5-3 hours per charge. Just press a button to spray automatically. No need pump sprayer any more.
- **Lightweight & Portable:** The garden sprayer has 2 carrying options - handheld sprayer or attach the adjustable strap. Weighing just 3.3 lbs but 2 gallons capacity, this portable yard sprayer is 50% lighter than traditional pump models. The ergonomic handle and balanced design make it easy to carry around your lawn and garden without strain.
- **More Convenient Detail:** The handle cover of 2 gallon sprayer is carefully designed with a groove to hold the wand. Two wide opening allows for fast filling, easy solution mixing and rinsing. The translucent tank with a gallon marker monitors liquid levels while the screen filter prevents clogs. The upgraded coil spring prevents kinking in the hose.
- **Versatile Sprayer for Every Need:** Customize your weed & lawn sprayer with three nozzles: mist for seedlings, shower for shrubs, and jet for deep cleaning. The telescopic wand extends from 20" to 31", reaching high branches or ground-level weeds with precision.
- **Multiple Uses:** Whether you're using it as a bug sprayer, garden sprayer, or weed sprayer, this pump sprayer 2 gallon ensures easy handling and mobility for all your lawn and garden needs.

WHAT'S IN THE BOX

The SideKing 2 Gallon Battery Powered Garden Sprayer package includes:

- 1x Electric Handle
- 1x Telescopic Wand
- 1x Water Hose with Filter
- 1x Water Tank
- 3x Spray Nozzles (Mist, Shower, Jet)
- 1x USB Charge Cord
- 1x Adjustable Shoulder Strap
- 3x O-ring Gaskets
- Instruction Manual

SETUP AND ASSEMBLY

Follow these steps to assemble your SideKing Garden Sprayer:

1. **Install Nozzle:** Attach your desired spray nozzle to the end of the telescopic wand. Ensure it is securely twisted on.
2. **Connect Wand to Handle:** Place a gasket onto the threaded end of the electric handle. Insert the telescopic wand into the handle and tighten the nut to secure it.
3. **Attach Hose to Handle:** Remove the nut from the hose connection point on the handle. Insert the hose into the handle, then re-tighten the nut to create a secure seal.
4. **Connect Hose to Tank:** Insert the other end of the hose pipe into the designated port on the water tank and screw it up tightly.
5. **Attach Shoulder Strap:** Buckle up the adjustable shoulder strap to the designated loops on the tank for easy carrying.
6. **Charge Battery:** Connect the USB charge cord to the charging port on the handle. Ensure the battery is fully charged before first use.

Your browser does not support the video tag.

Video: How to install? Garden sprayer Setup & Usage Steps. This video demonstrates the assembly process of the sprayer, including attaching the wand, handle, and hose.

Your browser does not support the video tag.

Video: SideKing Battery Powered Sprayer 2 Gallon. This video provides an overview of the sprayer's components and basic assembly.

OPERATING INSTRUCTIONS

1. **Fill the Tank:** Open the wide mouth lid(s) on the tank. Pour your desired liquid (water, weed killer, fertilizer, etc.) into the translucent tank. Use the gallon markers on the side to monitor liquid levels.
2. **Power On:** Press the power button on the electric handle to turn on the sprayer. The sprayer will begin to operate automatically.
3. **Adjust Spray Pattern:** Twist the nozzle at the end of the telescopic wand to adjust the spray pattern (mist, shower, or jet) according to your application needs.
4. **Adjust Wand Length:** Extend or retract the telescopic wand (from 20" to 31") to reach different areas with precision.
5. **Power Off:** Press the power button again to turn off the sprayer when finished.



Image: The SideKing 2 Gallon Battery Powered Garden Sprayer with its main components laid out. This image shows the overall product design and included parts.

NOZZLE TYPES AND USAGE

Your sprayer comes with three interchangeable nozzles to suit various spraying tasks:

- **Mist Nozzle:** Ideal for delicate plants, seedlings, or when a fine, even coverage is required, such as applying pesticides or herbicides.

- **Shower Nozzle:** Provides a broader, softer spray, suitable for watering shrubs, larger plants, or general cleaning.
- **Jet Nozzle:** Delivers a concentrated, powerful stream for deep cleaning tasks or reaching distant areas.

3 TYPES OF NOZZLES ARE AVAILABLE

TWIST THE NOZZLE TO ADJUST SPRAY PATTERN

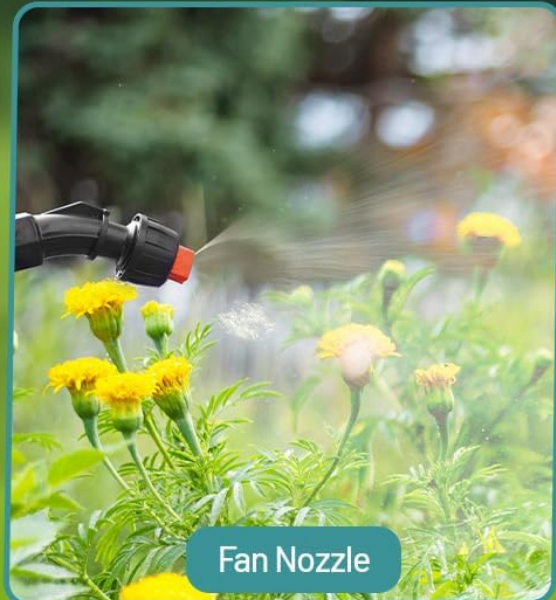


Image: Close-up view of the three distinct spray nozzles included with the SideKing sprayer, demonstrating their different spray patterns.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your sprayer:

- **Clean After Each Use:** After each use, especially when spraying chemicals, rinse the tank thoroughly with clean water. Run clean water through the hose and wand to flush out any residue.
- **Check Filters:** Periodically inspect the screen filter at the bottom of the tank and the nozzle filters for any clogs or debris. Clean them as needed.
- **Store Properly:** Store the sprayer in a cool, dry place away from direct sunlight and extreme temperatures. Ensure the tank is empty and clean before storage.
- **Battery Care:** Fully charge the battery before long-term storage. Recharge every 3-6 months if not in use to maintain battery health.

TROUBLESHOOTING

If you encounter issues with your sprayer, try these common troubleshooting steps:

- **No Spray/Weak Spray:**
 - Check if the battery is charged.
 - Ensure the tank has sufficient liquid.
 - Inspect nozzles and filters for clogs. Clean if necessary.
 - Verify all connections (hose, wand, handle) are secure and not leaking.
- **Leaking:**
 - Check all threaded connections for tightness.
 - Inspect O-ring gaskets for damage or improper seating. Replace if needed.
- **Sprayer Not Turning On:**
 - Ensure the battery is fully charged.
 - Press the power button firmly.

SPECIFICATIONS

Feature	Detail
Brand	SideKing
Model Name	SideKing Battery Powered Garden Sprayer
Item Model Number	PWQ-8L-B
Tank Volume	2 Gallons
Color	Blue
Material	ABS handle, HDPE water can
Product Dimensions	12.2"W x 13.4"H
Power Source	Battery Powered
Batteries	2 Lithium Ion batteries required (included)
Hose Length	31 Inches
Item Weight	3.21 pounds

WARRANTY AND SUPPORT

Your SideKing 2 Gallon Battery Powered Garden Sprayer comes with a worry-free One-year Warranty. For any questions about the product, please feel free to contact our 24/7 online service. We are committed to providing you with the best experience.