



Manuals.plus /

› AdHoc /

› AdHoc Scape Salt & Pepper Mill Set Instruction Manual (Model 76504)

**AdHoc 76504**

# AdHoc Scape Salt & Pepper Mill Set Instruction Manual

Brand: AdHoc | Model: 76504

## INTRODUCTION

---

This manual provides essential information for the proper setup, operation, and maintenance of your AdHoc Scape Salt & Pepper Mill Set. Please read these instructions carefully before first use to ensure optimal performance and longevity of your mills.



*Image: The AdHoc Scape Salt & Pepper Mill Set, featuring one black and one white mill with wooden tops.*

## SETUP

---

### 1. Unpacking

Carefully remove the salt and pepper mills from their packaging. Inspect both mills for any signs of damage. Retain packaging for future storage or transport if needed.

### 2. Refilling the Mills

1. To refill, locate the bayonet lock mechanism. This is typically found by twisting the top section of the

mill.

2. Gently pull the top section upwards to separate it from the transparent spice chamber.
3. Fill the transparent chamber with your desired whole peppercorns or coarse salt. Avoid overfilling.
4. Align the top section with the chamber and push down firmly until the bayonet lock engages with an audible click. Ensure it is securely closed to maintain aroma tightness.



*Image: A black AdHoc Scape mill with its top section removed, revealing the opening for refilling spices.*



*Image: A black AdHoc Scape mill lying horizontally, with peppercorns visible in its transparent chamber, illustrating the spice capacity.*

## **OPERATING THE MILLS**

---

### **1. Adjusting Grind Settings**

The AdHoc Scape mills feature an adjustable CeraCut ceramic grinder. To change the coarseness of your grind, locate the adjustment knob at the bottom of the mill. Turn the knob clockwise for a finer grind and counter-clockwise for a coarser grind. Experiment to find your preferred setting.



*Image: The underside of an AdHoc Scape mill, highlighting the CeraCut ceramic grinding mechanism and adjustment dial.*

## 2. Grinding Process

To grind spices, simply hold the mill firmly and twist the top section. The grinding mechanism is located on top, ensuring a crumb-free work surface when the mill is set down. The aroma-tight lid also protects spices and can serve as a dosing aid.

## MAINTENANCE AND CARE

- **Cleaning:** The mills are **not** dishwasher safe. To clean, wipe the exterior with a damp cloth. For the ceramic grinder, a small brush can be used to remove any residue. Ensure all parts are completely dry before reassembling or refilling.
- **Storage:** Store the mills in a dry place away from direct sunlight and excessive heat to preserve the quality of the spices and the mill materials.

## TROUBLESHOOTING

Issue	Possible Cause	Solution
No spice dispensed or difficult to grind	Grind setting too fine; mill is empty; spices are clumped.	Adjust to a coarser setting; refill the mill; shake the mill gently to loosen spices.
Inconsistent grind size	Grind setting needs adjustment; foreign object in grinder.	Fine-tune the grind adjustment knob; empty the mill and inspect the grinder for obstructions.
Lid/top section not closing securely	Bayonet lock not aligned; debris obstructing closure.	Ensure proper alignment of the bayonet lock; clean any debris from the locking mechanism.

## SPECIFICATIONS

Feature	Detail
Material	Plastic
Color	Black/White
Product Dimensions	2.28"W x 4.84"H
Brand	AdHoc
Operation Mode	Manual
Recommended Uses	Kitchen, Home
Dishwasher Safe	No
Item Weight	8.8 ounces
Model Number	76504

## WARRANTY AND SUPPORT

AdHoc offers a 30-year pledge on the CeraCut ceramic grinder mechanism, ensuring long-lasting performance. For further support or warranty claims, please refer to the contact information provided with your product packaging or visit the official AdHoc website.