

[Manuals.plus](#) /

› [Timex](#) /

› Timex Expedition CAT 33mm Digital Watch User Manual

Timex TW4B280009J

Timex Expedition CAT 33mm Digital Watch User Manual

Model: TW4B280009J

1. PRODUCT OVERVIEW

The Timex Expedition CAT 33mm Digital Watch is designed for durability and functionality, suitable for various activities. It features a digital display, Indiglo night-light, and is water-resistant up to 100 meters. The watch is equipped with a robust black strap and a 33mm black case, making it a reliable timepiece for everyday use.



Image 1: Front view of the Timex Expedition CAT 33mm Digital Watch, showcasing its digital display and black strap.

2. INITIAL SETUP

Setting Time and Date

To ensure accurate timekeeping, follow these steps to set the time and date on your Timex Expedition watch. The watch features four primary buttons: MODE, SET, START/SPLIT, and STOP/RESET.

1. **Enter Set Mode:** Press and hold the **SET** button until the display flashes, indicating you are in set mode.

2. **Select Item:** Press the **MODE** button to cycle through the settings (hours, minutes, seconds, month, day, year).
3. **Adjust Value:** Use the **START/SPLIT** button to increase the flashing value or the **STOP/RESET** button to decrease it.
4. **Confirm and Exit:** Once all settings are correct, press the **SET** button again to exit set mode and save your changes.



Image 2: Side view of the watch, highlighting the control buttons used for setting and operating functions.

3. OPERATING YOUR WATCH

Indiglo Night-Light

The Indiglo night-light illuminates the watch display for easy viewing in low-light conditions. To activate, simply press the **INDIGLO** button (typically located on the top right or left side of the watch case). The light will remain on for a few seconds.

Stopwatch Function

Your watch includes a stopwatch feature for timing events.

1. **Access Stopwatch:** Press the **MODE** button repeatedly until the stopwatch display appears.
2. **Start/Stop:** Press the **START/SPLIT** button to begin timing. Press it again to pause.
3. **Split Time:** While the stopwatch is running, press the **STOP/RESET** button to record a split time without stopping the main timer. Press **START/SPLIT** to resume.
4. **Reset:** With the stopwatch paused, press the **STOP/RESET** button to clear the timer to zero.

Water Resistance

This watch is water-resistant up to 100 meters (330 feet). This means it is suitable for showering, swimming, and snorkeling. It is *not* recommended for scuba diving. Do not operate buttons underwater to maintain water resistance integrity.

4. CARE AND MAINTENANCE

- **Cleaning:** Clean your watch regularly with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners.
- **Battery Replacement:** The watch uses 1 Lithium Metal battery (CR2016 cell). When the display dims or functions become erratic, it's time to replace the battery. It is recommended to have battery replacement performed by a qualified technician to ensure water resistance is maintained.
- **Temperature:** Avoid exposing your watch to extreme temperatures, both hot and cold, as this can affect battery life and watch performance.
- **Impact:** While durable, avoid dropping the watch or subjecting it to strong impacts.



Image 3: Close-up of the watch's stainless steel back, indicating the CR2016 cell battery type and 100-meter water resistance.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Low or dead battery.	Replace the battery (CR2016 cell).
Time is incorrect.	Time needs to be reset.	Follow the "Setting Time and Date" instructions in Section 2.
Buttons are unresponsive.	Temporary software glitch or low battery.	Try resetting the watch (if applicable, refer to full manual) or replace battery.
Condensation under crystal.	Exposure to extreme temperature changes or compromised water resistance.	Seek professional service immediately to prevent damage. Avoid further water exposure.

6. SPECIFICATIONS

- **Model Number:** TW4B280009J
- **Case Diameter:** 33mm

- **Strap Material:** Black fabric
- **Lens Material:** Acrylic
- **Water Resistance:** Up to 100 meters (330 feet)
- **Battery Type:** 1 Lithium Metal battery (CR2016 cell)
- **Department:** Unisex
- **Features:** Digital display, Indiglo night-light, Stopwatch, Alarm, Date

7. WARRANTY AND SUPPORT

Your Timex watch is covered by a limited warranty against manufacturing defects. For specific warranty terms, registration, or to obtain service, please visit the official Timex website or contact Timex customer support directly. Keep your proof of purchase for warranty claims.

For additional support, frequently asked questions, or to download a full version of the manual, please visit the [Timex Official Website](#).

© 2026 Timex. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question