

Tefal DT2026

Tefal Pure POP DT2026 Garment Steamer Instruction Manual

Model: DT2026

1. INTRODUCTION

Thank you for choosing the Tefal Pure POP DT2026 Garment Steamer. This ultra-compact and travel-friendly device is designed to efficiently steam and purify your garments, offering a convenient solution for wrinkle removal and fabric refreshment. Please read this manual thoroughly before first use to ensure safe and optimal operation.

2. SAFETY INSTRUCTIONS

- Always ensure the voltage indicated on the appliance corresponds to your mains voltage.
- Do not leave the appliance unattended while it is connected to the mains supply.
- Keep the appliance out of reach of children.
- Never direct steam at people or pets. Steam is hot and can cause burns.
- Do not immerse the appliance in water or any other liquid.
- Always unplug the appliance before filling with water, cleaning, or when not in use.
- Use only distilled or demineralized water in the water tank to prevent mineral buildup.
- Do not use the appliance if the power cord or plug is damaged.
- Ensure the steam head is not blocked during operation.

3. PRODUCT COMPONENTS

Familiarize yourself with the parts of your Tefal Pure POP DT2026 Garment Steamer:

- Garment Steamer Body
- Reversible Pad (Velvet side for steaming, Lint remover side for fabric refreshment)
- Travel Pouch
- Removable Water Tank



The Tefal Pure POP DT2026 Garment Steamer in Sunshine Yellow, shown alongside its black travel pouch. This compact steamer is designed for easy handling and portability.





A front view of the Tefal Pure POP DT2026 Garment Steamer, highlighting its ergonomic handle and steam head.



A side view of the Tefal Pure POP DT2026 Garment Steamer, showing the water tank and power button.



An image displaying the compact dimensions of the Tefal Pure POP DT2026 Garment Steamer: 14.1L x 5.7W x 31.8H centimetres.

4. SETUP

- Fill the Water Tank:** Remove the water tank from the steamer. Open the cap and fill the tank with distilled or demineralized water. Do not overfill. Close the cap securely and reattach the tank to the steamer.
- Attach the Reversible Pad:** Select the desired side of the reversible pad (velvet for steaming, lint remover for fabric refreshment) and attach it securely to the steam head.
- Power Connection:** Plug the steamer into a suitable electrical outlet.

5. OPERATING INSTRUCTIONS

5.1 Steaming Garments

1. Ensure the water tank is filled and the velvet side of the reversible pad is attached.
2. Plug in the steamer. The steamer heats up in approximately 15 seconds.
3. Hang the garment on a hanger. Hold the fabric taut with one hand.
4. Press the steam trigger to release steam. Move the steamer head slowly over the fabric, from top to bottom, allowing the steam to penetrate and relax the fibers.
5. For stubborn wrinkles, pass the steamer over the area multiple times.
6. After use, release the steam trigger and unplug the appliance.



The steamer is ready for use in 15 seconds, ideal for quick touch-ups.



STEAM SAFELY

the velvet side



The velvet side of the reversible pad provides gentle care for all fabrics, including delicates.

5.2 Removing Lint and Hair

1. Ensure the lint remover side of the reversible pad is attached.
2. Without pressing the steam trigger, gently brush the fabric surface with the lint remover pad to collect lint, dust, and pet hair.
3. Clean the lint from the pad as needed.



REMOTES
HAIR AND LINT
the lint remover side



The lint remover side of the reversible pad effectively removes lint and hair from fabrics.

REVERSIBLE PAD SYSTEM

switch effortlessly between the lint removal side and the velvet side



The exclusive reversible pad system allows effortless switching between lint removal and steaming functions.



A detailed view of the reversible pad, highlighting its two distinct surfaces for lint removal and gentle steaming.

6. MAINTENANCE AND CLEANING

6.1 Cleaning the Steamer Head and Pads

- Ensure the steamer is unplugged and completely cool before cleaning.
- Wipe the steam head with a soft, damp cloth. Do not use abrasive cleaners.
- The reversible pad can be gently cleaned with a soft brush or damp cloth to remove accumulated lint and debris.

6.2 Descaling (if necessary)

If you notice reduced steam output or mineral residue, descaling may be required:

1. Mix a solution of equal parts white vinegar and water.
2. Fill the water tank with this solution.
3. Plug in the steamer and allow it to heat up.
4. Hold the steamer over a sink and press the steam trigger until the tank is empty.
5. Repeat the process with clean, distilled water to rinse out any remaining vinegar.
6. Perform descaling regularly, especially if using tap water (though distilled water is recommended).

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No steam or low steam output	Water tank is empty; Mineral buildup; Steamer not heated sufficiently.	Refill water tank; Perform descaling; Allow 15 seconds for heating.
Water leaking from steam head	Overfilled water tank; Steamer not hot enough; Mineral buildup.	Do not overfill; Allow full heat-up time; Perform descaling.
Steamer not turning on	Not plugged in; Power outlet issue.	Ensure plug is fully inserted; Test with another outlet.

8. SPECIFICATIONS

Brand: Tefal

Model: DT2026

Manufacturer: Groupe SEB

Voltage: 230 Volts

Wattage: 1300 watts

Heat Time: 15 Seconds

Product Dimensions: 14.1L x 5.7W x 31.8H centimetres

Water Tank Capacity: 70 Milliliters

Included Accessories: Garment Steamer Body, Reversible Pad (velvet/lint), Travel Pouch

Product Benefits: Eliminates Odor, Lint Remover, Removes Wrinkles, Sanitizes, Sterilizes

9. WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please refer to the warranty card included with your purchase or visit the official Tefal website. Keep your proof of purchase for any warranty claims.

Tefal Official Website: www.tefal.com