

[Manuals.plus](#) /

› [TechniSat](#) /

› TechniSat VIOLA CD-1 Portable Stereo CD Player Instruction Manual

TechniSat VIOLA CD-1

TechniSat VIOLA CD-1 Portable Stereo CD Player Instruction Manual

Model: VIOLA CD-1

1. INTRODUCTION

The TechniSat VIOLA CD-1 is a compact and versatile portable stereo CD player designed for various listening environments. It features a CD player compatible with standard audio CDs and MP3-CDs, an FM radio tuner, Bluetooth audio streaming capabilities, and an AUX input for external devices. Its practical carry handle and dual power options (mains or battery) make it suitable for both home and portable use.



Für zuhause und unterwegs

Denn in dem kleinen Verwandlungskünstler ist ein leistungsstarker Akku für bis zu neun Stunden Musikgenuss eingebaut.

Image: The TechniSat VIOLA CD-1 is designed for use at home and on the go, suitable for all ages.

2. SAFETY INFORMATION

Please read all safety instructions carefully before operating the device. Keep this manual for future reference.

- Do not expose the device to rain, moisture, or extreme temperatures.
- Do not open the casing or attempt to repair the device yourself. Refer all servicing to qualified personnel.
- Ensure proper ventilation around the unit. Do not block ventilation openings.
- Use only the specified power adapter or batteries.
- Avoid placing the unit near heat sources or in direct sunlight.
- Keep out of reach of small children.

3. PRODUCT OVERVIEW

Familiarize yourself with the components and controls of your VIOLA CD-1.



Image: Top view of the VIOLA CD-1, displaying the main control panel and digital display.

Controls and Indicators:

- **Power Button ():** Turns the unit on or off.
- **Mode Button:** Switches between CD, FM Radio, Bluetooth, and AUX input modes.
- **Volume Up/Down (V+/V-):** Adjusts the audio volume.
- **Play/Pause (▶/⏸):** Starts or pauses playback in CD/Bluetooth mode.
- **Skip/Search (⏮/⏭):** Skips tracks/stations or searches.
- **Album Button:** Navigates between folders on MP3-CDs.
- **Scan Button:** Scans for FM radio stations.
- **Rep/Prog Button:** Repeats tracks or programs playback order.
- **Digital Display:** Shows current mode, track number, frequency, or time.

Ports and Features:



Image: Side view of the VIOLA CD-1, highlighting the headphone jack, AUX input, and AC power connection.

- **Headphone Output (3.5mm jack):** For private listening.
- **Audio Input (AUX in):** Connect external audio devices.
- **AC Power Connection:** For mains power supply.
- **FM Telescopic Antenna:** For improved FM radio reception.
- **Carry Handle:** For easy portability.



Praktischer Tragegriff

Der praktische Tragegriff macht das Mitnehmen der Box noch komfortabler und einfacher.

Image: The practical carry handle makes the device easy to transport.



Zwei eingebaute Lautsprecher für Stereoklang.

Image: The VIOLA CD-1 features two built-in speakers for stereo sound.

4. SETUP

4.1 Power Supply

The VIOLA CD-1 can be powered by mains electricity or batteries.

Mains Power:

- Connect the provided power cable to the AC power connection port on the unit.
- Plug the other end of the power cable into a standard 230V wall socket.

Battery Power:

- Open the battery compartment located on the bottom of the unit.
- Insert 6 x 1.5V R14/C batteries, ensuring correct polarity (+/-).
- Close the battery compartment securely.

- The unit will automatically switch to battery power when disconnected from the mains.

4.2 Antenna Setup

For optimal FM radio reception, fully extend the telescopic antenna located at the back of the unit.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

Press the **Power Button** () to turn the unit on or off.

5.2 CD Playback



CD-Player mit MP3-Funktion

Spielt die Lieblings-CDs rauf und runter.

Image: The CD player with MP3 function allows playback of your favorite CDs.

1. Open the CD compartment lid.
2. Place a CD (audio CD or MP3-CD) onto the spindle with the label side facing up.
3. Close the CD compartment lid securely.
4. Press the **Mode Button** until "CD" appears on the display.
5. The CD will start playing automatically. If not, press the **Play/Pause** (▶/⏸) button.
6. Use the **Skip/Search** (⏮/⏭) buttons to navigate between tracks.
7. For MP3-CDs, use the **Album Button** to switch between folders.
8. Press the **Rep/Prog Button** to repeat a track or program a playback sequence.

5.3 FM Radio

1. Press the **Mode Button** until "FM" appears on the display.
2. Extend the telescopic antenna for better reception.
3. Press the **Scan Button** to automatically search for and store available FM stations.
4. Alternatively, use the **Skip/Search** (⏮/⏭) buttons to manually tune to a frequency.

5.4 Bluetooth Audio Streaming



Drahtloser Musikgenuss
Mit Bluetooth-Audiostreaming

Image: Enjoy wireless music with Bluetooth audio streaming, connecting your smartphone to the VIOLA CD-1.

1. Press the **Mode Button** until "BT" or "Bluetooth" appears on the display. The unit will enter pairing mode.
2. On your smartphone or other Bluetooth device, enable Bluetooth and search for available devices.
3. Select "VIOLA CD-1" from the list of devices to pair.
4. Once paired, you can stream audio from your device to the VIOLA CD-1.
5. Use the controls on your connected device or the VIOLA CD-1 (Play/Pause, Skip) to manage playback.

5.5 AUX Input

1. Connect an external audio device (e.g., MP3 player, smartphone) to the **AUX in** port using a 3.5mm audio cable (not included).
2. Press the **Mode Button** until "AUX" appears on the display.
3. Play audio from your external device. The sound will be output through the VIOLA CD-1 speakers.
4. Adjust volume using the VIOLA CD-1's volume controls or your external device.

5.6 Headphone Use

Plug 3.5mm headphones into the **Headphone Output** jack for private listening. The speakers will automatically mute.

6. MAINTENANCE

6.1 Cleaning

- Wipe the exterior of the unit with a soft, dry cloth.
- Do not use abrasive cleaners, waxes, or solvents.
- For the CD lens, use a specialized CD lens cleaner disc or a soft, lint-free cloth designed for optical lenses.

6.2 Storage

When not in use for extended periods, remove batteries and store the unit in a cool, dry place away from direct sunlight.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cable not connected; Batteries depleted or incorrectly inserted.	Check power cable connection; Replace batteries or ensure correct polarity.
No sound	Volume too low; Headphones connected; Incorrect mode selected.	Increase volume; Disconnect headphones; Select correct mode (CD, FM, BT, AUX).
CD not playing / Skipping	CD dirty or scratched; CD inserted incorrectly; CD compartment not closed.	Clean or replace CD; Reinsert CD correctly; Close compartment firmly.
Poor FM reception	Antenna not extended; Weak signal.	Fully extend and adjust the telescopic antenna; Try moving the unit to a different location.
Bluetooth not connecting	Unit not in Bluetooth mode; Device not in pairing mode; Device too far.	Ensure unit is in BT mode; Put your device in pairing mode; Move device closer (within 10m).

8. SPECIFICATIONS

Brand	TechniSat
Model	VIOLA CD-1
Connectivity Technology	Auxiliary, Bluetooth
Speaker Type	Stereo
Speaker Power	2 x 1 Watt RMS
Power Source	Mains (230V) or Battery (6 x 1.5V R14/C)
Compatible Devices	Headphones, External Audio Devices (via AUX)
Supported Audio Format	MP3
Item Dimensions (L x W x H)	21.5 x 21.5 x 10 cm
Item Weight	828 Grams



Image: Dimensions of the VIOLA CD-1: 21.5 cm (width) x 10 cm (height) x 21.5 cm (depth).

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official TechniSat website. Keep your proof of purchase for any warranty claims.

For technical assistance or service inquiries, please contact TechniSat customer service.

© 2024 TechniSat. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question