

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [TechniSat](#) /

› [TechniSat Viola CD-1 Portable Stereo CD Player Instruction Manual](#)

TechniSat Viola CD-1

TechniSat Viola CD-1 Portable Stereo CD Player Instruction Manual

Model: Viola CD-1 (0001/2980)

INTRODUCTION

Welcome to your new TechniSat Viola CD-1. This portable stereo CD player offers versatile audio playback options including CD, FM radio, and Bluetooth streaming. Its compact design and battery operation make it suitable for both home and on-the-go use. This manual provides essential information for setting up, operating, and maintaining your device.

IMPORTANT SAFETY INFORMATION

- Read all instructions thoroughly before using the device.
- Retain this manual for future reference.
- Do not expose the unit to rain, moisture, or excessive humidity.
- Ensure that ventilation openings are not blocked to prevent overheating.
- Use only attachments and accessories specified by the manufacturer.
- Refer all servicing to qualified service personnel.

PRODUCT OVERVIEW

Familiarize yourself with the main components and controls of your Viola CD-1.



Front view of the TechniSat Viola CD-1, highlighting its main controls and central display.



Lecteur CD avec fonction MP3

Lecture de vos CD préférés en boucle

The rear panel of the Viola CD-1 features the AC power input, a 3.5mm AUX in port for external devices, and a 3.5mm headphone jack.

Key Controls and Features:

- **Power Button:** Turns the unit on or off.
- **Mode Button:** Switches between CD, FM, Bluetooth, and AUX input modes.
- **Volume +/- Buttons:** Adjusts the audio output level.
- **Play/Pause Button:** Starts or pauses playback in CD and Bluetooth modes.
- **Skip/Tune Buttons:** Navigates tracks on a CD or tunes radio stations.
- **Scan Button:** Initiates automatic station search in FM mode.
- **Album Button:** For MP3 CDs, navigates between folders.
- **Telescopic Antenna:** For FM radio reception.
- **Carry Handle:** For easy portability.

SETUP

Power Supply

The Viola CD-1 can be powered by either AC mains or batteries.

- **AC Power:** Connect the provided power cable to the AC power input on the rear of the unit and then to a standard wall outlet (230V).
- **Battery Power:** For portable use, open the battery compartment located on the bottom of the unit. Insert 6 x 1.5V C-type batteries (R14), ensuring correct polarity (+/-). Close the compartment securely.

Antenna Setup

For optimal FM radio reception, fully extend the telescopic antenna.

OPERATING INSTRUCTIONS

CD Playback

1. Open the CD compartment lid located on the top of the unit.
2. Carefully place a CD (standard audio CD or MP3 CD) onto the spindle with the label side facing up.
3. Close the CD compartment lid securely.
4. Press the **Mode** button repeatedly until "CD" appears on the display.
5. Press the **Play/Pause** button to begin playback.
6. Use the **Skip** buttons (forward/backward) to navigate between tracks.
7. If playing an MP3 CD with multiple folders, use the **Album** button to switch between folders.



Profitez de votre musique sans fil
Avec streaming audio Bluetooth

To insert a CD, lift the compartment lid as shown and place the disc with the label facing upwards.



Lecteur CD

Le lecteur CD intégré prend en charge les CD audio classiques ainsi que les formats CD-R et CD-RW. De plus, vous pouvez également lire des CD MP3.



The integrated CD player supports standard audio CDs, CD-R, CD-RW, and MP3 CDs.

FM Radio Operation

1. Fully extend the telescopic antenna for best reception.
2. Press the **Mode** button repeatedly until "FM" appears on the display.

3. Press and hold the **Scan** button to automatically search for and store available FM stations.
4. Use the **Skip** buttons (forward/backward) to select a stored station.



The Viola CD-1 features an FM radio tuner, allowing reception of various regional radio stations. Extend the telescopic antenna for best reception.

Bluetooth Audio Streaming

1. Press the **Mode** button repeatedly until "BT" appears on the display. The "BT" indicator will flash, signifying that the unit is in pairing mode.
2. On your smartphone or other Bluetooth-enabled mobile device, enable Bluetooth and search for available devices.
3. Select "TechniSat Viola CD-1" from the list of devices to initiate pairing.
4. Once successfully paired, the "BT" indicator will stop flashing, and you can stream audio wirelessly from your device to the Viola CD-1.



UKW/FM

Variété de programmes radio régionaux

Wirelessly stream music from your smartphone or tablet to the Viola CD-1 via Bluetooth.

AUX Input

1. Connect an external audio device (e.g., MP3 player, smartphone) to the **AUX In** jack on the rear of the unit using a 3.5mm audio cable.
2. Press the **Mode** button repeatedly until "AUX" appears on the display.
3. Control audio playback and volume directly from your external device.

Headphone Use

Connect headphones with a 3.5mm jack to the headphone output on the rear of the unit for private listening. When headphones are connected, sound from the speakers will be muted.

Poignée de transport pratique

La poignée de transport pratique rend le transport de la boombox encore plus confortable et plus facile.



The practical carry handle makes transporting the boombox comfortable and easy.



Poignée de transport pratique

La poignée de transport pratique rend le transport de la box encore plus confortable et facile.

Integrated stereo speakers provide clear audio with a total output of 2 x 1 Watt.

Cleaning

- Wipe the exterior of the unit with a soft, dry cloth. Do not use abrasive cleaners, solvents, or chemical sprays, as these can damage the finish.
- For cleaning the CD lens, use a specialized CD lens cleaner disc according to its instructions.

Battery Replacement

When using battery power, replace all 6 C-type batteries when the unit's performance (e.g., sound quality, volume) begins to degrade. Always replace all batteries at once with new ones of the same type.

TROUBLESHOOTING

If you encounter issues with your Viola CD-1, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Unit does not power on.	No power supply or dead batteries.	Check AC power connection or replace all batteries.
CD does not play.	CD inserted incorrectly, dirty, scratched, or unsupported format.	Ensure CD is inserted correctly (label side up). Clean the CD. Try a different CD. Ensure it's an audio CD or MP3 CD.
Poor FM radio reception.	Antenna not extended or weak signal.	Fully extend the telescopic antenna. Try repositioning the unit for better signal.
Bluetooth device cannot pair.	Unit not in pairing mode, device too far, or previously paired.	Ensure Viola CD-1 is in Bluetooth pairing mode (BT flashing). Move devices closer. On your device, forget/unpair the Viola CD-1 and try pairing again.
No sound from speakers.	Volume too low, headphones connected, or incorrect mode selected.	Increase volume. Disconnect headphones. Press the Mode button to select the correct input source.

SPECIFICATIONS

Detailed technical specifications for the TechniSat Viola CD-1.

Feature	Detail
Brand	TechniSat
Model Number	0001/2980
Color	White

Feature	Detail
Connectivity Technology	Auxiliary, Bluetooth (reception)
Special Features	AC and Battery operation, MP3 CD Player, Convenient carry handle, Bluetooth audio streaming (reception)
Compatible Devices	Headphones
Power Source	AC and Battery operation
Speaker Type	Stereo
Output Power	2 x 1 Watt RMS
Dimensions (LxWxH)	21.5 x 21.5 x 10 cm
Item Weight	828 Grams
Battery Requirement	6 x 1.5V C-type batteries (R14)

WARRANTY AND SUPPORT

Warranty Information

This product comes with a manufacturer's warranty. Please refer to the warranty card included in the product packaging for specific terms, conditions, and duration of the warranty. (Note: Specific warranty details were not available in the provided product data.)

Customer Support

For technical assistance, troubleshooting beyond this manual, or service inquiries, please visit the official TechniSat website or contact their customer support directly.

Official Website: www.technisat.com