

[Manuals.plus](#) /

> [Armitron](#) /

> Armitron Sport Men's Analog-Digital Chronograph Watch User Manual

Armitron 20/5372BLKTB

Armitron Sport Men's Analog-Digital Chronograph Watch User Manual

Model: 20/5372BLKTB

INTRODUCTION

This manual provides comprehensive instructions for the operation, maintenance, and care of your Armitron Sport Men's Analog-Digital Chronograph Resin Strap Watch, Model 20/5372BLKTB. Please read this manual thoroughly to ensure proper use and to maximize the lifespan of your timepiece.

PRODUCT OVERVIEW





Front view of the Armitron Sport Analog-Digital Chronograph Watch, showcasing its black resin case, grey top ring, and analog-digital display.





Side view of the watch, highlighting the profile of the black resin case and the function buttons.





Rear view of the watch, showing the black resin strap with its buckle closure.

Key Features:

- Black resin case with grey top ring for durability and style.
- Analog-digital display showing time, seconds, day, and date simultaneously.
- Multiple functions including chronograph, three alarms, hourly chime, military time, dual time, and backlight.
- Comfortable black resin strap with a secure buckle closure.
- Water resistant up to 330 feet (100 meters), suitable for swimming and showering.

SETUP

Initial Time Setting:

1. Digital Time Setting:

- Press the **MODE** button repeatedly until the digital time display flashes.
- Use the **SET** button to select the digit you wish to adjust (hours, minutes, seconds).
- Use the **ADJ** button to increase the selected value.
- Press **MODE** to confirm and exit setting mode.

2. Analog Time Setting:

- Pull out the crown (small knob on the side of the watch) to the first position.
- Rotate the crown to move the analog hands to the correct time.
- Push the crown back in to secure the setting.

Date Setting:

The date is typically synchronized with the digital time. Ensure the year, month, and day are correctly set in the digital mode for accurate date display.

OPERATING INSTRUCTIONS

Mode Navigation:

Press the **MODE** button (usually on the bottom left) to cycle through the different functions: Time, Chronograph (Stopwatch), Alarm 1, Alarm 2, Alarm 3, Dual Time.

Chronograph (Stopwatch) Function:

1. Navigate to the Chronograph mode using the **MODE** button.
2. Press the **ADJ** button (usually top right) to start the stopwatch.
3. Press **ADJ** again to pause.
4. Press the **SET** button (usually top left) to reset the stopwatch to zero.

Alarm Setting:

1. Navigate to the desired Alarm mode (AL1, AL2, AL3) using the **MODE** button.
2. Press and hold the **SET** button until the alarm time flashes.
3. Use the **ADJ** button to adjust the hours and minutes.
4. Press **SET** to move between hour and minute settings.
5. Press **MODE** to confirm and exit.
6. To activate/deactivate an alarm, press the **ADJ** button while in the alarm mode. An alarm icon will appear/disappear.

Backlight Function:

Press the **EL** (Electroluminescent) button (usually bottom right) to illuminate the digital display for a few seconds in low light conditions.

Dual Time Setting:

This feature allows you to track a second time zone. Navigate to Dual Time mode, then use the **SET** and **ADJ** buttons to set the desired time for the second zone.

MAINTENANCE AND CARE

- **Cleaning:** Wipe the watch regularly with a soft, damp cloth. For resin straps, mild soap and water can be used. Avoid harsh chemicals.
- **Water Resistance:** The watch is water resistant to 100M (330 feet). This means it is suitable for showering, swimming, and snorkeling. *Do not press any buttons while the watch is submerged in water.*
- **Temperature:** Avoid exposing the watch to extreme temperatures (hot or cold) for prolonged periods, as this can affect battery life and accuracy.
- **Impact:** While durable, avoid dropping the watch or subjecting it to strong impacts.
- **Battery Replacement:** When the display dims or functions become erratic, it may be time for a battery replacement. It is recommended to have this done by a qualified watch technician to ensure water resistance is maintained.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Digital display is blank or dim.	Low battery.	Replace battery.
Analog hands are not moving or are incorrect.	Crown is pulled out; battery low; hands misaligned.	Push crown in; replace battery; reset analog time.
Buttons are unresponsive.	Watch is wet; internal malfunction.	Ensure watch is dry; if problem persists, seek professional service.
Water inside the watch.	Crown not fully pushed in; seal compromised.	Immediately take to a watch repair specialist. Do not attempt to dry it yourself.

SPECIFICATIONS

- **Model Number:** 20/5372BLKTB
- **Display Type:** Analog-Digital
- **Case Material:** Resin
- **Strap Material:** Resin
- **Water Resistance:** 100 meters (330 feet)
- **Functions:** Chronograph, 3 Alarms, Hourly Chime, Military Time, Dual Time, Backlight
- **Power Source:** Battery

WARRANTY AND SUPPORT

Armitron watches are manufactured to high quality standards. For specific warranty information, please refer to the warranty card included with your purchase or visit the official Armitron website. For support, contact Armitron customer service through their official channels.

Official Armitron Website: www.armitron.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BX7FJNWR>

More documents and user manuals: <https://manuals.plus/>