

Manuals.plus /

› GIHETKUT /

› GIHETKUT 4 Burner Electric Cooktop Instruction Manual

GIHETKUT 30 inch Electric Cooktop

GIHETKUT 4 Burner Electric Cooktop Instruction Manual

Model: 30 inch Electric Cooktop

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your GIHETKUT 4 Burner Electric Cooktop. Please read these instructions thoroughly before installation and use, and retain them for future reference.

The GIHETKUT 30-inch Electric Cooktop features four radiant burners, offering 7200W total power, 9 heat levels, knob controls, a child safety lock, and a 99-minute timer. It is designed for both built-in and countertop use, requiring 220-240V hardwired electrical connection.



2. SAFETY INFORMATION

WARNING: To reduce the risk of fire, electric shock, injury to persons, or damage when using the cooktop, follow basic precautions, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The cooktop is equipped with multiple safety devices including:
 - **Over-heating Protection:** Automatically shuts off if the temperature exceeds safe limits.
 - **Hot Surface Indicator:** Illuminates when a cooking zone is hot, even after being turned off.
 - **Child Lock:** Prevents accidental operation.
 - **Auto-Shutoff:** Automatically turns off after a period of inactivity.
- Infrared heating technology ensures no high-frequency electromagnetic radiation.

GIHETKUT Electric Cooktop With 4 Burners

Meets All Your Cooking Needs



Image 2: Overview of cooktop safety features including Child Lock, Timer, 9 Power Level, Auto Switch Off, and Overheating Protection.

3. PRODUCT OVERVIEW

3.1 Components Included

The package includes the following items:

- GIHETKUT 4 Burner Electric Cooktop (220-240V, 7200W)
- Built-in 4 Burners Electric Stove Top with 9 Power Levels
- Hot Plate Electric Control by Knob
- Child Safety Lock & 99mins Timer

3.2 Cooktop Layout

The cooktop features four radiant heating zones and control knobs located on the right side. Two burners are rated at 1600W and two at 2000W, allowing for simultaneous cooking of various dishes.



Image 3: The cooktop demonstrating various cooking applications such as stew, stir-fry, deep-fry, boiling water, soup, and milk.

4. INSTALLATION

The GIHETKUT Electric Cooktop is designed for both built-in and countertop installation. It requires a 220-240V electrical supply and must be hardwired; it does not come with a plug.

4.1 Dimensions and Cutout

Ensure adequate ventilation space around the cooktop. Refer to the diagram below for precise product and cutout dimensions.

- Product Dimensions: 30.3"D x 20.47"W x 3.15"H
- Cutout Dimensions: Approximately 29.52"W x 19.68"D

4.2 Electrical Connection

The cooktop requires a dedicated 220-240V, 40A circuit. Installation must be performed by a qualified electrician in accordance with all local codes and ordinances. The wiring diagram illustrates the connection to a leakage switch of the power supply box.

Compatible With All Kinds Of Cookwares



Image 4: Detailed dimensions of the cooktop and electrical wiring diagram for hardwired installation.

Place on the Table or Embedded



Built-in Design



Countertop

Image 5: Illustration of the cooktop's versatility for both built-in and countertop placement.

5. OPERATING INSTRUCTIONS

5.1 Powering On/Off

To turn on a burner, rotate the corresponding knob clockwise to the desired heat level. To turn off, rotate the knob counter-clockwise to the '0' position.

5.2 Adjusting Heat Levels

The cooktop offers 9 heat levels for precise temperature control. Rotate the knob to select a level from 1 (low) to 9 (high). The radiant burners provide a heating effect similar to a gas stove.

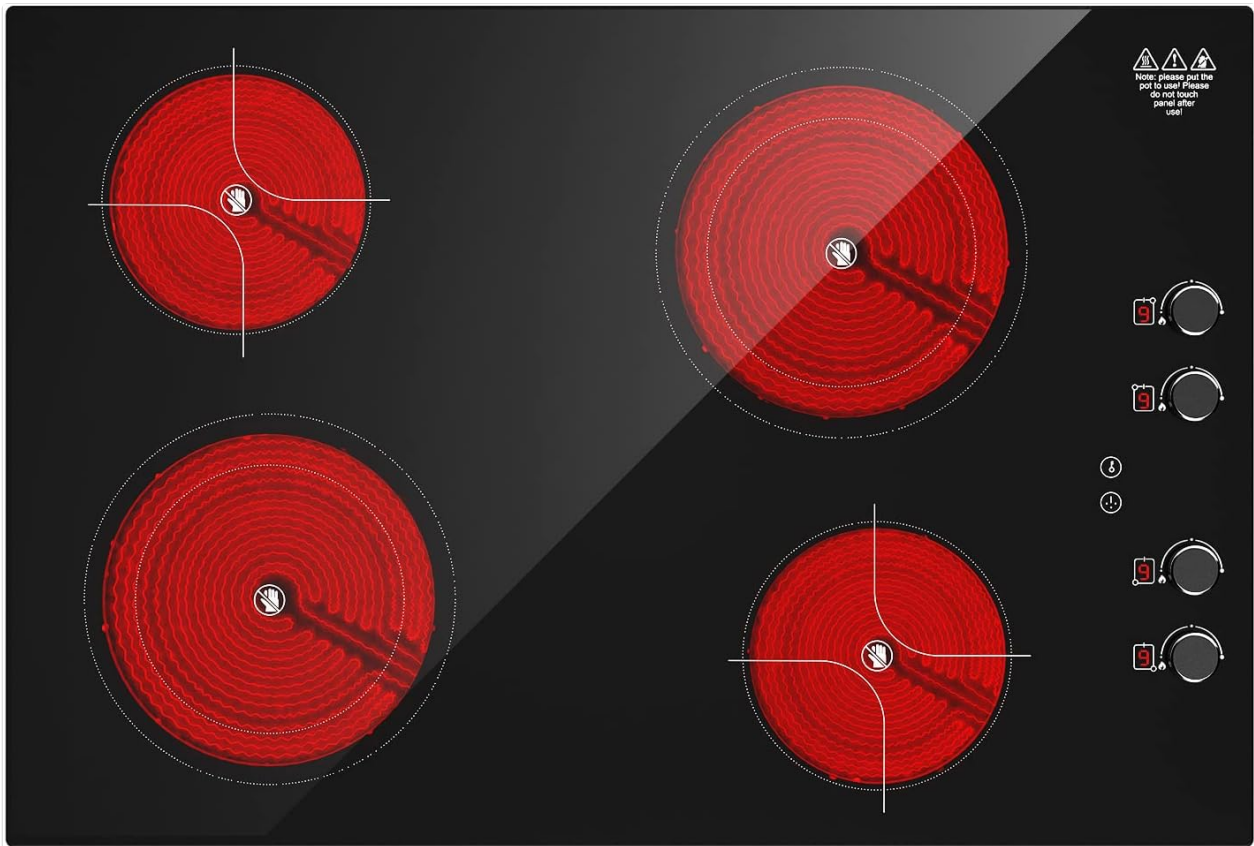


Image 6: Visual representation of the 9 heat level settings controlled by rotating knobs.

5.3 Using the Timer

The integrated timer can be set for up to 99 minutes. This feature allows for automated cooking and can be used to turn off a burner after a set duration.

Child Safety Lock



Image 7: The 99-minute timer feature for convenient cooking management.

5.4 Child Safety Lock

Activate the child safety lock to prevent accidental operation of the cooktop, ensuring safety in households with children. Refer to the control panel markings for activation and deactivation.

99 MINS TIMER

Take some time to relax



Image 8: The child safety lock feature, indicated by a lock icon on the control panel.

6. COOKWARE COMPATIBILITY

The GIHETKUT Electric Cooktop is compatible with all types of cookware. This includes, but is not limited to, iron, stainless steel, casserole dishes, aluminum, copper, glass, BBQ trays, and ceramic pots. For optimal performance, use flat-bottomed pots and pans.

220-240V Built-In Design

Hard Wired, No Plug

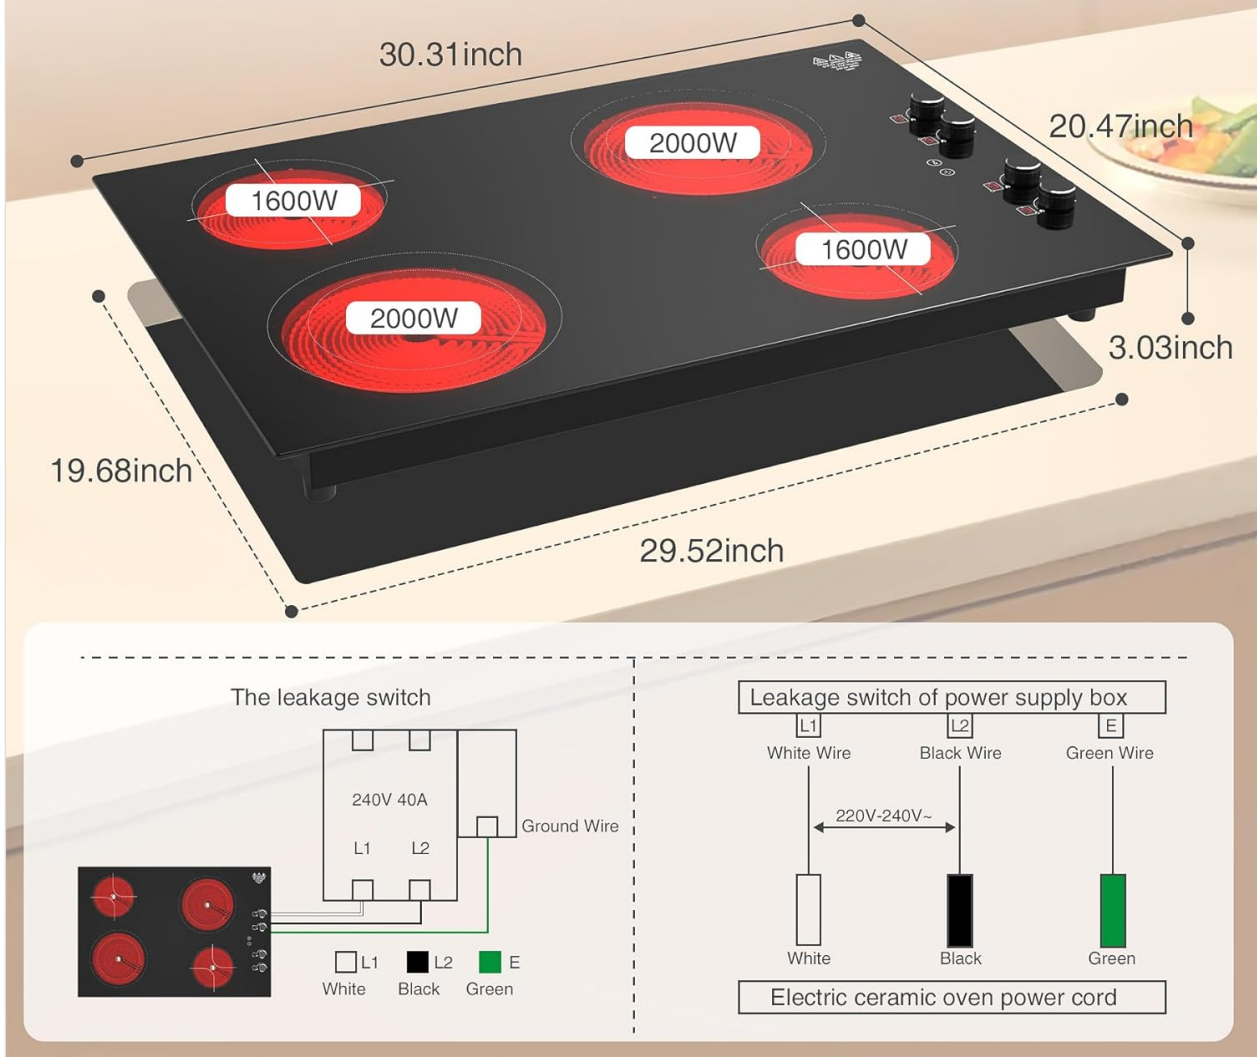


Image 9: Examples of compatible cookware types including iron, stainless steel, casserole, aluminum, glass, copper, barbecue, and ceramics.

7. MAINTENANCE AND CLEANING

Regular cleaning helps maintain the appearance and functionality of your cooktop. Ensure the cooktop is cool before cleaning.

7.1 Cleaning the Glass Ceramic Surface

- Wipe the surface with a soft cloth and mild detergent after each use.
- For stubborn stains, use a ceramic cooktop cleaner and a non-abrasive pad.
- Avoid abrasive cleaners, scouring pads, or harsh chemicals that can scratch or damage the surface.
- Do not use steam cleaners.



Image 10: Demonstrating the ease of cleaning the cooktop's glass ceramic surface with a soft cloth.

8. TROUBLESHOOTING

If you encounter issues with your GIHETKUT Electric Cooktop, refer to the following common troubleshooting steps:

- **Cooktop not turning on:** Ensure the cooktop is properly hardwired and the circuit breaker is not tripped.
- **Burner not heating:** Check that the control knob is set to a heat level above '0'. Ensure the cookware is placed correctly on the heating zone.
- **Child Lock engaged:** If controls are unresponsive, check if the child lock is active and deactivate it as per operating instructions.
- **Error codes:** If an error code appears on the display, consult the specific error code section (if available in a full manual) or contact customer support.

For issues not resolved by these steps, please contact customer service.

9. SPECIFICATIONS

Feature	Specification
Brand	GIHETKUT
Model Info	30 inch Electric Cooktop
Color	Black
Material	Glass Ceramic
Heating Elements	4 (2 x 1600W, 2 x 2000W)
Total Wattage	7200 watts
Voltage	220-240 Volts
Controls Type	Knob
Burner Type	Radiant
Product Dimensions	30.3"D x 20.47"W x 3.15"H
Item Weight	25.31 Pounds
Installation Type	Drop-In (Hardwired)
Special Features	Automatic Shut-Off, Digital Display, Safety Lock, Timer, Warm Setting
Noise Level	40 Decibels

10. WARRANTY AND SUPPORT

10.1 Manufacturer Warranty

The GIHETKUT 4 Burner Electric Cooktop comes with a **1-year manufacturer warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use.

10.2 Customer Support

If you have any questions, require technical assistance, or need to make a warranty claim, please contact GIHETKUT customer service. Refer to your purchase documentation or the official GIHETKUT website for contact details.

Our customer service team is committed to addressing your concerns and providing support.