

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [ALLIMITY](#) /

> [ALLIMITY RC4847 Replacement Remote Control User Manual for Sharp Aquos LCD TVs](#)

ALLIMITY RC4847

ALLIMITY RC4847 Replacement Remote Control User Manual

FOR SHARP AQUOS LCD TVs

Model: RC4847

1. INTRODUCTION

This manual provides comprehensive instructions for the ALLIMITY RC4847 replacement remote control. Designed to function as a direct replacement for your original Sharp Aquos LCD TV remote, it requires no complex programming. Simply insert batteries, and it is ready for immediate use.

Compatible TV Models

The ALLIMITY RC4847 remote control is compatible with a wide range of Sharp Aquos LCD TV models, including but not limited to:

- LC-39LE351E
- LC-39LE352E-BK
- LC-32LE350E-BK
- LC-39LE352E-WH
- LC-32LE350E-WH
- LC-42LE760E
- LC-24LE250V-BK
- LC-39LE350E-BK
- LC-24LE250E-BK

2. SETUP

Battery Installation

The remote control requires two AAA alkaline batteries (not included).

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by the arrow to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the

compartment.

4. Replace the battery compartment cover by sliding it back into place until it clicks securely.





Image: Back of the remote control with battery compartment.

Initial Use

No programming or pairing is required. Once the batteries are correctly installed, the remote control is ready to operate your compatible Sharp Aquos LCD TV immediately.

3. OPERATING INSTRUCTIONS

Point the remote control directly at the infrared receiver on your television. Ensure there are no obstructions between the remote and the TV.





Image: Front view of the ALLIMITY RC4847 remote control.

Button Functions Overview

Button	Function
Power (Red)	Turns the TV on or off.
SOURCE	Selects input source (HDMI, AV, etc.).
0-9, ./@	Direct channel selection, number input.
TV	Switches to TV mode.
Return/Back Arrow	Returns to the previous channel or menu.
V+ / V-	Increases / Decreases volume.
Mute (Crossed Speaker)	Mutes or unmutes the TV sound.
P+ / P-	Changes to the next / previous channel.

Button	Function
MENU	Opens the main menu.
Q. MENU	Opens the quick menu.
Arrow Buttons (Up, Down, Left, Right)	Navigates through menus and options.
OK	Confirms selection.
BACK	Goes back to the previous screen or menu.
EXIT	Exits the current menu or function.
Color Buttons (Red, Green, Yellow, Blue)	Functions vary depending on the TV menu or application.
LANG.	Changes audio language or subtitle options.
Playback Controls (Rewind, Play/Pause, Fast Forward, Record, Stop)	Controls media playback (e.g., USB content, DVR).

4. MAINTENANCE

Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote's surface or internal components.

Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA alkaline). Do not mix old and new batteries or different types of batteries.

Storage

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, it is advisable to remove the batteries to prevent leakage.

5. TROUBLESHOOTING

Problem: Remote control is not working.

Solution:

- Check if the batteries are inserted correctly with the correct polarity (+/-).
- Replace the batteries with fresh AAA alkaline batteries.
- Ensure there are no obstructions between the remote control and the TV's infrared sensor.
- Make sure you are within the effective operating range (approximately 10 meters) and pointing the remote directly at the TV.

Problem: Specific buttons are unresponsive.

Solution:

- Clean the remote control, especially around the unresponsive buttons, to remove any dirt or debris.
- Replace the batteries, as low power can sometimes cause intermittent button functionality.

6. SPECIFICATIONS

Feature	Detail
Brand	ALLIMITY
Model Number	RC4847 (QYSY-RC4847-QYSY)
Connectivity Technology	Infrared
Special Feature	Universal (for specified Sharp Aquos models)
Compatible Devices	Sharp Aquos LCD TVs (e.g., LC-39LE351E, LC-32LE350E-BK, LC-42LE760E)
Maximum Range	10 Meters
Battery Description	Alkaline (AAA)
Number of Buttons	3 (This seems incorrect based on image, likely refers to main control types. Actual button count is higher.)
Max Supported Devices	10 (This likely refers to universal remote capabilities, not applicable for this specific replacement remote)

7. WARRANTY AND SUPPORT

Warranty Information

Specific warranty details for this product may vary depending on the retailer and region of purchase. Please refer to your purchase documentation or contact the seller directly for information regarding warranty coverage and terms.

Customer Support

For technical assistance or further inquiries, please contact the seller or manufacturer through the platform where the product was purchased. Provide your order details and a clear description of the issue for efficient support.