

- Manuals.plus /
- > ALLIMITY /
- > ALLIMITY Replacement Remote Control User Manual for Sharp and Technika TVs (Various Models)

ALLIMITY PA50U5192MEKB

ALLIMITY Replacement Remote Control User Manual

For Sharp and Technika TVs (Various Models)

1. INTRODUCTION

This manual provides comprehensive instructions for the ALLIMITY Replacement Remote Control. This remote is designed to function as a direct replacement for your original remote, covering all essential functions for compatible Sharp and Technika television models. No complex programming is required for initial setup.



Image 1: The ALLIMITY Replacement Remote Control, showing its full layout and design.

2. SETUP

2.1 Battery Installation

To begin using your ALLIMITY Replacement Remote Control, you must first install the batteries.

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert two new AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover securely.

Once batteries are installed, the remote control is ready for immediate use with compatible television models. No additional programming or pairing steps are required.

3. OPERATING INSTRUCTIONS

The ALLIMITY Replacement Remote Control is designed to replicate the functionality of your original remote. Below is an overview of common buttons and their functions.





Image 2: Top-down view of the remote control, highlighting the button layout.

- **Power Button ():** Turns the TV on or off.
- **Source Button:** Selects input sources (HDMI, AV, etc.).
- **Number Buttons (0-9):** Directly select channels.
- **Mute Button ():** Mutes or unmutes the TV audio.
- **Volume Up/Down (VOL +/-):** Adjusts the volume level.
- **Channel Up/Down (CH +/-):** Changes the TV channel.
- **Home Button:** Accesses the TV's main menu or smart TV interface.
- **Navigation Pad (Up, Down, Left, Right, OK):** Navigates through menus and confirms selections.
- **Back Button:** Returns to the previous screen or menu.
- **Exit Button:** Exits the current menu or application.
- **Menu Button:** Opens the TV's settings menu.
- **Info Button:** Displays information about the current program or input.
- **Dedicated App Buttons (Netflix, Prime Video, YouTube, Play)** Provides quick access to streaming services.
- **Media Control Buttons (Play/Pause, Rewind, Fast Forward, Stop)** Controls media playback.
- **Color Buttons (Red, Green, Yellow, Blue):** Used for specific functions within certain applications or menus.

3.1 Voice Control Functionality

This remote control supports voice commands, allowing for hands-free operation of certain TV functions. Look for the dedicated voice control button, often represented by a microphone icon or a colored circle.

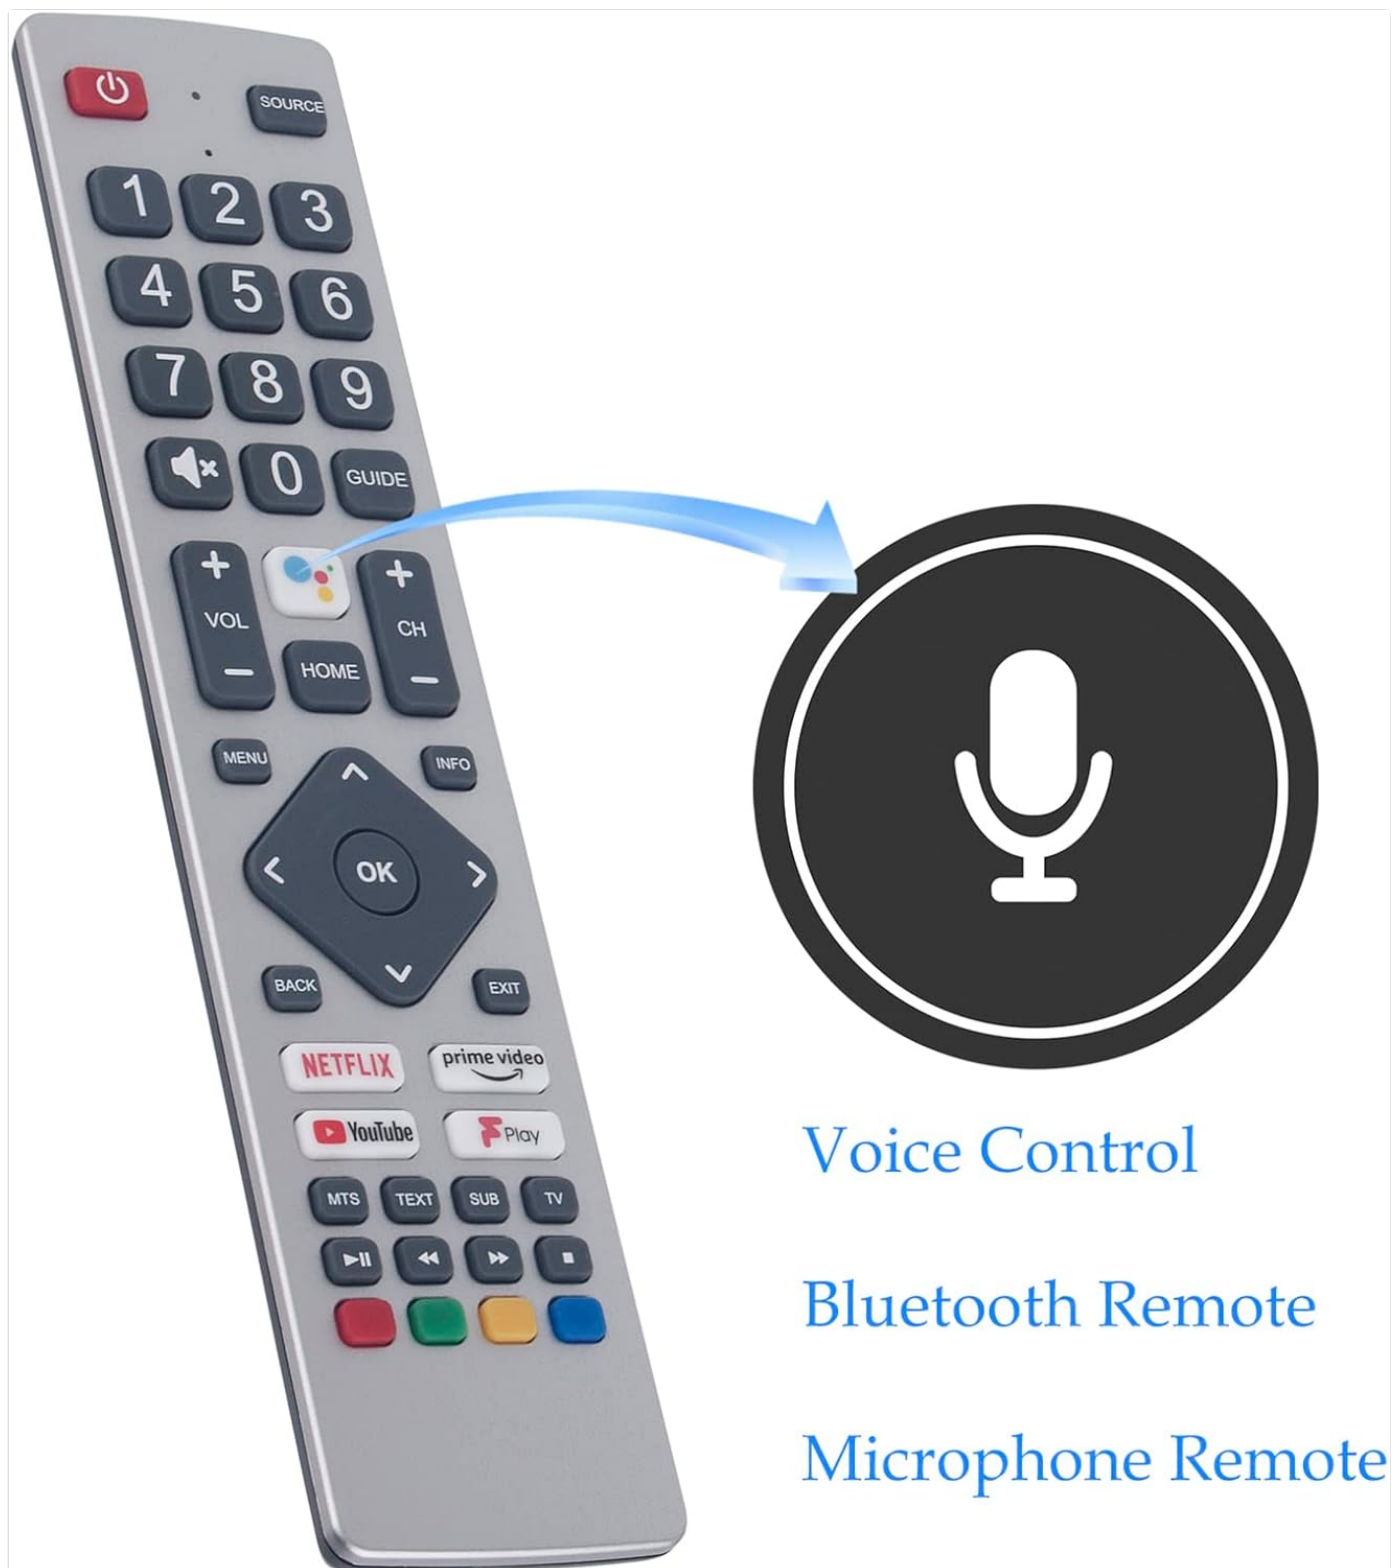


Image 3: The remote control highlighting its voice control capabilities.

To use voice control:

1. Press and hold the Voice Control button.
2. Speak your command clearly into the remote's microphone.
3. Release the button once your command is complete.

Ensure your TV's Bluetooth is enabled and the remote is properly paired for voice functionality, if required by your specific TV model.

4. MAINTENANCE

4.1 Cleaning

To maintain the remote control's appearance and functionality:

- Wipe the remote with a soft, dry cloth.
- For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner.
- Avoid using harsh chemicals or abrasive materials, as these can damage the remote's surface or internal components.

4.2 Battery Replacement

Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both batteries at the same time with new alkaline batteries of the same type (AAA). Do not mix old and new batteries, or different types of batteries.

5. TROUBLESHOOTING

If you encounter issues with your remote control, refer to the following troubleshooting steps:

- **Remote not responding:**
 - Ensure batteries are correctly installed with proper polarity.
 - Replace old batteries with new ones.
 - Check for any obstructions between the remote and the TV's infrared sensor.
 - Point the remote directly at the TV's sensor.
- **Limited range:**
 - Ensure batteries are fresh.
 - Remove any objects that might be blocking the signal path.
- **Voice control not working:**
 - Confirm that your TV supports voice control and that Bluetooth is enabled.
 - Ensure the remote is paired with your TV (if required for voice functions).
 - Speak clearly and hold the remote closer to your mouth.
- **Specific buttons not working:**
 - This remote is a replacement and may not support all advanced or unique functions of every original TV remote. Verify compatibility with basic functions first.

6. SPECIFICATIONS

Brand	ALLIMITY
Item Model Number	PA50U5192MEKB
Controller Type	Remote Control
Connectivity Technology	Voice Remote
Special Features	Universal

Maximum Range	10 Meters
Battery Description	Alkaline (AAA, not included)
Compatible Devices	Sharp Technika 40A23B-FHD, 24A23B-HD, 32A23B-HD, 50BN2KA, 50BN3KA, 50BN4KA, 50BN5KA, 50BL3EA, 55BL2EA, 55BL5EA, 65BL2EA, 65BL3EA, 65BL5EA, 65BL3KA, 65BN5KA, PA50U5192MEKB, PA32H4312LEKB, P50UAM2351U, P32RAM1071U, LC-65UK7553, LC-65UK7353E, LC-65UK7253E, LC-55UK7553E, LC-55UK7353E, LC-55UK7253E, LC-50UK7553E, LC-50UK7353E, LC-50UK7253E, LC-40UK7553E, LC-40UK7353E, LC-40UK7253E, 40BJ3KA, 40BI5KA, 40BI4KA, 40BI3KA, 40BI3IA, 40BI2KA, 40A23B-FHD, 32BI5KA, 32BI4KA, 32BI3KA, 32BI2KA, 32A23B-HD, 2T-C40BI3KE2AB, 2T-C40BI2KE2AB, 24A23B-HD, 1T-C32BI4KE2AB, 1T-C32BI3KE2AB, 1T-C32BI2KE2AB, 1T-2T-C40BI3IE2AB, and more.

7. WARRANTY AND SUPPORT

Information regarding specific warranty terms for this ALLIMITY Replacement Remote Control is not provided in the product details. For any support inquiries or issues not covered in this manual, please refer to the retailer or manufacturer's customer service channels.

Spare parts availability and software update guarantees are listed as unavailable in the product specifications.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BX8LFF46>

More documents and user manuals: <https://manuals.plus/>