

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Outsunny](#) /

› [Outsunny 2-Seater Wooden Swing Chair with Pergola: User Manual](#)

Outsunny 84A-283V00ND

Outsunny 2-Seater Wooden Swing Chair with Pergola: User Manual

Model: 84A-283V00ND

1. INTRODUCTION

Welcome to your new Outsunny 2-Seater Wooden Swing Chair with Pergola. This manual contains important information for the safe assembly, operation, and maintenance of your product. Please read it thoroughly before use and keep it for future reference.

2. SAFETY INFORMATION

General Safety Warnings:

- Read all instructions before assembly and use.
- Keep children and pets away during assembly.
- Ensure all parts are securely fastened before use. Regularly check all bolts and nuts for tightness.
- Do not exceed the maximum weight capacity of 240 kg (529 lbs). This swing chair is designed for two adults.
- Use on a flat, stable surface to prevent tipping.
- Avoid using the swing chair in strong winds or severe weather conditions.
- Do not stand on the swing seat or frame.
- Keep hands and feet clear of moving parts during operation.
- This product is made of wood. Inspect for splinters or damage regularly.
- Adult assembly required.

3. PACKAGE CONTENTS

Before assembly, ensure all components listed below are present and undamaged. If any parts are missing or damaged, do not proceed with assembly and contact customer support.

- 1 x Swing Bench
- 1 x Pergola Frame
- 1 x Instruction Manual
- Hardware Pack (screws, bolts, chains, etc.)

Note: This item is shipped in separate cartons. Delivery times may vary per carton.

4. SPECIFICATIONS

Feature	Specification
Brand	Outsunny
Model Number	84A-283V00ND
Material	Fir Wood
Overall Dimensions (Pergola)	221L x 140W x 196H cm (87"L x 55.1"W x 77.2"H)
Swing Bench Dimensions	155L x 68W x 60H cm (61"L x 26.8"W x 23.6"H)
Seat Dimensions	120W x 52D cm (47.2"W x 20.5"D)
Seat Height from Ground	47 cm (18.5")
Backrest Dimensions	120L x 52W cm (47.2"L x 20.5"W)
Armrest Width	7 cm (2.8")
Metal Chain Lengths	2 x 56 cm, 2 x 67 cm, 2 x 70 cm
Weight Capacity	240 kg (529 lbs)
Item Weight	14.5 kg (32 lbs)
Assembly Required	Yes

5. SETUP AND ASSEMBLY

Assembly of the Outsunny 2-Seater Wooden Swing Chair with Pergola requires careful attention to detail. It is recommended that two adults perform the assembly.

- 1. Unpack and Identify Parts:** Carefully unpack all components and lay them out. Compare them with the parts list in the included instruction manual to ensure everything is present.
- 2. Assemble the Pergola Frame:** Follow the step-by-step diagrams in your manual to construct the main pergola frame. Ensure all wooden beams are correctly oriented and securely fastened with the provided hardware. The frame is designed for stability with four solid legs and seven main support beams.
- 3. Assemble the Swing Bench:** Construct the swing bench according to the manual. Pay attention to the backrest and seat panel assembly.
- 4. Attach the Swing Bench to the Pergola:** Using the robust metal chains, attach the swing bench to the pergola frame. Ensure the chains are securely fastened to both the swing bench and the overhead support beams of the pergola.
- 5. Adjust Height and Angle:** The swing's height and angle can be adjusted by changing the position of the metal chains. Refer to the manual for specific instructions on how to safely modify chain length.
- 6. Final Check:** Before first use, double-check all connections, bolts, and nuts to ensure they are tight and secure. Ensure the swing moves freely without obstruction.



Figure 1: Fully assembled swing chair with pergola.

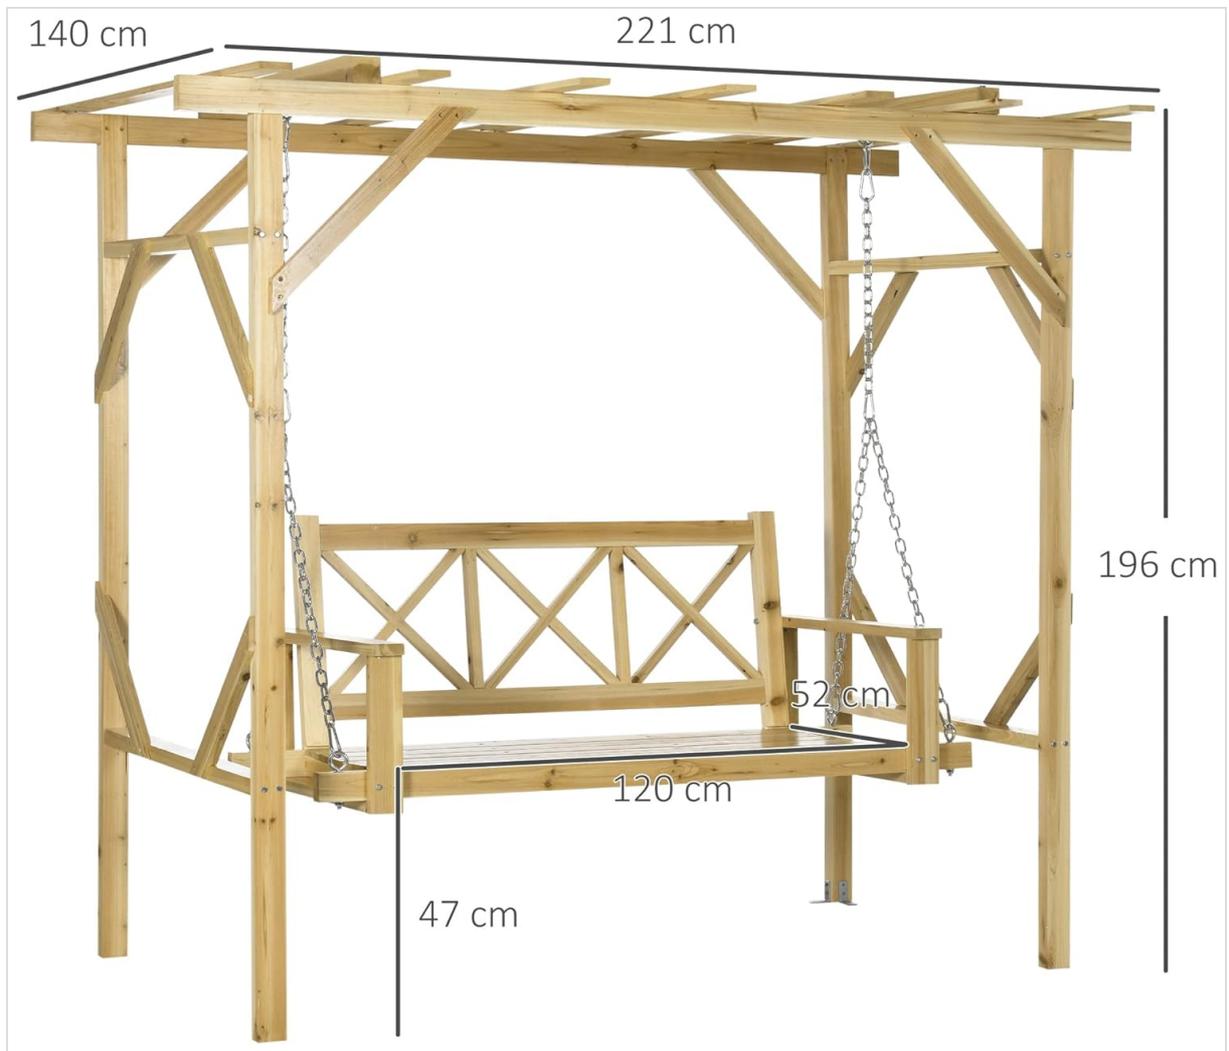


Figure 2: Product dimensions for planning placement.

STABILER STAND



Vier solide Beine stützen die Platte

Sieben stabile Hauptträger bleibe



Metallketten sorgen für starken Halt

Figure 3: Details of stable construction and support points.

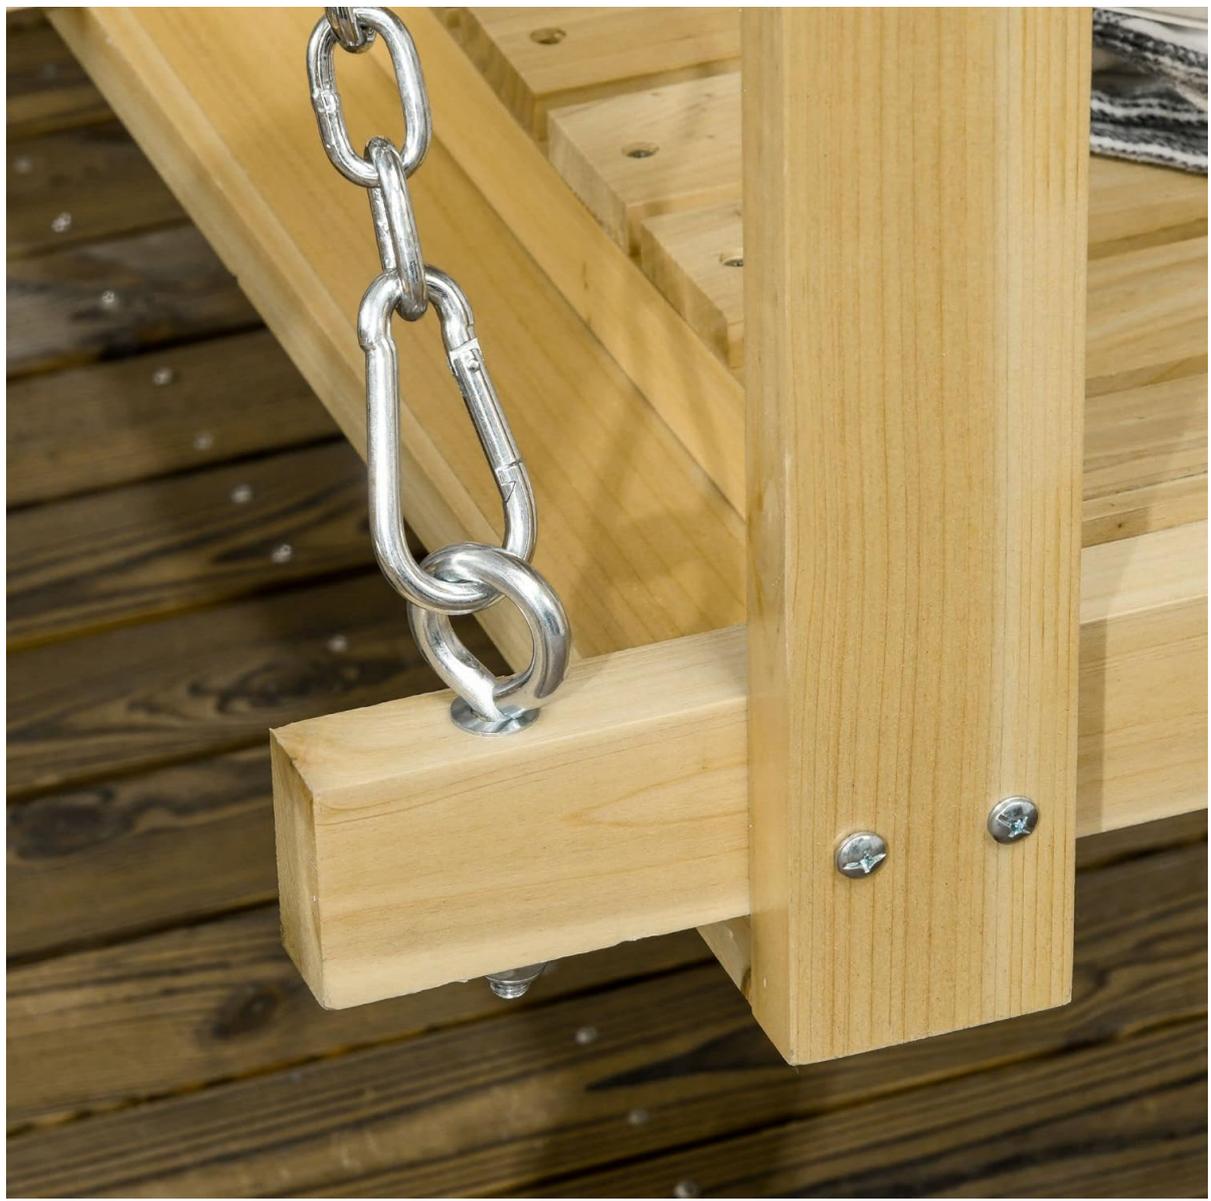


Figure 4: Secure chain attachment to the swing seat.

6. OPERATING INSTRUCTIONS

Your Outsunny swing chair is designed for comfortable outdoor relaxation for up to two adults.

- **Seating Capacity:** The swing bench comfortably accommodates two adults with a maximum weight capacity of 240 kg.
- **Pergola Functionality:** The integrated pergola can be used to support climbing plants, creating a natural, green canopy and enhancing the aesthetic appeal of your outdoor space.
- **Height Adjustment:** The swing's height and angle can be customized by adjusting the position of the metal chains. Ensure the chains are re-secured properly after any adjustments.
- **Gentle Swinging:** Use the swing with a gentle, controlled motion. Avoid excessive force or sudden movements.

WUNDERBARE KOMBINATION

Die obere Pergola spendet Schatten und bietet Platz für Kletterpflanzen

Die zweiseitige Schaukel ist perfekt, um mit einem Freund in der Sonne zu entspannen

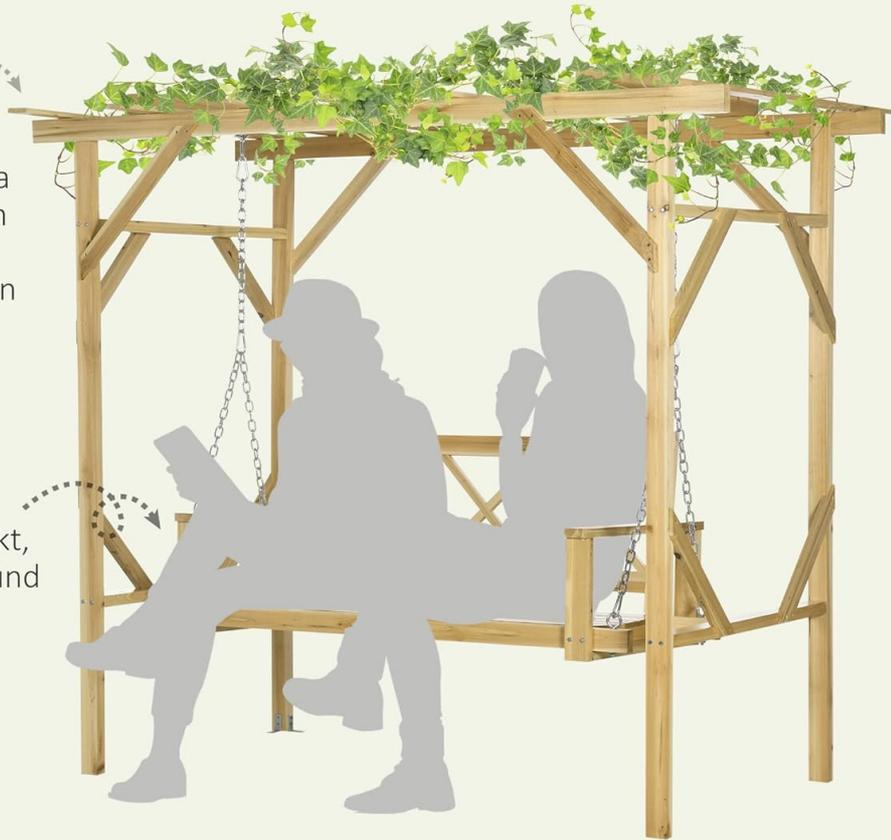


Figure 5: Swing chair in use, demonstrating seating and pergola features.

HÖHENVERSTELLBAR

Sie können den Winkel und die Höhe einstellen, indem Sie die Position der Ketten ändern

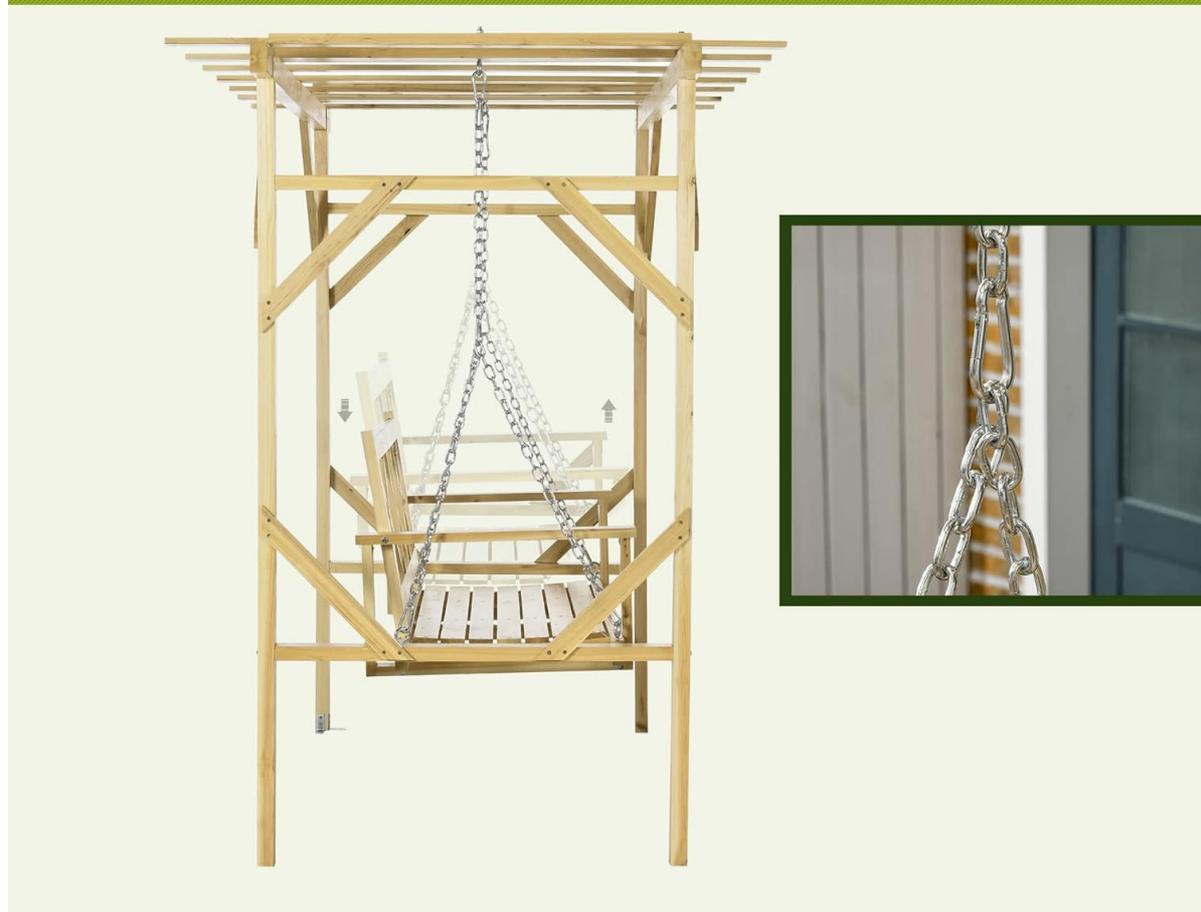


Figure 6: Mechanism for adjusting swing height and angle.

7. MAINTENANCE

Regular maintenance will extend the life and preserve the appearance of your Outsunny swing chair.

- **Cleaning:** Clean the wooden surfaces regularly with a soft cloth and mild soap solution. Rinse thoroughly and dry completely. Avoid harsh chemicals or abrasive cleaners.
- **Wood Protection:** The swing chair is made of solid wood with a protective coating. Periodically inspect the wood for signs of wear or damage to the coating. Reapply a suitable outdoor wood sealant or paint as needed to protect against weather elements.
- **Hardware Check:** Annually, or more frequently if used often, inspect all bolts, nuts, and chain connections for tightness. Tighten any loose hardware to ensure stability and safety.
- **Winter Storage:** During winter months or periods of prolonged inclement weather, it is recommended to cover the swing chair or store it indoors to protect it from extreme conditions.
- **Pergola Plants:** If using climbing plants, ensure they do not excessively weigh down the pergola structure or obstruct the swing's movement.



Figure 7: Inspecting the leg base for stability and wear.

8. TROUBLESHOOTING

This section addresses common issues you might encounter with your swing chair.

- **Squeaking Noise:** If the swing makes squeaking noises, check the chain connections and pivot points. Apply a silicone-based lubricant to the moving parts if necessary.
- **Instability:** Ensure the swing chair is placed on a level surface. Re-check all assembly bolts and nuts for tightness. If the ground is uneven, consider using shims under the legs for stability.
- **Wood Discoloration/Damage:** Exposure to sun and rain can cause wood to fade or show signs of wear. Regular application of a wood sealant or stain can help prevent this. For minor damage, light sanding and re-sealing may be sufficient.
- **Difficulty Adjusting Height:** Ensure the chains are free of kinks or obstructions. Follow the manual's instructions carefully for chain adjustment. Do not force adjustments.

9. WARRANTY AND SUPPORT

For warranty information or if you require assistance with your Outsunny 2-Seater Wooden Swing Chair with Pergola, please contact the retailer or manufacturer directly. Keep your purchase receipt as proof of purchase.

Manufacturer: MH Handel GmbH

