

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [NEWISION](#) /

› [NEWISION K10 10 Inch Kids Tablet User Manual](#)

NEWISION K10

NEWISION K10 10 Inch Kids Tablet User Manual

Model: K10

INTRODUCTION

Thank you for choosing the NEWISION K10 10 Inch Kids Tablet. This manual provides essential information for setting up, operating, and maintaining your tablet. Please read it thoroughly before use and retain it for future reference.

Safety Information

- Do not expose the tablet to extreme temperatures, direct sunlight, or moisture.
- Avoid dropping or subjecting the tablet to strong impacts.
- Use only the provided charging cable and adapter.
- Supervise children during tablet usage, especially when setting up parental controls.
- Keep the tablet away from small children to prevent choking hazards from small parts.

PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x NEWISION K10 10 Inch Kids Tablet (with pre-installed protective case)
- 1 x Quick Instruction Guide
- 1 x Charging Cable (Type-C)



Image: The NEWISION K10 Kids Tablet in its green protective case, showing the front screen with a colorful wallpaper and the back with the camera and stand.

PRODUCT OVERVIEW

Familiarize yourself with the tablet's physical features and ports.

Store.

4. Complete any remaining setup steps as guided by the tablet.

4. Inserting a Micro SD Card (Optional)

The tablet supports Micro SD cards up to 512GB for expanded storage. Locate the Micro SD card slot on the side of the tablet. Gently insert the Micro SD card with the gold contacts facing down until it clicks into place.

OPERATING THE TABLET

Basic Navigation

- **Tap:** Select an item or open an app.
- **Swipe:** Move between screens or scroll through content.
- **Pinch:** Zoom in or out on images and web pages.
- **Press and Hold:** Access contextual menus or move icons.

Parental Control Setup

The NEWISION K10 tablet includes pre-installed parental control features to manage content and screen time for children. This is a crucial feature for a kids' tablet.



Image: A visual representation of the parental control interface, showing options for managing content, applications, websites, media, accounts, time limits, and statistics.

1. Access the pre-installed parental control application.
2. Set up a password or PIN to secure parental settings.
3. **Content Filtering:** Block access to inappropriate websites and applications.
4. **Time Limits:** Set daily usage limits or specific schedules for tablet use.
5. **App Management:** Select which applications your child can access.
6. **Educational Goals:** Configure settings to encourage educational content.

Downloading Applications

The tablet runs on Android 10 and has access to the Google Play Store. Ensure you are connected to Wi-Fi and logged into a Google Account.

1. Tap the "Play Store" icon on the home screen or app drawer.
2. Search for desired applications (e.g., educational games, streaming services).
3. Tap "Install" to download and install the application.

Using the Camera

The tablet features dual cameras (front and rear).

1. Open the "Camera" application.
2. Tap the camera icon to switch between front and rear cameras.
3. Tap the shutter button to take a photo or start/stop video recording.

Eye Protection Mode

The K10 tablet features an eye protection mode to reduce blue light emission and enhance reading comfort.

- Access this feature through the tablet's settings menu, typically under "Display" or "Eye Comfort".
- Activate "Eye Comfort" or "Reading Mode" with a single tap to reduce potential eye strain.

MAINTENANCE

Cleaning the Tablet

- Use a soft, lint-free cloth to clean the screen and body.
- For stubborn smudges, slightly dampen the cloth with water or a screen cleaner.
- Avoid using harsh chemicals or abrasive materials.

Battery Care

- To prolong battery life, avoid fully discharging the tablet frequently.
- Charge the tablet regularly, but do not leave it plugged in for extended periods after it's fully charged.
- Store the tablet in a cool, dry place when not in use for long durations.

Software Updates

Periodically check for system updates to ensure optimal performance and security. Go to **Settings > System > System Update** to check for and install available updates.

TROUBLESHOOTING

Problem	Possible Solution
Tablet does not power on.	Ensure the tablet is charged. Connect it to the charger for at least 30 minutes, then try powering on again.

Problem	Possible Solution
Cannot connect to Wi-Fi.	<ul style="list-style-type: none"> • Check if Wi-Fi is enabled in Settings. • Verify the Wi-Fi password. • Restart the tablet and your Wi-Fi router. • Try connecting to a different Wi-Fi network if available.
Tablet is running slow.	<ul style="list-style-type: none"> • Close unnecessary background applications. • Clear cache for frequently used apps. • Free up storage space by deleting unused files or apps. • Restart the tablet.
Parental controls are not working as expected.	<ul style="list-style-type: none"> • Review the parental control settings within the dedicated application. • Ensure the correct profiles and restrictions are applied. • Check for any conflicting settings or updates to the parental control app.
Screen is unresponsive.	Perform a forced restart by holding the Power On/Off button for approximately 10-15 seconds until the tablet restarts.

SPECIFICATIONS

Detailed technical specifications for the NEWISION K10 10 Inch Kids Tablet.

Feature	Detail
Brand	NEWISION
Model Name	K10
Screen Size	10 Inches
Screen Resolution	1280 x 800 pixels (IPS HD)
Operating System	Android 10
Processor	1.3 GHz Quad-Core (Unisoc)
RAM	2 GB
Internal Storage	32 GB
Expandable Storage	Up to 512 GB (Micro SD Card)
Wireless Connectivity	Wi-Fi (802.11n), Bluetooth
Battery Capacity	6000 mAh
Average Battery Life	6-12 Hours (depending on usage)

Feature	Detail
Cameras	Dual Camera (Rear: 8 MP)
Dimensions (LxWxH)	13.7 x 7.8 x 1.8 inches
Item Weight	2.23 pounds
Color	Green



Image: A visual summary of the tablet's key features, including Kids Mode, Eye Protection, Parental Control, Google Play, Wi-Fi connectivity, 1280*800 IPS display, 10-inch screen, and 32GB storage.

WARRANTY AND SUPPORT

NEWISION products are designed for reliability and performance. For warranty information, please refer to the warranty card included in your product packaging or contact NEWISION customer support.

If you encounter any issues or have questions regarding your NEWISION K10 tablet, please contact our customer support team through the retailer's platform or the official NEWISION website for assistance.

Online Support: Visit the NEWISION Store on Amazon: [NEWISION Store](#)