

[Manuals.plus](#) /

› [Potaroma](#) /

› Potaroma 3-in-1 Interactive Cat Toy User Manual

Potaroma Potaroma-A15-MT-boxi-su

Potaroma 3-in-1 Interactive Cat Toy User Manual

Model: Potaroma-A15-MT-boxi-su

1. PRODUCT OVERVIEW

The Potaroma 3-in-1 Interactive Cat Toy is designed to provide engaging and stimulating play for cats of all ages. This automated toy combines a rotating butterfly, a removable cover, and an enticing feather wand to create a hide-and-seek experience that mimics natural prey movements.



Image: The Potaroma 3-in-1 Interactive Cat Toy in action, showing a cat interacting with the feather wand and another with the fluttering butterfly. The toy features a circular mat with a central unit.

Key features include:

- **3-in-1 Play Modes:** Hide-and-seek feather wand, fluttering butterfly, and combined play.
- **Advanced Electronic Irregular Motion:** Mimics real-life prey to stimulate hunting instincts.
- **Touch Activation & Smart Standby:** Automatically activates when touched and enters standby mode when not in use to conserve battery.
- **Rechargeable Battery:** Built-in large capacity battery for extended playtime.
- **Durable Design:** Constructed with high-quality materials to withstand aggressive play.

2. SAFETY INFORMATION

Please read and follow these safety guidelines to ensure the safe operation of your Potaroma Interactive Cat Toy and the well-being of your pet.

- This product is intended for pet use only. Keep out of reach of children.
- Inspect the toy regularly for damage. Discontinue use if any parts are broken or detached to prevent choking hazards.
- Ensure the toy is placed on a stable, flat surface during use.

- Do not immerse the main unit in water or expose it to excessive moisture.
- Use only the provided USB charging cable. Do not use damaged cables or chargers.
- Supervise your pet during play, especially when first introducing the toy.
- Remove all packaging materials before giving the toy to your pet.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- 1 x Potaroma 3-in-1 Interactive Cat Toy Main Unit (with cover)
- 1 x Fluttering Butterfly Attachment
- 1 x Feather Wand Attachment
- 1 x USB Charging Cable
- User Manual (this document)



Image: Three butterfly attachments, typically used as refills or replacements.



Image: Various feather and plush toy attachments, indicating different options for the wand.

4. SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Charge the Toy:** Before first use, fully charge the toy. Connect the provided USB charging cable to the charging port on the main unit and plug the other end into a USB power adapter (not included) or a computer USB port. The indicator light will show charging status (e.g., red for charging, green for fully charged).



Image: Close-up of the USB charging port on the side of the main toy unit with a cable inserted.

3. **Attach Butterfly:** Insert the wire of the fluttering butterfly attachment into the designated hole on the top of the main

unit. Ensure it is securely seated.

4. **Attach Feather Wand:** The feather wand is typically pre-installed or can be easily attached to the rotating mechanism under the cover.
5. **Place the Cover:** Position the circular cover over the main unit, ensuring it aligns correctly and allows the feather wand to move freely underneath.

5. OPERATING INSTRUCTIONS

The Potaroma 3-in-1 Interactive Cat Toy offers multiple modes to keep your cat engaged.

1. **Power On/Off:** Press and hold the power button (usually located on the main unit) for a few seconds to turn the toy on or off.
2. **Mode Selection:** Short press the power button to cycle through different play modes.
 - **Mode 1:** Feather wand moves erratically under the cover (Hide-and-Seek).
 - **Mode 2:** Butterfly flutters and spins on top.
 - **Mode 3:** Both feather wand and butterfly operate simultaneously.
 - **Mode 4:** Feather wand and butterfly alternate operation.

3in1 Hide-and-Seek Cat Toy

Get together 3 cat's irresistible elements

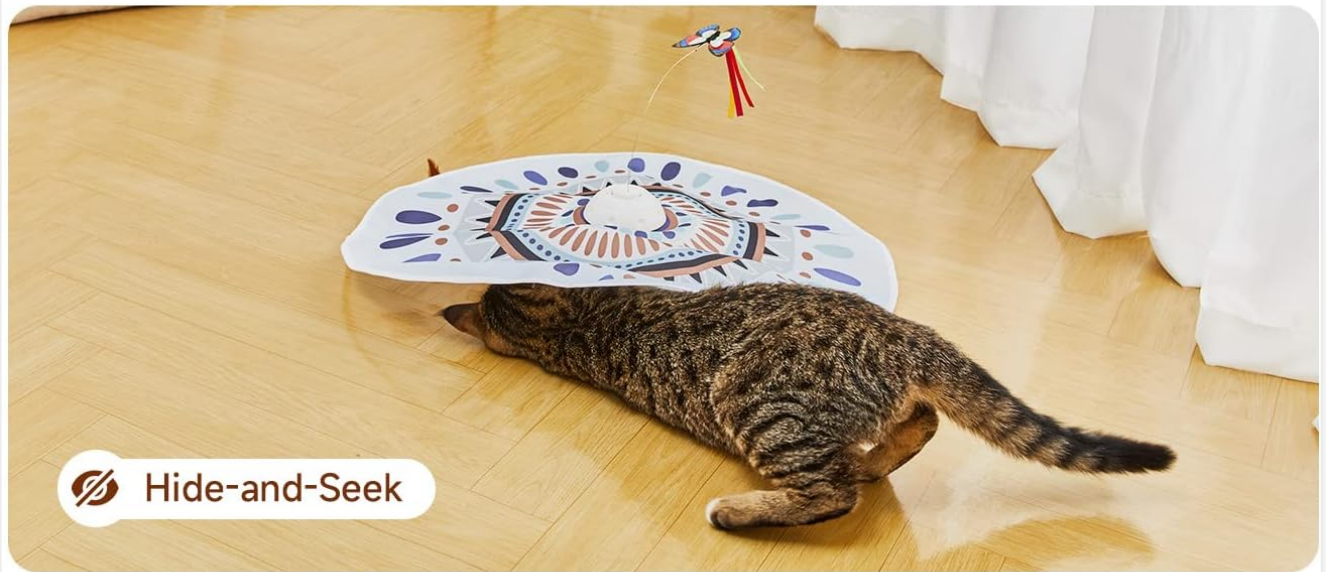


Image: A visual representation of the three main play modes: Hide-and-Seek with the feather, Fluttering Butterfly, and Chasing Feather (exposed).

3. **Speed Adjustment:** Some models may offer speed settings. Refer to the specific button layout on your device for speed control.
4. **Touch Activation & Smart Standby:** The toy features a smart sensor. It will activate when a cat touches it and automatically enter standby mode after a period of inactivity to save battery.

Touch Activation, Smart Standby

Auto standby when left alone, saves power and avoids too much play



Super Large Capacity
USB Chargeable Battery



Image: A cat's paw touching the toy, illustrating the touch activation feature. The image also shows the battery indicator.

5. **Removing the Cover for Direct Play:** For a more direct chasing experience, the circular cover can be removed to fully expose the rotating feather wand.

Chasing Feather

Remove the cover to reveal the prey, the cat will chase and play



Image: A cat lying down and playing with the feather wand, which is fully exposed without the cover.

6. MAINTENANCE

- **Cleaning:** Wipe the main unit and cover with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.
- **Attachment Replacement:** Over time, the butterfly and feather wand attachments may wear out or become damaged. Replacement attachments can be purchased separately. To replace, gently pull out the old attachment and insert the new one.
- **Storage:** When not in use for extended periods, ensure the toy is fully charged and stored in a cool, dry place.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Toy does not turn on.	Battery is depleted.	Charge the toy using the provided USB cable.

Problem	Possible Cause	Solution
Attachments (feather/butterfly) are not moving.	Attachment is not properly installed or is damaged. Obstruction.	Ensure attachments are securely inserted. Check for any obstructions. Replace damaged attachments.
Toy stops unexpectedly during play.	Battery low. Smart standby activated.	Recharge the toy. Touch the toy to reactivate it from standby.
Toy makes unusual noises.	Internal mechanism issue or obstruction.	Turn off the toy and check for any visible obstructions. If the issue persists, contact customer support.

8. SPECIFICATIONS

Feature	Detail
Model Number	Potaroma-A15-MT-boxi-su
Brand	Potaroma
Dimensions (LxWxH)	6.65 x 6.73 x 3.89 inches
Item Weight	1.28 pounds (0.58 Kilograms)
Material	Polyethylene
Battery	Built-in rechargeable battery (USB chargeable). <i>Note: Product specifications also mention "1 AA batteries required (included)", but the product features indicate a built-in rechargeable battery.</i>
Target Audience	Cats, house-cats (Kittens to Adult Cats)
Style	Minimalistic Bohemian

9. WARRANTY AND SUPPORT

Potaroma products are designed for quality and durability. For warranty information, product support, or to purchase replacement parts, please visit the official Potaroma website or contact their customer service directly. You can also visit the [Potaroma Store on Amazon](#) for more information and product offerings.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How can I replace the chasing attachment wand for the Potaroma 3-in-1 Interactive Cat Toy (Model A15-MT-boxi-su) if the plastic end ring has broken off?

To replace the chasing attachment wand on your Potaroma 3-in-1 Interactive Cat Toy (Model A15-MT-boxi-su), follow these steps based on the manual's maintenance guidelines: Identify the Part: The internal wand is referred to as the...

[Read full answer](#)