

[Manuals.plus](#) /

> [Melitta](#) /

> Melitta AromaFresh X 1030-06 Drip Coffee Maker with Integrated Grinder User Manual

Melitta 1030-06

Melitta AromaFresh X 1030-06 Drip Coffee Maker with Integrated Grinder User Manual

Model: 1030-06

1. INTRODUCTION

Welcome to the Melitta AromaFresh X 1030-06 user manual. This document provides comprehensive instructions for the safe and efficient operation, maintenance, and troubleshooting of your new drip coffee maker with an integrated grinder. Please read this manual thoroughly before first use and keep it for future reference.

Important Safety Instructions

- Always ensure the appliance is unplugged before cleaning or maintenance.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Keep out of reach of children.
- Use only with roasted coffee beans or pre-ground coffee. Do not use instant coffee or other substances in the grinder.
- Ensure the water tank is filled only with fresh, cold water.
- Do not operate the appliance if the power cord or plug is damaged.

2. SETUP

Before first use, unpack all components and ensure they are intact. Clean the water tank, coffee pot, and filter holder with warm soapy water, then rinse thoroughly.

Initial Assembly

1. Place the coffee maker on a stable, flat surface.
2. Insert the glass carafe onto the warming plate.
3. Place the filter holder into its designated slot.
4. Ensure the water tank is securely in place.

5. Plug the power cord into a suitable electrical outlet.





Image: The Melitta AromaFresh X coffee maker fully assembled, showing the main unit, glass carafe, and water tank.

3. OPERATING INSTRUCTIONS

Filling the Water Tank

The transparent water tank features clear markings for easy reading and filling. Fill the tank with fresh, cold water up to the desired number of cups (max 1.25 liters).



Image: A hand pouring water into the transparent water tank of the coffee maker, illustrating the filling process.

Adding Coffee Beans or Ground Coffee

Your AromaFresh X features an integrated ceramic grinder for fresh coffee beans. It also allows for the use of pre-ground

coffee.

- **For Coffee Beans:** Open the lid of the bean container and pour roasted coffee beans into the grinder. The ceramic grinder offers 11 variable grinding degrees from fine to coarse. Adjust the grinding degree using the dial on top of the grinder.
- **For Pre-Ground Coffee:** The grinder can be deactivated. Place a paper filter (e.g., Melitta 1x4) into the filter holder. Add your desired amount of pre-ground coffee into the filter.



Image: A hand adding pre-ground coffee into the filter basket of the Melitta AromaFresh X, demonstrating the option to use ground coffee.





Image: A close-up view of coffee beans inside the integrated grinder of the Melitta AromaFresh X, showing the bean reservoir.

Brewing Coffee

The integrated LC display provides intuitive control over all functions.

1. Select the desired coffee intensity (3 levels: mild, medium, strong) using the control panel.
2. Choose the number of cups you wish to brew.
3. Press the start button to begin the brewing process.



Image: A close-up of the Melitta AromaFresh X control panel and LC display, showing the time and cup settings, and various control buttons.

Using the 24-Hour Timer

Program the coffee maker to automatically start brewing at a set time, allowing you to wake up to the aroma of freshly ground coffee.

1. Press the timer button on the control panel.
2. Set the desired start time using the hour and minute buttons.
3. Confirm the setting. The machine will automatically start brewing at the programmed time.



Image: A finger pressing the timer button on the Melitta AromaFresh X control panel, demonstrating the timer setting function.

Keep Warm Function

After brewing, the coffee maker automatically keeps the coffee warm for a set period (default 40 minutes), which can be adjusted in the settings.

4. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your coffee maker.

Daily Cleaning

- Unplug the appliance and allow it to cool down.
- Remove the filter holder and glass carafe. These parts are dishwasher safe.
- Wipe the exterior of the appliance with a damp cloth.
- The grinding degree regulator can be disassembled for easy cleaning.

Descaling

The coffee maker features a descaling indicator. Regular descaling is crucial, especially in areas with hard water, to prevent mineral buildup and maintain brewing quality.

- Use a descaling solution specifically designed for coffee makers (e.g., Melitta descaler).
- Follow the instructions provided with the descaling solution.
- Run several cycles with clean water after descaling to rinse thoroughly.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Coffee is too weak.	Incorrect coffee-to-water ratio, grind too coarse, low intensity setting.	Increase coffee amount, select finer grind, choose higher intensity setting.
Coffee is too strong.	Too much coffee, grind too fine, high intensity setting.	Decrease coffee amount, select coarser grind, choose lower intensity setting.
Water does not flow.	Water tank empty, appliance clogged (needs descaling).	Fill water tank, perform descaling procedure.
Grinder not working.	Bean container empty, grinder clogged, pre-ground mode selected.	Fill bean container, clean grinder, ensure bean mode is selected.
Machine leaks.	Components not properly assembled, crack in carafe/tank.	Check assembly of filter holder and carafe. Inspect for damage. Contact support if damaged.

6. SPECIFICATIONS

Feature	Detail
Brand	Melitta
Model Number	1030-06
Color	Matte Black
Dimensions (L x W x H)	29 x 34.3 x 51 cm (11.4 x 13.5 x 20.1 inches)
Capacity	1.25 Liters (10 cups)
Power	1080 Watts
Material	Plastic
Special Features	24-hour Timer, Integrated Coffee Grinder, Glass Carafe, Programmable
Automatic Shut-off	Yes
Item Weight	3.75 Kilograms (8.27 lbs)
Filter Type	Paper

7. WARRANTY AND SUPPORT

Melitta products are manufactured with high quality standards. This product comes with a manufacturer's warranty. For specific warranty details and duration, please refer to the warranty card included in your product packaging or visit the official Melitta website.

Spare Parts Availability: 3 Years (as per product specifications).

Customer Support

If you encounter any issues not covered in the troubleshooting section or require further assistance, please contact Melitta customer support. Contact information can typically be found on the official Melitta website or on the product packaging.

For online support and FAQs, visit: www.melitta.com

