

[Manuals.plus](#) /

› [FSSQBFLC](#) /

› FSSQBFLC Astronaut Galaxy Projector (Model HR-F2) Instruction Manual

FSSQBFLC HR-F2

FSSQBFLC Astronaut Galaxy Projector (Model HR-F2) Instruction Manual

1. PRODUCT OVERVIEW

The FSSQBFLC Astronaut Galaxy Projector (Model HR-F2) is designed to project stunning nebula effects and green stars onto walls or ceilings, creating a relaxing and immersive atmosphere. It features multiple nebula colors, adjustable brightness, a timer function, and a remote control for convenient operation.

Included Components:

- Astronaut Galaxy Projector (HR-F2)
- Remote Control
- Power Cord (USB)
- Instruction Manual



Figure 1: FSSQBFLC Astronaut Galaxy Projector (Model HR-F2)

2. SAFETY INFORMATION

- **Indoor Use Only:** This product is designed for indoor use.
- **Power Source:** Use only the provided power cord and a compatible power adapter (not included) with the specified voltage (230V).
- **Avoid Direct Eye Exposure:** Do not look directly into the projector's light source, especially the laser, as it may cause eye damage.
- **Keep Away from Water:** Despite some specifications indicating water resistance, this is an electronic device. To prevent electric shock or damage, keep the projector away from water, moisture, and high humidity environments.
- **Ventilation:** Ensure proper ventilation around the projector. Do not cover ventilation openings.
- **Children:** This product is not a toy. Adult supervision is recommended when used by children.
- **Cleaning:** Disconnect power before cleaning. Use a soft, dry cloth. Do not use liquid cleaners.

3. SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Placement:** Place the projector on a stable, flat surface. Ensure the projection area (wall or ceiling) is clear. The astronaut's head can be rotated 360° to adjust the projection angle.
3. **Connect Power:** Insert the USB end of the power cord into the projector's power port and the other end into a compatible USB power adapter (e.g., 5V/1A or 5V/2A, not included) or a USB port on a computer/power bank.

4. OPERATING INSTRUCTIONS

4.1 Powering On/Off

Press the **ON/OFF** button on the back of the projector or on the remote control to turn the device on or off.

4.2 Remote Control Functions

The remote control provides full functionality for adjusting the projector's settings. Ensure the remote control has working batteries (not included) and is pointed towards the projector.



Figure 2: Remote Control Layout and Functions

- **ON/OFF:** Power on/off the projector.
- **Timer:** Set auto-off timer for 60 or 120 minutes.
- **B+/B-:** Adjust Nebula brightness (increase/decrease).
- **S+/S-:** Adjust Nebula change speed (increase/decrease).
- **NEBULA:** Cycle through different Nebula colors or modes.
- **LA-/LA+:** Adjust Star breathing rate (speed of fading in/out) and Star brightness.
- **LA-MODE:** Switch between different Star modes (e.g., static, breathing).
- **LA ON/OFF:** Turn the laser stars on or off.
- **RESET:** Reset all settings to default.

4.3 Nebula and Star Effects

The projector offers up to 8 stunning nebula effects and green stars. These can be used simultaneously or independently.

- Use the **NEBULA** button to cycle through various nebula colors and patterns.
- Use the **LA ON/OFF** button to activate or deactivate the green stars.
- Adjust the brightness of the nebula using **B+ / B-**.
- Adjust the speed of the nebula changes using **S+ / S-**.
- Adjust the brightness and breathing rate of the stars using **LA+ / LA-**.



Figure 3: Various Nebula Effects

4.4 Timer Function

The projector includes a timer function to automatically turn off after a set period.

- Press the **Timer** button on the remote control to select either 60 minutes or 120 minutes.
- The projector will automatically power off once the selected time has elapsed.



Figure 4: Auto-Off Timer Function

5. MAINTENANCE

- **Cleaning:** Ensure the projector is powered off and unplugged before cleaning. Use a soft, dry, lint-free cloth to wipe the exterior. Do not use abrasive cleaners, solvents, or spray directly onto the device.
- **Lens Care:** Gently clean the projection lens with a soft lens cloth if dust or smudges affect projection quality.
- **Storage:** When not in use for extended periods, store the projector in a cool, dry place, away from direct sunlight and extreme temperatures.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Projector does not turn on.	No power connection or faulty power source.	Ensure the power cord is securely connected. Try a different USB power adapter or USB port.
Remote control not working.	Dead batteries or obstruction.	Replace remote control batteries. Ensure there is no obstruction between the remote and the projector. Point the remote directly at the projector.
No nebula or stars projected.	Nebula/stars turned off or brightness too low.	Press the NEBULA or LA ON/OFF buttons on the remote. Increase brightness using B+ or LA+ .
Projection is blurry.	Lens is dirty.	Gently clean the projection lens with a soft, dry lens cloth.

7. SPECIFICATIONS

Model Number	HR-F2
Brand	FSSQBFLC
Product Dimensions	3.38"D x 2.99"W x 4.92"H (8.59 cm D x 7.59 cm W x 12.5 cm H)
Item Weight	8.4 ounces (238 grams)
Light Source Type	LED
Number of Light Sources	8
Light Color	Seven-color (Nebula)
Power Source	Wired power supply (USB)
Voltage	230 Volts
Control Method	Remote
Material	Plastic
Indoor/Outdoor Usage	Indoor
Water Resistance Level	Waterproof (Note: Designed for indoor use, avoid direct contact with liquids.)
Special Feature	Color Changing, Timer, Remote Control

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or contact the retailer directly. Keep your purchase receipt for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question