

[Manuals.plus](#) /

› [PHILIPS](#) /

› Philips Portable CD Player Boombox Bluetooth with Cassette Player All in one Powerful Stereo Boom Box CD Player for Home Mega Bass Reflex Speakers, Radio/USB/MP3/AUX Input with Backlight LCD Display Black/Blue

PHILIPS Philips134

Philips Portable CD Player Boombox Instruction Manual

Model: Philips134

Brand: PHILIPS

IMPORTANT SAFETY INFORMATION

Please read these operating instructions carefully before using your Philips Portable CD Player Boombox. Keep these instructions for future reference.

- Do not expose the unit to rain or moisture.
- Do not expose the unit to direct sunlight or extreme temperatures.
- Ensure proper ventilation and do not block any ventilation openings.
- Use only the power supply specified in the manual.
- Do not open the unit. Refer all servicing to qualified personnel.
- Keep away from strong magnetic fields.

PRODUCT OVERVIEW

The Philips Portable CD Player Boombox is an all-in-one powerful stereo sound system designed for versatile audio playback. It features dual stereo speakers with Mega Bass Reflex technology for enhanced sound.



Figure 1: Front view of the Philips Portable CD Player Boombox, showcasing its dual speakers and central control panel, with the remote control visible on the right.

Key Features:

- **Enhanced Stereo Sound:** Dual stereo speakers with built-in bass reflex technology for deep bass.
- **Easy to Use:** Large control buttons and backlit LCD display for simple operation.
- **FM Radio:** Built-in FM tuner with digital tuning and 30 station presets.
- **Bluetooth Wireless:** Seamless pairing with phones, tablets, and other Bluetooth devices for wireless music streaming.
- **USB Player:** Play MP3 or WMA music files from USB flash drives (up to 128 GB, FAT32 format).
- **Customize Audio:** Auxiliary audio input for external music players and a headphone jack for private listening.
- **Power Options:** Operates via AC power cord or 6 x LR20 batteries (not included).

Controls and Connections:

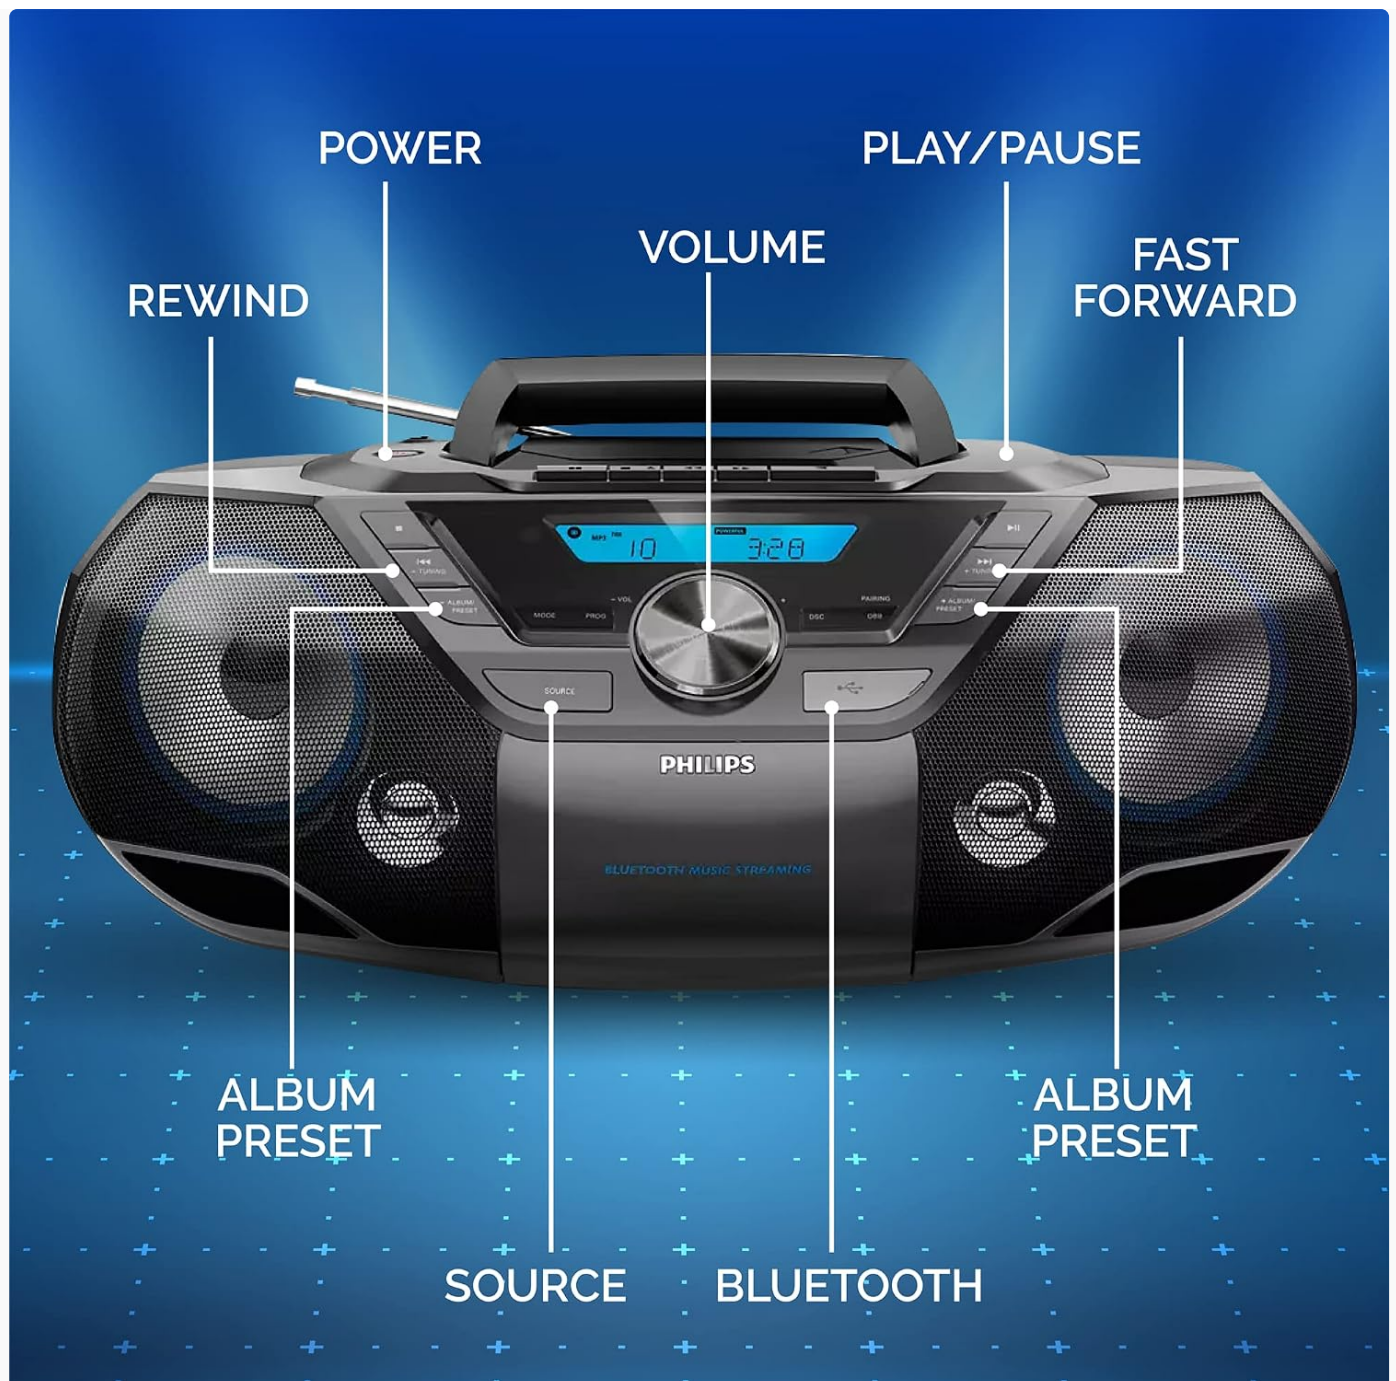


Figure 2: Detailed view of the boombox's control panel with labels for Power, Volume, Play/Pause, Fast Forward, Rewind, Album Preset, Source, and Bluetooth buttons.

Familiarize yourself with the various buttons and ports on the unit for optimal use.

SETUP

Power Connection:

The boombox can be powered by AC current or batteries.

- **AC Power:** Connect the supplied AC power cord to the AC IN socket on the unit and then to a wall outlet (100-240 VAC, 50/60 Hz).
- **Battery Power:** For portable use, insert 6 x LR20 (D size) batteries into the battery compartment. Ensure correct polarity (+/-). Batteries are not included.

Your browser does not support the video tag.

Video: This video demonstrates the initial setup of the Philips Boombox, including connecting the power cable and opening the CD compartment. It provides a visual guide to getting started with the device.

Antenna Setup:

For optimal FM radio reception, fully extend the telescopic antenna. Adjust its position for the best signal.

OPERATING INSTRUCTIONS

General Operation:

1. Press the **POWER** button to turn the unit on or off.
2. Press the **SOURCE** button repeatedly to select the desired audio source (CD, Cassette, FM, Bluetooth, USB, AUX).
3. Adjust the volume using the **VOLUME** knob.

CD Playback:

1. Open the CD compartment cover.
2. Place a CD with the label side facing up.
3. Close the CD compartment cover.
4. Select **CD** source. Playback will start automatically.
5. Use the **PLAY/PAUSE**, **SKIP**, and **STOP** buttons for control.

Cassette Playback:

1. Open the cassette compartment.
2. Insert a cassette tape.
3. Close the cassette compartment.
4. Select **TAPE** source. Press **PLAY** to begin playback.
5. Use **REWIND** and **FAST FORWARD** for navigation.

Bluetooth Streaming:

Pair your Bluetooth-enabled device with the boombox to stream audio wirelessly.



STREAM MUSIC VIA BLUETOOTH

The technology allows easy wireless connection to iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets or even laptops.



**ENJOY YOUR FAVOURITE MUSIC,
SOUND FROM VIDEO OR GAME
WIRELESSLY ON THIS SPEAKER.**

Figure 3: Illustration of wireless music streaming via Bluetooth from a smartphone to the Philips Boombox, highlighting the convenience of wireless connectivity.

1. Select **Bluetooth** source on the boombox. The display will show "PAIRING".
2. Enable Bluetooth on your device and search for "PHILIPS AZ780" (or similar model name).
3. Select the boombox from the list to pair. Once connected, the display will show "CONNECTED".
4. Play audio from your device, and it will stream through the boombox.

FM Radio:

1. Select **FM** source.
2. Press and hold the **TUNING** buttons to automatically scan for stations.
3. Press the **ALBUM/PRESET** buttons to navigate through saved stations.

USB Playback:

USB DIRECT

FOR MP3/WMA MUSIC PLAYBACK

With the USB Direct mode, simply plug in your USB device to the USB port on your Philips device and your digital music will be played directly from the Philips device.



Figure 4: Visual representation of connecting a USB flash drive for direct MP3/WMA music playback on the Philips device.

1. Insert a USB flash drive into the **USB** port.
2. Select **USB** source. Playback of compatible audio files will begin.
3. Use the playback controls to navigate tracks.

AUX Input:

Connect external audio devices using a 3.5mm audio cable (included).

1. Connect one end of the audio cable to the **AUDIO IN** jack on the boombox.
2. Connect the other end to the headphone jack or audio output of your external device.
3. Select **AUX** source. Play audio from your external device.

Audio Customization:

ENJOY YOUR FAVOURITE MUSIC

Dynamic Bass Boost
for deep and dramatic
sound

Digital Sound Control
for optimised music
style settings



Figure 5: The Philips Boombox features Dynamic Bass Boost for deep sound and Digital Sound Control for optimized music style settings, enhancing the listening experience.

- **Dynamic Bass Boost (DBB):** Press the **DBB** button to activate or deactivate enhanced bass.
- **Digital Sound Control (DSC):** Press the **DSC** button to cycle through various preset equalizer settings (e.g., Powerful, Clear, Bright, Warm, Balance) to optimize sound for different music genres.

MAINTENANCE

Cleaning:

- Wipe the unit with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- For the CD lens, use a specialized CD lens cleaner.
- Keep the cassette deck clean from dust and debris.

Storage:

When not in use for extended periods, disconnect the power cord and remove batteries. Store the unit in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cord not connected; Batteries depleted or incorrectly inserted.	Ensure power cord is securely connected. Replace batteries or check polarity.
No sound	Volume too low; Incorrect source selected; Headphones connected.	Increase volume. Select the correct audio source. Disconnect headphones.
CD skips or does not play	CD dirty or scratched; CD inserted incorrectly.	Clean or replace CD. Insert CD with label side up.
Poor FM reception	Antenna not extended or positioned correctly.	Fully extend and adjust the telescopic antenna.
Bluetooth pairing issues	Device too far; Bluetooth not enabled on device; Boombox not in pairing mode.	Ensure device is within range. Enable Bluetooth. Select Bluetooth source on boombox to enter pairing mode.

SPECIFICATIONS

PRODUCT DIMENSIONS



Figure 6: Dimensions of the Philips Portable CD Player Boombox: 17.12 inches (width), 10.6 inches (depth), and 6.69 inches (height).

Feature	Detail
Product Dimensions (L x W x H)	10.6 x 17.12 x 6.69 inches
Item Weight	8.78 pounds
Model Number	Philips134
Connectivity Technology	Bluetooth, Auxiliary, USB
Speaker Type	Stereo
Power Supply	100-240 VAC, 50/60 Hz or 6 x LR20 batteries
Supported USB Capacity	Up to 128 GB (FAT32 format only)

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product or visit the official Philips support website. Specific warranty terms may vary by region and retailer.

For further assistance, you may contact Philips customer service through their official channels.

© 2025 PHILIPS. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question