



Manuals.plus /

› Top Fin /

› Top Fin Silenstream PF-L Filter Cartridges: User Manual

Top Fin PF-L

Top Fin Silenstream PF-L Filter Cartridges: User Manual

INTRODUCTION

This manual provides essential instructions for the proper installation, use, and maintenance of your Top Fin Silenstream PF-L Filter Cartridges. These cartridges are specifically designed as refills for Top Fin Silenstream PF20, PF30, PF40, and PF75 Power Filters, ensuring optimal water quality for your aquarium. Each cartridge contains activated carbon to effectively remove impurities, odors, and discoloration from aquarium water.



Image: Packaging for Top Fin Silenstream PF-L Filter Cartridges, showing a 12-count value pack. The box highlights compatibility with PF20, PF30, PF40, and PF75 power filters and the inclusion of activated carbon.

SAFETY INFORMATION

CAUTION:

- Never use soap, detergents, or cleaning agents while cleaning the aquarium or equipment, as these substances can harm your fish.
- This product is not a toy. Keep out of reach of children.

INSTALLATION INSTRUCTIONS

Follow these steps to replace your filter cartridge:

1. **Remove Used Cartridge:** Carefully remove the old, used filter cartridge from your Top Fin Silenstream Power Filter.
2. **Rinse New Cartridge:** Rinse the new PF-L filter cartridge thoroughly under cool, running tap water to remove any loose carbon dust.
3. **Insert New Cartridge:** After rinsing, insert the new cartridge into the designated filter chamber of your power filter. Ensure the cartridge is seated completely and correctly within the chamber for proper

filtration.



INSTRUCTIONS



Step 1:
Remove used cartridge.



Step 2:
Rinse new cartridge under cool water to remove dust.



Step 3:
After rinsing, insert cartridge into filter chamber. Make sure cartridge fits completely into filter chamber.

CAUTION: Never use soap, detergents, or cleaning agents while cleaning the aquarium or equipment as they can harm your fish. This is not a toy. Keep out of reach of children.

*Depending on your aquarium's needs.

ADVICE FOR USE: To help maintain a healthy aquarium, change filter cartridge every 3-4 weeks, or if water flow becomes obstructed. Remove cartridge when medicating water as carbon will absorb medications. Change out 10% of water weekly or 25% monthly. Use a water conditioner (sold separately) every time you add fresh tap water to your aquarium.

5296633
TF SILENTSTREAM L 12PK



7 37257 87497 8

If you are not satisfied with this product, return it with your valid proof of purchase for a refund. Conditions apply. See store or PetSmart.com for details.

For more information about Top Fin® products, please call 1-888-839-9638.

Dist. by/par: Pacific Coast Distributing, Inc.
19601 N. 27th Ave., Phoenix, AZ USA 85027

Made in China

Image: A three-step diagram illustrating the filter cartridge replacement process: 1) removing the old cartridge, 2) rinsing the new cartridge, and 3) inserting the new cartridge into the filter.

USAGE AND MAINTENANCE

Proper maintenance is crucial for a healthy aquarium environment:

- **Cartridge Replacement:** To maintain a healthy aquarium, change the filter cartridge every 3-4 weeks. Replace sooner if water flow becomes obstructed, indicating the cartridge is clogged.
- **Medication Use:** Remove the filter cartridge when medicating your aquarium water, as the activated carbon will absorb medications, rendering them ineffective.
- **Water Changes:** Perform partial water changes regularly. Change approximately 10% of the aquarium water weekly or 25% monthly.
- **Water Conditioner:** Always use a water conditioner (sold separately) every time you add fresh tap water to your aquarium to neutralize harmful chemicals.

Note: The frequency of cartridge replacement and water changes may vary depending on your specific aquarium's needs, stocking level, and feeding habits.

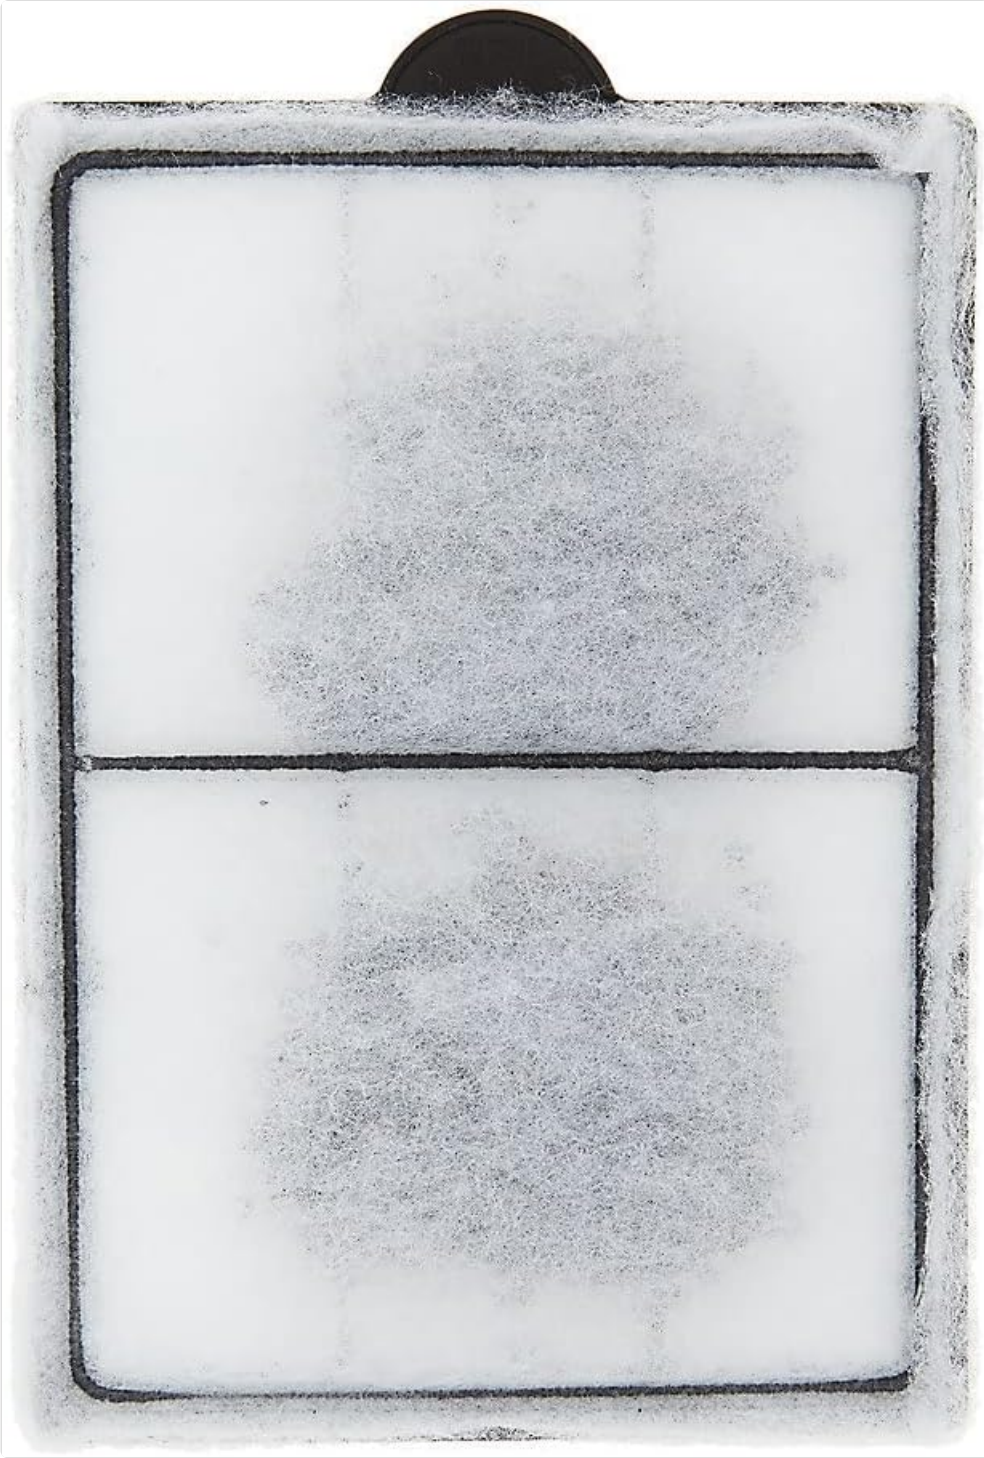


Image: A close-up view of a single Top Fin Silenstream PF-L filter cartridge, showing its rectangular shape and filtration media.



Image: Several Top Fin Silenstream PF-L filter cartridges arranged in a fanned pattern, illustrating the quantity included in a multi-pack.

TROUBLESHOOTING

If you observe reduced water flow from your filter, it is typically an indication that the filter cartridge is becoming clogged with debris. In such cases, replace the cartridge immediately following the installation instructions provided above. Ensure the new cartridge is properly seated to restore optimal water flow and filtration.

SPECIFICATIONS

Feature	Detail
Brand	Top Fin
Model Number	PF-L
Compatible Filters	Top Fin Silenstream PF20, PF30, PF40, PF75 Power Filters
Material	Activated Carbon Fiber
Product Dimensions (per cartridge)	4.5"D x 4.5"W x 6.5"H (approximate)
Item Weight (per cartridge)	0.6 Pounds / 9.6 ounces (approximate)
Unit Count	12 Count
Product Benefits	Removes Impurities, Odors, Pigments, Organic Waste
UPC	737257938403
External Testing Certification	NSF

SUPPORT INFORMATION

For additional information regarding Top Fin products, please contact customer support:

- **Customer Service Phone:** 1-888-839-9638
- **EU Spare Part Availability Duration:** 1 Year

This product is manufactured in China.