

UPBRIGHT Digitnow M46 M46-A2 M49 Power Supply

UpBright 5V AC/DC Adapter User Manual for Digitnow Turntable Vinyl Record Players

This manual provides essential instructions for the safe and effective use of your UpBright 5V AC/DC Adapter, compatible with various Digitnow turntable models.

1. INTRODUCTION

The UpBright 5V AC/DC Adapter is designed to provide reliable power to compatible Digitnow M46, M46-A2, M49, M49A, M422, M422W, M433, and M435 3-Speed Vintage Suitcase Wireless Bluetooth Turntable Vinyl Record Players. This adapter features a wide input voltage range (100-240VAC) for global compatibility and incorporates essential safety protections to ensure stable operation and device longevity.

2. SAFETY INFORMATION

- Use this adapter only with devices that require a 5V DC power input and match the connector type. Using it with incompatible devices may cause damage.
- Do not expose the adapter to water, moisture, or extreme temperatures.
- Avoid dropping or subjecting the adapter to severe impact.
- Do not attempt to open, modify, or repair the adapter. Refer servicing to qualified personnel.
- Ensure proper ventilation around the adapter during use to prevent overheating.
- Keep out of reach of children.

3. PACKAGE CONTENTS

- 1 x UpBright 5V AC/DC Adapter

4. SETUP INSTRUCTIONS

Follow these steps to connect your UpBright 5V AC/DC Adapter to your compatible Digitnow turntable:

1. **Identify Power Port:** Locate the DC 5V power input port on your Digitnow turntable. This is typically a circular port.
2. **Connect Adapter:** Insert the barrel connector of the UpBright AC/DC adapter firmly into the turntable's power input port.
3. **Plug into Outlet:** Plug the AC prongs of the adapter into a standard wall electrical outlet (100-240VAC, 50/60Hz).
4. **Verify Connection:** Ensure all connections are secure. Your turntable should now receive power.



Image 4.1: Front view of the UpBright 5V AC/DC Adapter, showing the main unit and the barrel connector cable. This adapter is used to power compatible Digitnow turntable models.

Compatible Devices:

- Digitnow M46, M46-A2, M46A2 Multicolor Stereo Digital Conversion Record Player Turntable
- Digitnow M49, M49A 3 Speed Retro Bluetooth Vinyl Turntable Player
- Digitnow M422, M422W 3-Speed Portable Vintage Suitcase Wireless Bluetooth Turntable Vinyl Record Player

- Digitnow M433 3 Speed Suitcase Record Player Vinyl Vintage Turntable
- Digitnow M435 Suitcase Wireless Turntable Record Player

5. OPERATING INSTRUCTIONS

Once the UpBright 5V AC/DC Adapter is correctly connected to your Digitnow turntable and plugged into a live electrical outlet, it will continuously supply the necessary power. There are no further operational steps required for the adapter itself. Refer to your Digitnow turntable's specific user manual for instructions on operating the turntable.

6. MAINTENANCE

- **Cleaning:** Disconnect the adapter from the power outlet and the device before cleaning. Wipe the adapter with a soft, dry cloth. Do not use liquid cleaners or solvents.
- **Storage:** When not in use, store the adapter in a cool, dry place, away from direct sunlight and moisture. Avoid wrapping the cable too tightly around the adapter to prevent damage to the wiring.
- **Cable Care:** Do not bend, twist, or pull the cable excessively. Inspect the cable periodically for any signs of wear or damage. If the cable or adapter is damaged, discontinue use immediately.

7. TROUBLESHOOTING

If you encounter issues with your UpBright 5V AC/DC Adapter, please refer to the following common troubleshooting steps:

- **No Power to Device:**
 - Ensure the adapter is securely plugged into a working wall outlet. Test the outlet with another device.
 - Verify that the barrel connector is fully inserted into the turntable's power input port.
 - Confirm that your Digitnow turntable's power switch is in the 'ON' position.
 - Check if the adapter or cable shows any visible signs of damage. If damaged, discontinue use.
- **Device Not Functioning Correctly:**
 - Double-check that your Digitnow turntable model is listed as compatible with this 5V adapter.
 - If the issue persists, consult the user manual for your Digitnow turntable for device-specific troubleshooting.

8. SPECIFICATIONS

Feature	Specification
Input Voltage	100-240VAC, 50/60Hz
Output Voltage	5VDC
Protection Features	Over Voltage Protection (OVP), Over Current Protection (OCP), Short Circuit Protection (SCP)
Product Dimensions	3 x 2 x 1 inches

Item Weight	3 ounces
Material	Metal, Plastic
Certifications	CE, RoHS
Compatible Devices	Digitnow M46, M46-A2, M49, M49A, M422, M422W, M433, M435 Turntables



Image 8.1: Top view of the UpBright 5V AC/DC Adapter, displaying the input/output specifications and certification marks on its label.

9. WARRANTY AND SUPPORT


Your UpBright 5V AC/DC Adapter comes with the following warranty and support:

- **Refund Policy:** UpBright offers a 30-day refund period from the date of purchase.
- **Exchange Policy:** The product is covered by a 24-month exchange policy for manufacturing defects.
- **Manufacturer:** UpBright

For warranty claims or technical support, please contact UpBright directly through their official channels or the retailer where the product was purchased.

Come With A Suitable Outlet Adapter (Only One) to Fit

Your Country/Area For International Order

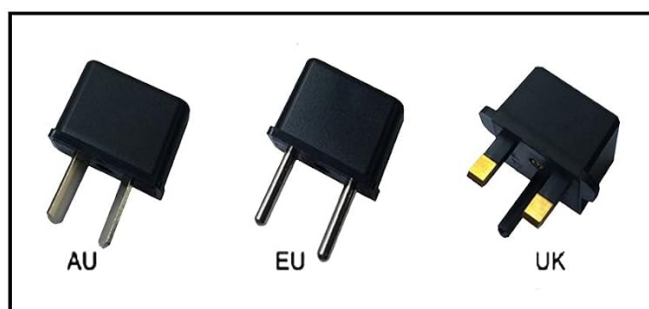

THIS PRODUCT COMES WITH A UPBRIGHT®

LIMITED WARRANTY CERTIFICATE



Image 9.1: An illustration of various international outlet adapters (AU, EU, UK) and a sample UpBright Limited Warranty Certificate, indicating product support and global compatibility.

© 2023 UpBright. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question