

[Manuals.plus](#) /

› [kakoya](#) /

› kakoya Flickering Flameless Candles User Manual

kakoya kakoya-1113

User Manual: Flickering Flameless Candles

Model: kakoya-1113 | Brand: kakoya

INTRODUCTION

Thank you for choosing kakoya Flickering Flameless Candles. These battery-operated LED pillar candles are designed to provide a safe, realistic, and convenient ambient lighting solution for your home decor. This manual provides essential information for the proper setup, operation, and maintenance of your new candles.



Image: A set of nine kakoya flameless candles with their accompanying remote controls.

SETUP

1. **Unpack:** Carefully remove all candles and remote controls from the packaging. Inspect for any damage.
2. **Battery Installation:** Each flameless candle requires one (1) AA battery (not included).
 - Locate the battery compartment at the bottom of each candle.
 - Twist the battery cover counter-clockwise to open.
 - Insert one AA battery, ensuring correct polarity (+/-).
 - Replace the battery cover by twisting clockwise until secure.
 - Ensure the ON/OFF switch on the bottom of the candle is in the 'ON' position.
3. **Remote Control Batteries:** The remote controls come with pre-installed button cell batteries. If the remote does not function, check or replace its battery.
4. **Placement:** Place the candles on a stable, flat surface. These candles are designed for indoor use.



Product Dimension

1AA Batteries
(Not Included)



1.1inch

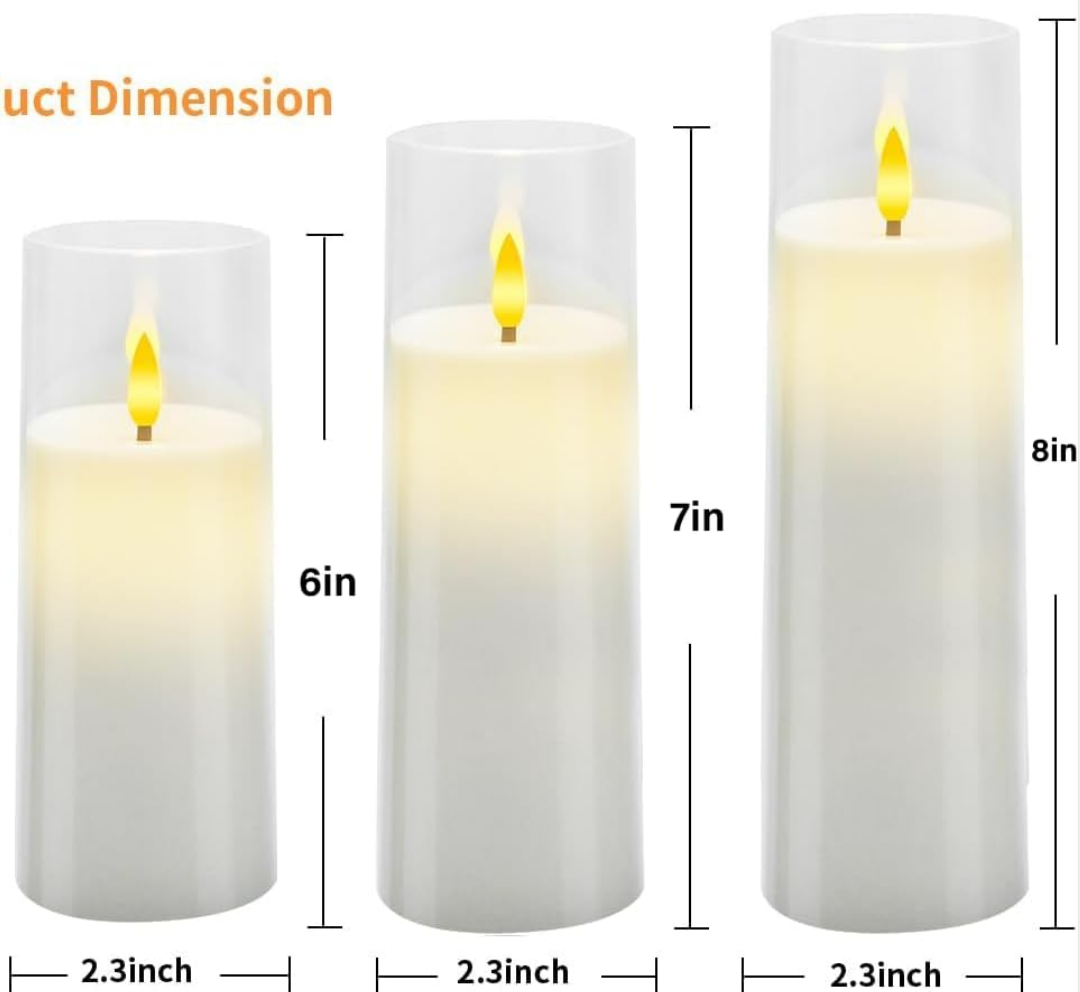


Image: Detail of the battery compartment and ON/OFF switch on the base of a candle.

Upgraded single-cell battery



VS



✓ single-cell battery

✓ 300+ hours of use

✓ Same brightness as dual-cell models

✗ single-cell battery

✓ 300+ hours of use

✓ Same brightness as dual-cell models



Easy Operation to Replace Wicks

Image: Illustration demonstrating the single-cell battery design for extended use.

OPERATING INSTRUCTIONS

Your kakoya flameless candles are operated using the included 10-key remote control. Ensure the candles' bottom switches are in the 'ON' position for remote functionality.

Remote Control Functions:

- **ON/OFF:** Press to turn all candles on or off.
- **TIMER (2H/4H/6H/8H):** Select the desired duration for the candles to remain lit. Once set, the candles will automatically turn on at the same time each day and stay on for the selected hours, repeating the cycle every 24 hours.
- **MODE (Candle/Light):**
 - **Candle:** Activates the realistic flickering flame effect.
 - **Light:** Provides a steady, non-flickering light.
- **BRIGHTNESS (+/-):** Adjust the brightness level of the candles.



Image: Remote control illustrating its various functions for operating the candles.



Image: Visual comparison of the flameless candles in off and on states.

MAINTENANCE

- **Battery Replacement:** When the light dims significantly or the candle stops working, it is time to replace the AA battery. Follow the battery installation steps in the Setup section.
- **Cleaning:** To clean the candles, gently wipe the plexiglass exterior with a soft, dry cloth. Do not use abrasive cleaners or immerse the candles in water.
- **Storage:** If storing the candles for an extended period, remove the AA batteries to prevent leakage and corrosion.

Store in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Candle does not turn on.	Battery is dead or incorrectly installed. ON/OFF switch is off.	Check battery polarity and replace if necessary. Ensure the bottom switch is in the 'ON' position.
Remote control is not working.	Remote battery is dead. Obstruction between remote and candle.	Replace the remote control battery. Ensure a clear line of sight to the candles.
Candle light is dim.	Low battery. Brightness setting is low.	Replace the AA battery in the candle. Use the '+' button on the remote to increase brightness.
Timer function is not working as expected.	Timer was not set correctly or interrupted.	Re-set the timer by pressing the desired duration button (2H/4H/6H/8H) on the remote.

SPECIFICATIONS

- **Model:** kakoya-1113
- **Product Dimensions:** Approximately 2.3"D x 2.3"W x 6"/7"/8"H (various heights in the pack)
- **Power Source:** Battery Powered
- **Battery Type (per candle):** 1 x AA (not included)
- **Light Source Type:** LED
- **Material:** Glass, Plastic (Plexiglass shell)
- **Control Method:** Remote Control
- **Special Features:** Flickering flame effect, Timer (2/4/6/8H), Brightness adjustment, Energy Efficient
- **Indoor/Outdoor Usage:** Indoor
- **Number of Pieces:** 9

WARRANTY AND SUPPORT

kakoya provides a **12-Month Warranty** for this product, covering manufacturing defects and malfunctions under normal use. Additionally, **Lifetime Technical Support** is available to assist you with any questions or issues you may encounter.

For warranty claims or technical assistance, please refer to the contact information provided with your purchase or visit the official kakoya brand store on Amazon.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question