

[Manuals.plus](#) /

› [SYNLETT](#) /

› SYNLETT Caregiver Pager System User Manual

SYNLETT D29G3

SYNLETT Caregiver Pager System User Manual

Model: D29G3

Brand: SYNLETT

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your SYNLETT Caregiver Pager System. This wireless system is designed to assist caregivers in monitoring individuals, particularly the elderly, to enhance safety and provide timely assistance. The kit includes a portable pager, wireless call buttons, and a motion sensor alarm.



Figure 1: Overview of the SYNLETT Caregiver Pager System components, including the portable pager, two call buttons, and a motion sensor.

WHAT'S INCLUDED

Your SYNLETT Caregiver Pager System package contains the following items:

- 1 x Portable Caregiver Pager
- 2 x Wireless Call Buttons
- 1 x Motion Sensor Alarm
- 5 x AA Batteries (for Pager and Motion Sensor)
- 2 x 23A12V Batteries (for Call Buttons)
- Mounting Brackets for Call Buttons and Motion Sensor
- Lanyards for Call Buttons
- User Manual (this document)

COMES WITH ALL YOU NEED



Figure 2: All items included in the SYNLETT Caregiver Pager System kit, ready for setup.

SETUP INSTRUCTIONS

1. Portable Caregiver Pager Setup

- Battery Installation:** Slide open the rear cover of the pager. Insert 3 AA batteries, ensuring correct polarity. Remove any insulating tabs if present. Close the cover.
- Alert Mode Selection:** On the side of the pager, locate the switch for alert modes.
 - Set to "DING DONG" for a chime doorbell alert.
 - Set to "ALARM" for a continuous alarm siren.
 - Set to "OFF" to turn off the pager.
- Volume Adjustment:** Use the "VOLUME" button on the side to cycle through three adjustable volume levels (low, medium, high).
- Placement:** The pager is portable and can be clipped to a belt or placed on a flat surface.

PORTABLE CAREGIVER PAGER

3-Color Indicator

differentiate calls by reading the light color



Adjustable Volume

low, medium and high



Clip the pager on belt or place on desk
Carry it wherever you go

Figure 3: The portable pager can be easily clipped to a belt for convenient carrying.

2. Wireless Call Button Setup

1. **Battery Installation:** Gently pry open the call button casing (a small screwdriver may be needed). Insert the 23A12V battery, ensuring correct polarity. Close the casing securely.
2. **Mounting Options:** Each call button comes with versatile mounting options:
 - **Screw Mounting:** Use the provided screws to attach the mounting bracket to a wall (e.g., in a bathroom or near a bed).
 - **Adhesive Patch Mounting:** Use the adhesive patch on the back of the bracket for quick, non-permanent attachment to smooth surfaces.
 - **Lanyard:** Attach the provided lanyard to wear the call button around the neck as a pendant. The lanyard features a breakaway safety design.
3. **Placement:** Place call buttons in easily accessible locations where assistance might be needed, such as beside a bed, in a bathroom, or in common living areas.

FLEXIBLE AND LIGHT WEIGHT

Reliable call button with safe feature



Screw Mounting



Adhesive Patch Mounting



Hang with Lanyard

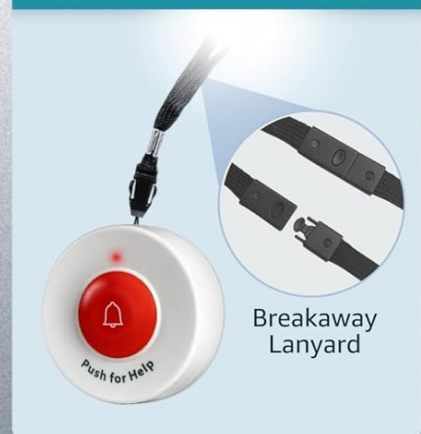



Figure 4: Various methods for mounting and carrying the wireless call buttons.

3. Motion Sensor Alarm Setup

1. **Battery Installation:** Open the rear battery cover of the motion sensor. Insert 2 AA batteries, ensuring correct polarity. Remove any insulating tabs if present. Close the cover.
2. **Mode Selection:** On the front of the motion sensor, select the operating mode:
 - **"SEND" Mode:** The motion sensor will automatically transmit a signal to the pager upon detecting movement.
 - **"PUSH" Mode:** The motion sensor will only transmit a signal to the pager when the "BUTTON" is manually pressed.
 - **"OFF" Mode:** The motion sensor is turned off.
3. **Antenna:** Extend the antenna for maximum range.
4. **Placement:** Position the motion sensor in an area where movement needs to be monitored, such as beside a bed to detect when someone attempts to stand up, or near a doorway. Ensure the sensor's detection area covers the desired monitoring zone.

Prevent loved one from wandering or falling

easy to use and install

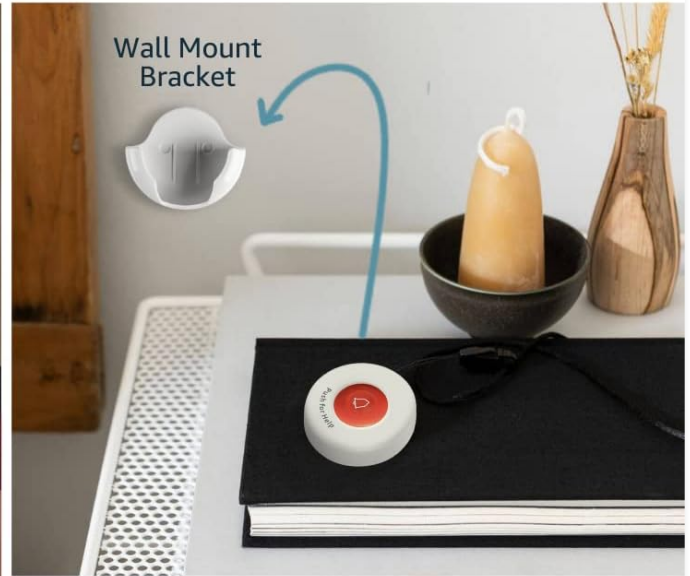

APPLICABLE IN MANY SETTINGS

Figure 5: Strategic placement of the motion sensor for effective monitoring.

OPERATING INSTRUCTIONS

The SYNLETT Caregiver Pager System operates wirelessly, providing alerts to the caregiver's pager when a signal is received from a call button or the motion sensor.

Receiving Alerts

- **From Call Button:** When the "Push for Help" button on a wireless call button is pressed, it sends a signal to the pager.
- **From Motion Sensor:** If the motion sensor is set to "SEND" mode, it will automatically send a signal to the pager when it detects movement within its range. If set to "PUSH" mode, the button on the sensor must be pressed manually.

CALL BUTTONS + MOTION SENSOR



Figure 6: Illustration of the wireless signal flow from transmitters to the pager.

Pager Alert Indication

- The pager will sound according to the selected alert mode ("DING DONG" or "ALARM").
- The 3-color LED indicator on the pager will illuminate to help identify which device is calling. Each color (red, green, blue) represents a unique device or pair of devices, allowing for differentiation of alerts.
- When the pager goes off in "ALARM" mode, it will sound for 20 seconds. To stop the alarm manually, simply press and hold the "VOLUME" button on the side of the pager.

Your browser does not support the video tag.

Video 1: Demonstrates the setup and operation of the SYNLETT Caregiver Pager System, including battery installation, alert modes, and how to stop the alarm.

MAINTENANCE

- **Cleaning:** Wipe the devices with a soft, dry cloth. Do not use abrasive cleaners or immerse in water.

- **Battery Replacement:** Replace batteries in the pager, call buttons, and motion sensor when the low battery indicator (if available, or when performance degrades) is observed. Ensure to use the correct battery types (AA for pager and motion sensor, 23A12V for call buttons).
- **Storage:** If storing the system for an extended period, remove all batteries to prevent leakage and damage. Store in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Pager not sounding/receiving signal.	• Pager is off or in "OFF" mode. • Low or dead batteries in pager or transmitter. • Transmitter (call button/motion sensor) is out of range. • Environmental interference (thick walls, electronic devices).	• Ensure pager is switched to "DING DONG" or "ALARM" mode. • Replace batteries in all units. • Move pager closer to the transmitter. • Relocate units to minimize interference.
Motion sensor not detecting movement.	• Motion sensor is off or in "PUSH" mode. • Incorrect placement or obstructed view. • Low or dead batteries.	• Ensure motion sensor is set to "SEND" mode. • Adjust sensor position to ensure clear line of sight to the monitored area. • Replace batteries.
Alarm sounds continuously.	• Pager is in "ALARM" mode and has received a signal.	• Press and hold the "VOLUME" button on the pager to stop the alarm. • Switch the pager to "DING DONG" mode if a continuous alarm is not desired.

SPECIFICATIONS

- **Brand:** SYNLETT
- **Model Number:** D29G3
- **Color:** White (2 Call Buttons 1 Motion Sensor 1 Receiver variant)
- **Power Source:** Battery Powered
- **Maximum Wireless Range:** Up to 150 Meters (approx. 492 feet) in open area. *Note: Actual range may vary due to environmental factors such as concrete or brick walls and heavy electronic equipment.*
- **Mounting Type:** Wall Mount (for motion sensor and call button brackets)
- **Battery Type:** AA (for Pager and Motion Sensor), 23A12V (for Call Buttons)
- **Product Dimensions:** 9.06 x 4.06 x 2.36 inches
- **Item Weight:** 15.5 ounces
- **UPC:** 768461394655

WARRANTY AND SUPPORT

For product support, technical assistance, or inquiries regarding your SYNLETT Caregiver Pager System, please refer to the contact information provided on the product packaging or visit the official SYNLETT website. While specific warranty details are not provided in this manual, extended protection plans may be available for purchase separately to cover your

device beyond the standard manufacturer's warranty.
For additional resources, you may also refer to the official[User Manual \(PDF\)](#).

© 2023 SYNLETT. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page
<https://manuals.plus/asin/B0BXD6K6F3>
More documents and user manuals: <https://manuals.plus/>