

Nutricook NC-SP210L

Nutricook Smart Pot 2 Plus 9.5L Multi-Cooker Instruction Manual

Model: NC-SP210L | Brand: Nutricook

1. INTRODUCTION

The Nutricook Smart Pot 2 Plus is a versatile 9-in-1 multi-cooker designed to simplify your cooking experience. It combines the functions of a pressure cooker, slow cooker, rice cooker, steamer, sauté pot, yogurt maker, soup maker, cake maker, and food warmer. This manual provides essential information for safe and efficient operation of your appliance.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons. Read all instructions carefully before operating the Smart Pot 2 Plus.

- Always ensure the lid is properly closed and locked before operating under pressure.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse the cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.

- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your Nutricook Smart Pot 2 Plus.



Image: The Nutricook Smart Pot 2 Plus with its lid removed, revealing the stainless steel inner pot. The main unit features a control panel on the front.

Components:

- **Main Unit:** Houses the heating element and control panel.
- **Inner Pot:** Food-grade 304 stainless steel, dishwasher safe.
- **Lid:** Features a smart lid with automatic locking and one-touch pressure release.
- **Sealing Ring:** Essential for pressure cooking.

- **Steam Release Valve:** Controls pressure release.
- **Float Valve:** Indicates when pressure is built up inside the cooker.
- **Control Panel:** LCD display and touch buttons for various cooking functions.

4. SETUP

Initial Cleaning:

1. Before first use, wash the inner pot, sealing ring, and lid thoroughly with warm, soapy water. Rinse and dry completely.
2. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.

Assembly:

1. Place the inner pot into the main unit. Ensure it sits flat and is properly seated.
2. Insert the sealing ring firmly into the groove on the underside of the lid.
3. Place the lid onto the main unit, aligning the arrow on the lid with the arrow on the main unit. Twist clockwise until it locks into place.
4. Ensure the steam release valve is in the 'Sealing' position for pressure cooking.

5. OPERATING INSTRUCTIONS

The Nutricook Smart Pot 2 Plus features a clear LCD display and 13 one-touch preset programs for your favorite meals.



Image: The Nutricook Smart Pot 2 Plus with its illuminated control panel showing cooking options and a digital timer.

General Operation:

1. Plug the appliance into a 240V electrical outlet. The display will show 'OFF'.
2. Add ingredients to the inner pot according to your recipe. Do not exceed the MAX fill line.
3. Secure the lid. The smart lid will automatically lock when pressure cooking.
4. Select your desired cooking program by pressing the corresponding button on the control panel.
5. Adjust cooking time or pressure level if necessary using the '+' and '-' buttons.
6. Press 'Start' to begin cooking.
7. The LCD display will show the cooking status and remaining time.

Pressure Release:

After pressure cooking, the appliance will automatically switch to 'Keep Warm' mode. To release pressure:



Image: A hand pressing the one-touch pressure release button located on the top of the Nutricook Smart Pot 2 Plus lid.

- **Natural Release:** Allow the pressure to dissipate naturally. This is recommended for foods that expand, such as grains or beans. The float valve will drop when pressure is fully released.
- **Quick Release:** Press the one-touch pressure release button on the lid. Steam will rapidly vent from the steam release valve. Keep hands and face clear of the steam. The float valve will drop when pressure is fully released.

Do not open the lid until the float valve has dropped, indicating all pressure has been released.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and longevity of your Nutricook Smart Pot 2 Plus.

Cleaning the Inner Pot:



Image: The stainless steel inner pot of the Nutricook Smart Pot 2 Plus placed upside down in a dishwasher rack, ready for cleaning.

- The inner pot is dishwasher safe. For best results, place it on the top rack.
- Alternatively, wash with warm, soapy water and a non-abrasive sponge.

Cleaning the Lid:

- Remove the sealing ring and wash it separately with warm, soapy water.
- Wash the lid by hand with warm, soapy water. Ensure all food particles are removed from the steam release valve and float valve areas.
- Dry all components thoroughly before reassembly.

Cleaning the Main Unit:

- Wipe the exterior of the main unit with a damp cloth.
- Never immerse the main unit in water or any other liquid.

7. TROUBLESHOOTING

If you encounter issues with your Smart Pot 2 Plus, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Unit does not power on.	Not plugged in; power outlet issue.	Ensure the power cord is securely plugged into both the unit and a working electrical outlet.
Pressure not building up.	Lid not sealed; sealing ring improperly installed; steam release valve in 'Venting' position; insufficient liquid.	Check lid for proper sealing. Ensure sealing ring is correctly seated. Move steam release valve to 'Sealing'. Add more liquid if necessary.
Food is undercooked.	Insufficient cooking time; too much food.	Increase cooking time. Reduce food quantity to recommended levels.
Error code displayed.	Specific internal issue.	Refer to the full user manual for specific error code meanings. Unplug the unit, wait a few minutes, then plug back in. If the error persists, contact customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	Nutricook
Model Number	NC-SP210L
Capacity	9.5 Liters
Power	1500 Watts
Voltage	240 Volts
Material	Stainless Steel
Color	Black
Control Method	Touch / Push Button
Operation Mode	Automatic
Special Feature	Lock Lid
Dishwasher Safe Parts	Inner Pot
Item Weight	9.7 Kilograms

9. WARRANTY AND SUPPORT

Your Nutricook Smart Pot 2 Plus is covered by a manufacturer's warranty. Please refer to the warranty card included with your product for specific terms and conditions.

For technical support, troubleshooting assistance, or warranty claims, please contact Nutricook customer service through their official website or the contact information provided in your product packaging.

Keep your purchase receipt as proof of purchase for warranty purposes.

© 2026 Nutricook. All rights reserved.