

[Manuals.plus](#) /

› [CUSIMAX](#) /

› CUSIMAX Smokeless Indoor Grill Instruction Manual

CUSIMAX GR-200A

CUSIMAX Smokeless Indoor Grill Instruction Manual

Model: GR-200A | Brand: CUSIMAX

IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using your CUSIMAX Smokeless Indoor Grill. Failure to follow these safety guidelines may result in electric shock, fire, or serious injury.

- Always ensure the appliance is unplugged from the power outlet before cleaning, assembling, or disassembling.
- Do not immerse the electrical unit (heating element and control panel) in water or any other liquid.
- Keep the appliance out of reach of children and pets.
- Use the grill only on a stable, heat-resistant surface.
- Do not operate the grill if the power cord or plug is damaged, or if the appliance malfunctions or has been damaged in any way.
- Always add water to the drip tray before operation to ensure smokeless grilling and proper heat distribution.
- Do not touch hot surfaces. Use handles or knobs.
- Ensure proper ventilation when using the grill.

PRODUCT OVERVIEW

The CUSIMAX Smokeless Indoor Grill is designed for convenient indoor grilling, offering a versatile cooking experience with minimal smoke. It features interchangeable grill and griddle plates, an LED smart display for temperature control, and a built-in turbo smoke extractor fan.



Figure 1: CUSIMAX Smokeless Indoor Grill in Red, showcasing its compact design and food being grilled.


COMPONENTS

Your CUSIMAX Smokeless Indoor Grill package includes the following components:

- Electric smokeless grill base unit
- Grill plate
- Griddle plate
- Drip tray
- Lid (Tempered Glass)
- Silver heat reflector

NON-STICK REMOVABLE

Grill & Griddle Plates

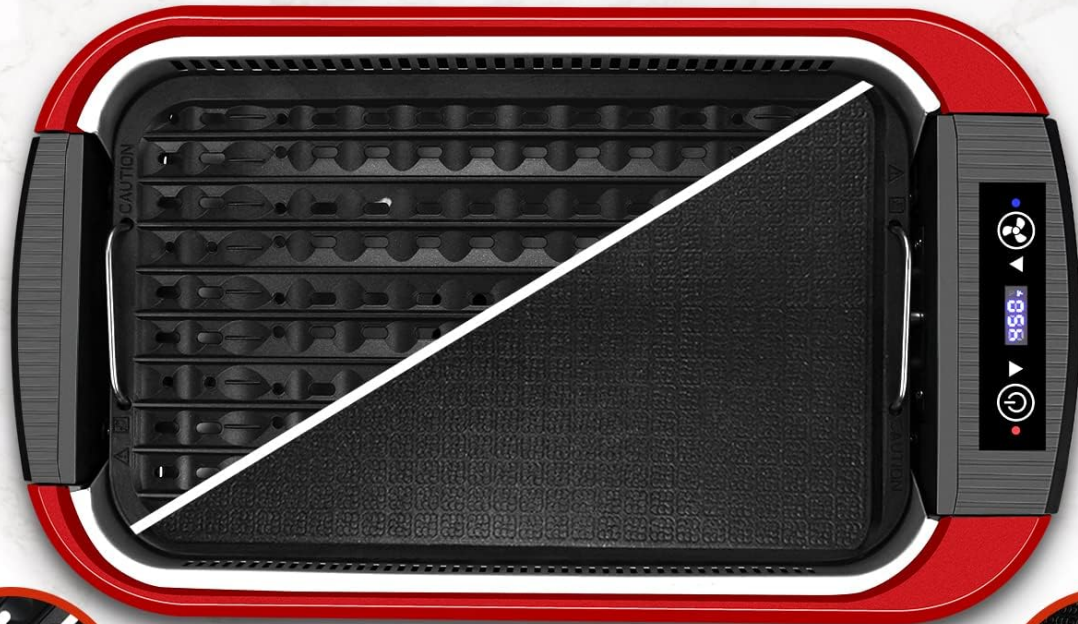

Grill Plate



Griddle Plate



Figure 2: The interchangeable non-stick grill plate (left) and griddle plate (right) for versatile cooking.

SETUP

1. **Unpack and Clean:** Carefully remove all components from the packaging. Wash the grill plate, griddle plate, drip tray, and lid with warm, soapy water. Rinse thoroughly and dry completely. Wipe the main unit with a damp cloth.
2. **Assemble Drip Tray:** Slide the drip tray into the base unit. Ensure it is properly seated.
3. **Add Water to Drip Tray:** Pour approximately 2 cups of water into the drip tray. This is crucial for the smokeless function. Do not overfill.
4. **Place Heat Reflector:** Position the silver heat reflector over the heating element.
5. **Install Cooking Plate:** Choose either the grill plate or the griddle plate and place it securely on top of the heating element and heat reflector.
6. **Connect Power:** Plug the power cord into a standard 120V AC outlet.



Add the right amount of pure water to the drip tray | **1**

**Makes your house
NO MORE CLOUDY SMOKE!**



2 | Press the fan button to activate the turbo smoke extraction component



Reduce
95% smoke**



3 | Cover with the lid to retain heat and block the spread of smoke

Figure 3: Visual guide for setting up the drip tray with water and activating the smoke extraction fan.

OPERATING INSTRUCTIONS

- Power On:** Press the Power Button on the LED Smart Display to turn on the grill.
- Set Temperature:** Use the Up and Down arrow buttons to adjust the desired cooking temperature, ranging from 200°F to 450°F. Allow the grill to preheat for 5-10 minutes until it reaches the set temperature.
- Activate Fan:** Press the Fan Button to activate the turbo smoke extraction fan. This helps to minimize smoke during cooking.
- Begin Cooking:** Once preheated, place your food directly onto the grill or griddle plate. For best results and to retain heat, you may use the tempered glass lid during cooking.
- Monitor Cooking:** The transparent lid allows you to monitor your food without lifting it, helping to maintain consistent cooking temperatures.
- Power Off:** After cooking, press the Power Button to turn off the grill. Allow the fan to run for a few minutes after turning off the heat to help clear any remaining smoke and cool down the unit.

Ultra-clear LED Smart Display

Easily adjust temperature with LED display



Figure 4: The intuitive LED Smart Display for precise temperature control and fan activation.

CLEANING & MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your grill. Always allow the grill to cool completely before cleaning.

1. **Unplug:** Disconnect the power cord from the outlet.
2. **Disassemble:** Carefully remove the cooking plate (grill or griddle), heat reflector, and drip tray. The control panel unit can also be detached for easier cleaning of the base.
3. **Wash Components:** The cooking plates, drip tray, and lid are dishwasher safe. Alternatively, wash them by hand with warm, soapy water and a non-abrasive sponge.
4. **Clean Base Unit:** Wipe the exterior of the main unit and the heating element with a damp cloth. Do not immerse the main unit in water.
5. **Dry Thoroughly:** Ensure all parts are completely dry before reassembling or storing.



Figure 5: The grill's removable parts are designed for easy cleaning, including being dishwasher safe.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Grill not turning on	Not plugged in; Power button not pressed; Power outlet issue.	Ensure power cord is securely plugged in. Press the Power button. Test the outlet with another appliance.
Excessive smoke	No water in drip tray; Drip tray is full; Fan not activated; Fatty foods.	Add water to the drip tray. Empty and clean the drip tray. Press the Fan button. Trim excess fat from foods.
Food not cooking evenly	Grill not preheated; Temperature set too low; Uneven food placement.	Allow grill to fully preheat. Increase temperature setting. Distribute food evenly on the cooking surface.

SPECIFICATIONS

Brand: CUSIMAX

Model Name: CMGR-200A (Item model number: GR-200A)

Product Dimensions: 20.62"D x 13.7"W x 8.25"H

Item Weight: 17.12 Pounds

Color: Red Double Plates

Fuel Type: Electric

Heating Power: 1.5 Kilowatts (1500 watts)

Voltage: 120 Volts

Special Features: LED Smart Display, Non Stick Coating, Removable Surface

Material: Glass (Lid), Metal (Frame)

Finish Type: Non-Stick

Assembly Required: Yes



Figure 6: Detailed dimensions of the CUSIMAX Smokeless Indoor Grill.

CUSIMAX offers a free lifetime customer service and a 180-day worry-free return policy for this product. Our professional technical engineers are available to assist with any issues or questions you may have. Please refer to your purchase documentation for specific warranty terms and contact information.

For support, please visit the official CUSIMAX store or contact customer service through your retailer.