

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Karinear](#) /

› [Karinear 2 Burners Electric Cooktop Instruction Manual](#)

Karinear KNC-PF602SGB

Karinear 2 Burners Electric Cooktop Instruction Manual

Model: KNC-PF602SGB

Brand: Karinear

1. INTRODUCTION

The Karinear 2 Burners Electric Cooktop is a versatile and efficient cooking appliance designed for both countertop and built-in use. It features a sleek vitroceramic glass surface, sensor touch controls, and multiple safety functions, making it a convenient addition to any kitchen. This manual provides essential information for safe operation, installation, maintenance, and troubleshooting.

2. SAFETY INFORMATION

Please read all instructions carefully before using the appliance to ensure safe operation and prevent injury or damage. Keep this manual for future reference.

- **Electrical Safety:** This cooktop operates on 110V~120V AC power. Ensure the outlet meets the required voltage. Do not use extension cords.
- **Hot Surface Warning:** The cooktop surface will be hot during and after use. Avoid touching the hot surface with bare hands. Allow sufficient time for cooling.
- **Child Safety Lock:** Utilize the child safety lock feature to prevent accidental operation by children. To activate, press and hold the "Lock (3 sec)" button for 3 seconds.
- **Overheat Protection:** The cooktop is equipped with an overheat protection system that will automatically shut off the unit if it detects excessive temperatures.
- **Automatic Shut-Off:** The cooktop has an automatic shut-off function. You can also set a timer for regular shutdown (0-240 minutes).
- **Ventilation:** Ensure proper ventilation around the cooktop, especially if used as a countertop unit, to prevent overheating of internal components. The unit features dual fans for cooling.
- **Cookware:** Use only compatible cookware as specified in this manual.

3. PRODUCT FEATURES

- **Dual Radiant Burners:** Two heating elements for simultaneous cooking.
- **Voltage:** 110V~120V with an outlet plug for easy home use.
- **Power Levels:** 9 adjustable power levels with an approximate temperature range of 200°F to 800°F.
- **Pre-programmed Functions:** 8 cooking functions including Melt, Simmer, Steam, Boil, Fry, Roast, Stir Fry, and Fast Heat.
- **Sensor Touch Control:** Intuitive touch controls for easy operation.
- **Timer Function:** Adjustable timer from 0 to 240 minutes.
- **Safety Features:** High temperature warning, child safety lock, overheat protection, and automatic shut-off.
- **Installation Versatility:** Can be used as a portable countertop unit or built-in.
- **Material:** Durable vitroceramic glass surface for easy cleaning.

4. SETUP

Unboxing and Initial Inspection

Carefully remove the cooktop from its packaging. Inspect the unit for any signs of damage. Ensure all components, including the instruction manual and installation accessories (screws, non-slip feet), are present.



Figure 4.1: Karinear 2 Burners Electric Cooktop, showing the sleek black glass surface and control panel.

Installation Options

The Karinear cooktop offers two installation methods:

- **Countertop Use:** For portable use, attach the provided non-slip grip legs to the bottom of the cooktop using a screwdriver. This allows the unit to sit securely on any flat, stable surface.
- **Built-in Installation:** For a more integrated look, the cooktop can be dropped into a pre-cut opening in your countertop. Refer to the detailed dimensions below for precise cutting. The unit is designed to sit flush with the countertop.

Built-in Install



Countertop Use

Figure 4.2: The cooktop shown in both built-in and countertop configurations, highlighting its versatility.

Dimensions for Built-in Installation

Measurement	Dimension (Inches)	Dimension (mm)
Product Depth	13.78	350
Product Width	23.62	600
Product Height	2.95	75
Cut-out Depth	12.20	310
Cut-out Width	22.05	560

Drop-in Size & Easy to Install



Figure 4.3: Detailed dimensions for built-in installation, including product and cut-out sizes.

5. OPERATING INSTRUCTIONS

Control Panel Overview

The cooktop features a touch-sensitive control panel for each burner. The controls for both burners are identical.

SAFETY SYSTEM DESIGN

Karinear portable hob is designed humanized, and many functions have been upgraded for safety, giving you a safe and intelligent experience in the kitchen.



Figure 5.1: Control panel showing touch buttons for various functions and safety features.

Basic Operation

- Power On/Off:** Press the "On/Off" button to turn the respective burner on or off.
- Function Selection:** Press the "Function" button to cycle through the pre-programmed cooking modes (Melt, Simmer, Steam, Boil, Fry, Roast, Stir Fry, Fast Heat). Each mode has a default temperature setting.
- Temperature/Power Adjustment:** Use the "+" and "-" buttons to manually adjust the temperature or power level (9 levels, 200°F to 800°F).
- Timer Setting:** Press the "Timer" button, then use "+" and "-" to set the desired cooking time (1 minute to 4 hours). The cooktop will automatically shut off when the timer expires.
- Child Safety Lock:** To activate, press and hold the "Lock (3 sec)" button for 3 seconds. This will disable all other controls to prevent accidental changes. To unlock, press and hold the "Lock (3 sec)" button again for 3 seconds.

Cooking Modes Explained

- Melt:** Lowest temperature setting, ideal for melting butter or chocolate.
- Simmer:** Low heat for gentle cooking, such as sauces or stews.

- **Steam:** Medium heat for steaming vegetables or other foods.
- **Boil:** High heat for rapid boiling of water.
- **Fry:** Suitable for frying foods at moderate to high temperatures.
- **Roast:** For roasting or searing at higher temperatures.
- **Stir Fry:** High heat for quick stir-frying.
- **Fast Heat:** Maximum heat setting for rapid heating, such as boiling large amounts of water quickly.



Figure 5.2: Visual representation of key safety and convenience features: Timer, Child Safety Lock, and High Temperature Warning.

Your browser does not support the video tag.

Video 5.1: Official Karinear demonstration of the 110V Electric Cooktop's features, including power on, function selection, timer, and safety lock. This video highlights the ease of use and various cooking capabilities.

Your browser does not support the video tag.

Video 5.2: Official Karinear video showcasing the cooktop's functions and ease of use in a kitchen setting. It demonstrates various cooking tasks and the responsive touch controls.

6. COOKWARE COMPATIBILITY

The Karinear electric ceramic cooktop is compatible with a wide range of heat-resistant cookware materials. This includes:

- **Cast Iron:** Excellent heat retention.
- **Stainless Steel:** Durable and widely available.

- **Copper:** Known for excellent heat conductivity.
- **Ceramic:** Versatile and non-reactive.
- **Enameled Iron:** Combines the benefits of cast iron with an easy-to-clean enamel coating.
- **Aluminum:** Lightweight and good heat conductor.
- **Glass Cookware:** Heat-resistant glass pots and pans.

The cooktop is suitable for flat-bottomed pots with a bottom diameter of 4.7-9 inches. It can also accommodate cooking bases that are slightly concave, not necessarily perfectly flat.

Compatible with most of cookwares



Figure 6.1: Examples of compatible cookware, including cast iron, stainless steel, copper, and ceramic pots and pans.

7. CLEANING AND MAINTENANCE

The vitroceramic glass surface of the cooktop is designed for easy cleaning. Allow the surface to cool completely before cleaning.

- **Daily Cleaning:** Use a wet rag or damp cloth to wipe down the surface after each use.
- **Stubborn Stains:** For more stubborn stains, use a glass cooktop cleaner and a scraper (often included with the package). Tilt the scraper at a 45-degree angle to gently remove residue.
- **Avoid Abrasives:** Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can scratch or damage the glass surface.



Figure 7.1: Demonstration of cleaning the cooktop surface with a wet rag for easy maintenance.

8. TROUBLESHOOTING

If you encounter any issues with your Karinear Electric Cooktop, refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Cooktop does not turn on.	No power supply; Child safety lock activated.	Ensure the cooktop is properly plugged into a working 110V~120V outlet. Deactivate child safety lock by pressing and holding "Lock (3 sec)" for 3 seconds.
Cooktop overheats and shuts off.	Poor ventilation; Prolonged high-temperature use.	Ensure adequate airflow around the unit. Reduce cooking temperature or allow the unit to cool down before resuming use.
Controls are unresponsive.	Child safety lock activated; Wet surface.	Deactivate child safety lock. Ensure the control panel surface is dry and clean.
Unusual noise during operation.	Cooling fans operating.	The cooktop uses dual cooling fans, which may produce a slight humming sound during operation. This is normal.

9. SPECIFICATIONS

- Brand Name:** Karinear
- Model Info:** KNC-PF602SGB
- Item Weight:** 15.97 pounds
- Product Dimensions:** 13.78 x 2.95 x 23.62 inches
- Country of Origin:** China
- Installation Type:** Drop-In or countertop
- Special Features:** Safety Lock, Timer, Automatic Shut-Off
- Burner type:** Radian
- Heating Elements:** 2
- Color:** White
- Control Console:** Touch
- Voltage:** 110 Volts (AC)
- Wattage:** 2000 watts
- Fuel type:** Electric
- Material Type:** Vitroceramic glass

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided in the original product packaging or visit the official Karinear website. Keep your purchase receipt for warranty claims.

© 2024 Karinear. All rights reserved.