

[Manuals.plus](#) /

› [AEG](#) /

› AEG AS 52A212XN Animal 5000 Series Vacuum Cleaner User Manual

AEG 900402219

AEG AS 52A212XN Animal 5000 Series Vacuum Cleaner User Manual

Model: 900402219

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your AEG AS 52A212XN Animal 5000 Series Vacuum Cleaner. Please read this manual thoroughly before using the appliance and keep it for future reference.



Figure 1: AEG AS 52A212XN Animal 5000 Series Vacuum Cleaner

The AEG AS 52A212XN Animal 5000 Series is a versatile cordless stick vacuum cleaner designed for effective cleaning of various floor types, including carpets and hard floors, with specialized features for animal hair removal.

2. SAFETY INFORMATION

Always observe the following safety precautions to reduce the risk of fire, electric shock, or injury.

- Read all instructions before using the appliance.
- Do not use outdoors or on wet surfaces.

- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without dust bag and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Store the appliance indoors in a cool, dry place.
- Recharge only with the charger specified by the manufacturer.
- Do not modify or attempt to repair the appliance.

3. PACKAGE CONTENTS

Verify that all components are present and in good condition upon opening the package.



Figure 2: Included Components

The image displays the main vacuum unit along with various attachments and the charging station.

- AEG AS 52A212XN Animal 5000 Series Vacuum Cleaner (Main Unit)
- UltimatePower Multi-Floor Nozzle: Suitable for various floor coverings, highly effective on carpets.
- UltimatePower Hard Floor Nozzle: For extra thorough and gentle hard floor cleaning.
- PetPro Electro Suction Brush: For deep cleaning of upholstery, car seats, or beds - ideal for pet owners.
- Telescopic Crevice Tool: Especially helpful for cleaning hard-to-reach areas.
- Furniture Brush: Perfect for surface-gentle cleaning of small surfaces, edges, and moldings.
- Charging Station: For convenient charging of the cordless vacuum cleaner.
- User Manual (this document)

4. SETUP

4.1 Assembly

1. Unpack all components from the packaging.
2. Attach the desired cleaning nozzle (e.g., UltimatePower Multi-Floor Nozzle or Hard Floor Nozzle) to the main vacuum unit by aligning the connectors and pushing until it clicks into place.
3. For handheld use, detach the main floor nozzle and attach smaller accessories like the Crevice Tool or Furniture Brush directly to the main unit.

4.2 Charging the Battery

The vacuum cleaner is powered by a Lithium-Ion battery. Ensure the battery is fully charged before first use.

1. Place the charging station in a convenient location near a power outlet.
2. Connect the power adapter to the charging station and plug it into a wall outlet.
3. Place the vacuum cleaner onto the charging station. The charging indicator lights will illuminate to show charging status.
4. Allow the vacuum cleaner to charge completely. A full charge typically takes several hours. Refer to the indicator lights for charge completion.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off and Suction Control

- To turn the vacuum cleaner on, press the Power Button (Controller Type: Push Button).
- To adjust suction power, use the control method (Control Method: Touch). The vacuum cleaner features 2 power levels.
- To turn the vacuum cleaner off, press the Power Button again.

5.2 Cleaning Different Surfaces

The AEG AS 52A212XN is recommended for use on carpets, hardwood floors, and for animal hair removal.



Figure 3: Effective Hard Floor Cleaning

The UltimatePower Hard Floor Nozzle is designed for extra thorough and gentle cleaning on hard surfaces, removing up to 100% of dust even in small crevices.

5-STUFIGE FILTRATION

AXIALZYKLON-SCHMUTZTRENNUNG

SIEBFILTER

2-LAGIGER MOTORSCHUTZFILTER

FEINSTAUB-ABLUFTFILTER

ALLE FILTER SIND WASCHBAR

FÜR EIN GESÜNDERES ZUHAUSE

Das 5-stufige Filtrationssystem entfernt bis zu 99 % des Feinstaubs*

*Entfernt bis zu 99 % der Mikrostaubpartikel im Größenbereich von 0,3–10 µm basierend auf einem internen Test gemäß der Norm EN60312-1:2017

Figure 4: PetPro Electro Suction Brush in use

For thorough deep cleaning of upholstery and for effective animal hair removal, attach the PetPro Electro Suction Brush.

5.3 Special Features

- **LED Front Light:** The bright LED front light on the floor nozzle illuminates dark areas, ensuring better visibility during cleaning.



Figure 5: Practical LED Front Light

- **Self-Cleaning Brush Roll:** The brush roll features a self-cleaning function. Press the pedal to cut tangled hairs from the brush roll, maintaining optimal performance.

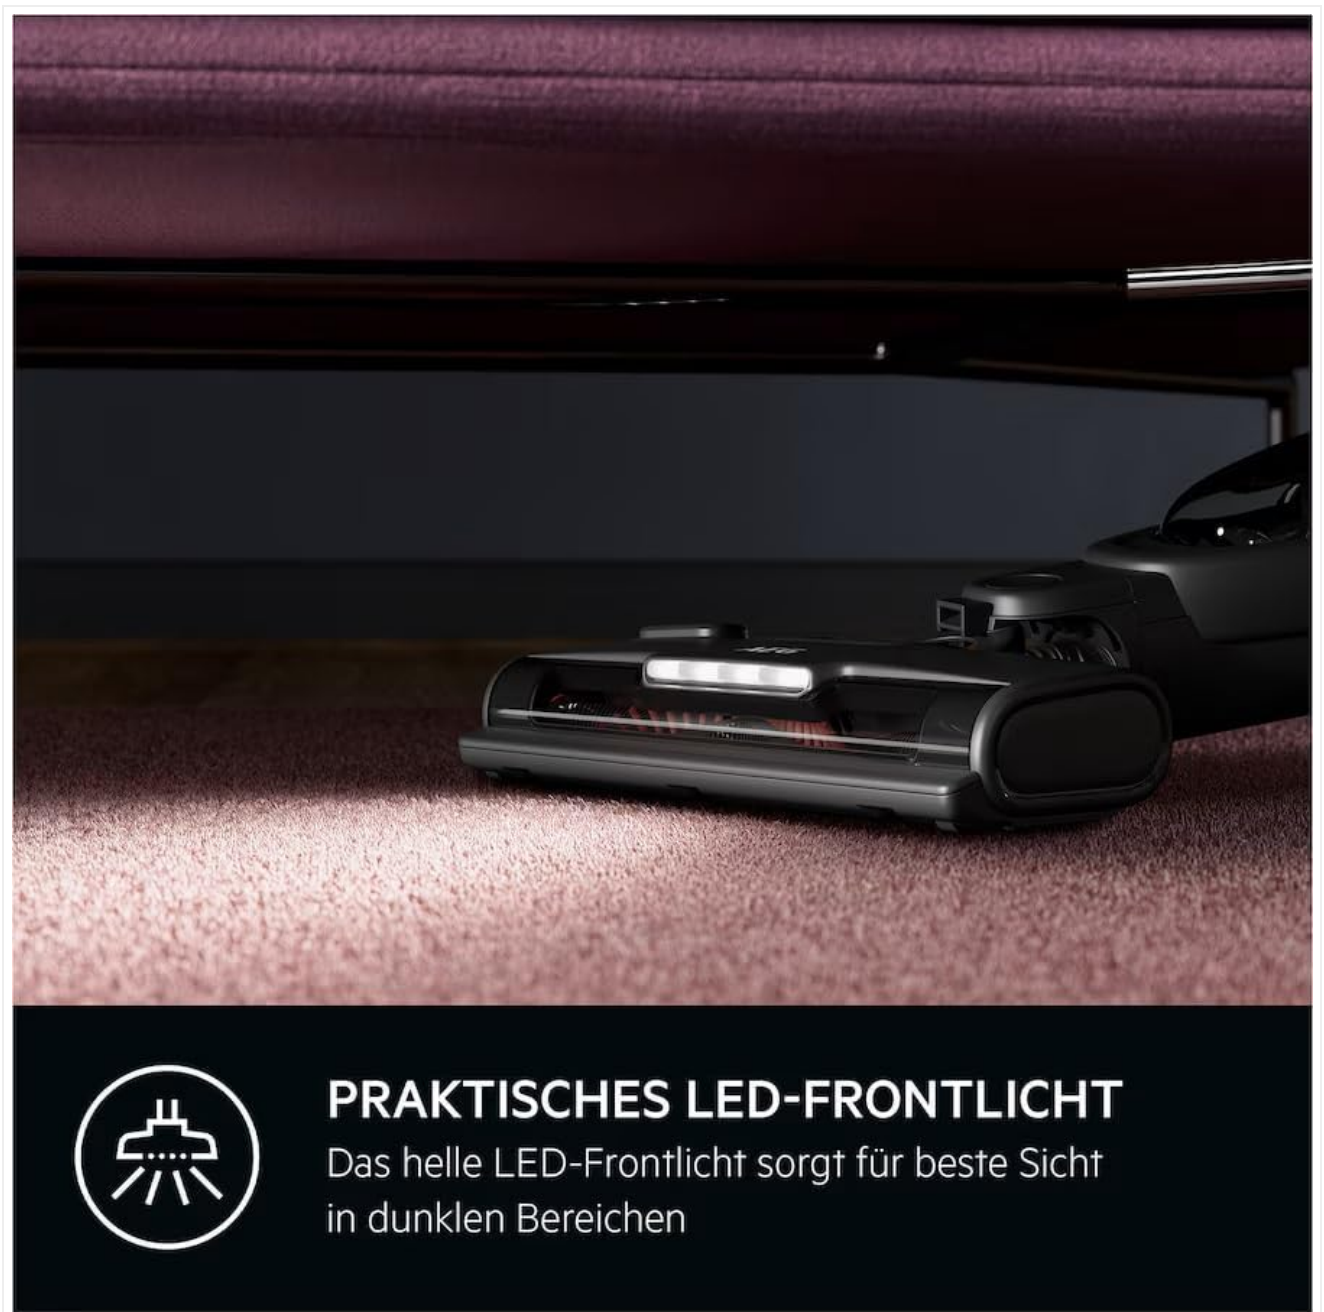


Figure 6: Self-Cleaning Brush Roll

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

6.1 Emptying the Dustbin

Empty the dustbin regularly, especially when it reaches the MAX fill line, to maintain strong suction power.

1. Ensure the vacuum cleaner is turned off.
2. Locate the dustbin release button and press it to detach the dustbin from the main unit.
3. Open the dustbin lid and empty the contents into a waste bin.
4. Close the dustbin lid and reattach it to the main unit until it clicks securely.

6.2 Cleaning the Filters

The AEG AS 52A212XN features a 5-stage filtration system, including a HEPA filter. All filters are washable.

IM LIEFERUMFANG ENTHALTENES ZUBEHÖR



ULTIMATEPOWER MULTI-BODENDÜSE

Für verschiedene Bodenbeläge,
besonders hochwirksam auf Teppichen



ULTIMATEPOWER HARTBODENDÜSE

Für eine extra gründliche und schonende
Hartbodenreinigung



PETPRO ELEKTROSAUGBÜRSTE

Für die Tiefenreinigung von Polstermöbeln,
Autositzen oder Betten – Ideal für Haustierbesitzer



TELESKOP-FUGENDÜSE

Besonders hilfreich für die Reinigung
von schwer zugänglichen Bereichen



MÖBELPINSEL

Perfekt zur oberflächenschonenden Reinigung
von kleinen Flächen, Kanten und Leisten



LADESTATION

Für bequemes Aufladen des Akku-Staubsaugers

Figure 7: 5-Stage Filtration System

The filtration system includes Axial Cyclone Dirt Separation, Sieve Filter, 2-Layer Motor Protection Filter, and Fine Dust Exhaust Filter, designed to remove up to 99% of micro-dust particles for a healthier home.

1. Turn off the vacuum cleaner and detach the dustbin.
2. Remove the filters from the dustbin assembly.
3. Tap off loose dirt from the filters.
4. Rinse the filters under cold running water until the water runs clear. Do not use detergents.
5. Allow the filters to air dry completely for at least 24 hours before reinserting them. Do not use a dryer or heat source.
6. Reassemble the filters and dustbin, then reattach to the vacuum cleaner.

6.3 Cleaning the Brush Roll

Even with the self-cleaning function, occasional manual cleaning of the brush roll may be necessary.

1. Ensure the vacuum cleaner is turned off and disconnected from the charging station.
2. Detach the floor nozzle from the main unit.

- 3. Locate the brush roll access cover (refer to diagrams in the full manual if needed) and open it.
- 4. Remove the brush roll. Use scissors to cut away any tangled hair or debris that the self-cleaning function did not remove.
- 5. Clean the brush roll and its housing with a dry cloth.
- 6. Reinsert the brush roll and close the access cover securely.

7. TROUBLESHOOTING

Before contacting customer support, try the following solutions for common issues.

Problem	Possible Cause	Solution
Vacuum cleaner does not turn on.	Battery is not charged.	Charge the battery fully.
	Power button not pressed correctly.	Ensure the power button is pressed firmly.
Reduced suction power.	Dustbin is full.	Empty the dustbin.
	Filters are clogged.	Clean or replace the filters.
Brush roll not spinning.	Nozzle or hose is blocked.	Check for and remove any blockages in the nozzle, tube, or hose.
	Hair or debris tangled in brush roll.	Activate the self-cleaning function or manually clean the brush roll.
	Nozzle attachment not properly secured.	Ensure the nozzle is securely attached.

8. SPECIFICATIONS

Feature	Detail
Brand	AEG
Model Number	900402219
Product Type	Vacuum Cleaner
Special Feature	Portable
Filter Type	HEPA Filter
Included Components	User Manual, UltimatePower Multi-Floor Nozzle, UltimatePower Hard Floor Nozzle, PetPro Electro Suction Brush, Telescopic Crevice Tool, Furniture Brush, Charging Station
Cordless	Yes

Feature	Detail
Recommended Uses	Carpet, Hardwood Floors, Animal Hair Removal
Form Factor	Stick
Battery Type	Lithium-Ion
Noise Level	79 dB
Number of Items	1
Controller Type	Push Button
Motor Horsepower	4.5 Horsepower
Control Method	Touch
Number of Power Levels	2
Indoor/Outdoor Usage	Outdoor
Product Dimensions (L x W x H)	6.3 x 31.5 x 17.72 inches
Item Weight	14.74 pounds

9. WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the warranty card included with your product or visit the official AEG website. Keep your proof of purchase for warranty claims. Online resources and FAQs may also be available on the manufacturer's website to assist with common questions and issues.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BXH5XSGL>

More documents and user manuals: <https://manuals.plus/>