

[Manuals.plus](#) /

› [OLEVS](#) /

› OLEVS GW-G2858 Quartz Analog Stainless Steel Men's Watch User Manual

OLEVS GW-G2858

OLEVS GW-G2858 Quartz Analog Stainless Steel Men's Watch User Manual

Model: GW-G2858

1. INTRODUCTION

Thank you for choosing the OLEVS GW-G2858 Quartz Analog Stainless Steel Men's Watch. This manual provides essential information for the proper setup, operation, and maintenance of your timepiece. Please read it carefully to ensure optimal performance and longevity of your watch.



Image 1: OLEVS GW-G2858 Quartz Analog Watch with included band adjustment tools.

2. SETUP

2.1 Setting Time and Date

Your OLEVS watch features a crown for adjusting the time and date. Refer to the diagram below for crown positions.

1. **To Set the Date:** Pull the crown out to the first position. Rotate the crown clockwise or counter-clockwise until the desired date is displayed in the date window.
2. **To Set the Time:** Pull the crown out to the second position. Rotate the crown to move the hour and minute hands to the correct time. Push the crown back in to the normal position to start the watch.

Multifunctional dial design



Chronometer
(9 o'clock position)



Chronograph hand
(6 o'clock position)



24 hour lunar phase dial
(3 o'clock position)



Calendar Window
(4~5 o'clock position)



▼ Side display

Start/pause timing button

Pull out the first gear
adjustment calendar

Pull out the second gear
adjustment time

Reset timing function button

Image 2: Multifunctional dial design and side display with crown/button functions.

2.2 Adjusting the Bracelet

The stainless steel bracelet can be adjusted to fit your wrist. A band adjustment tool is typically included with your watch. To adjust, locate the pins on the inside of the bracelet links. Use the tool to push out the pins from the links you wish to

remove. Reassemble the bracelet by inserting the pins back into the remaining links. If you encounter difficulty, professional assistance from a jeweler is recommended.

Wrist ceremony time

The sense of ritual on the wrist, with a sense of ritual at every moment, records with you The highlights of time show your style

ACCOMPANY YOU TO RECORD THE HIGHLIGHTS OF TIME AND SHOW YOUR STYLE



Image 3: OLEVS GW-G2858 watch worn on a wrist.

3. OPERATING THE WATCH

3.1 Chronograph Function

Your watch features a chronograph for measuring elapsed time. The dial includes three sub-dials:

- **9 o'clock position:** Chronometer (seconds)

- **6 o'clock position:** Chronograph hand (minutes)
- **3 o'clock position:** 24-hour lunar phase dial

Use the buttons on the side of the watch to control the chronograph:

- **Top Button:** Start/Pause timing function.
- **Bottom Button:** Reset timing function.

3.2 Luminous Display

The watch hands and markers are coated with a luminous material. This material absorbs light during the day and emits a glow in low-light conditions, allowing for clear readability at night.

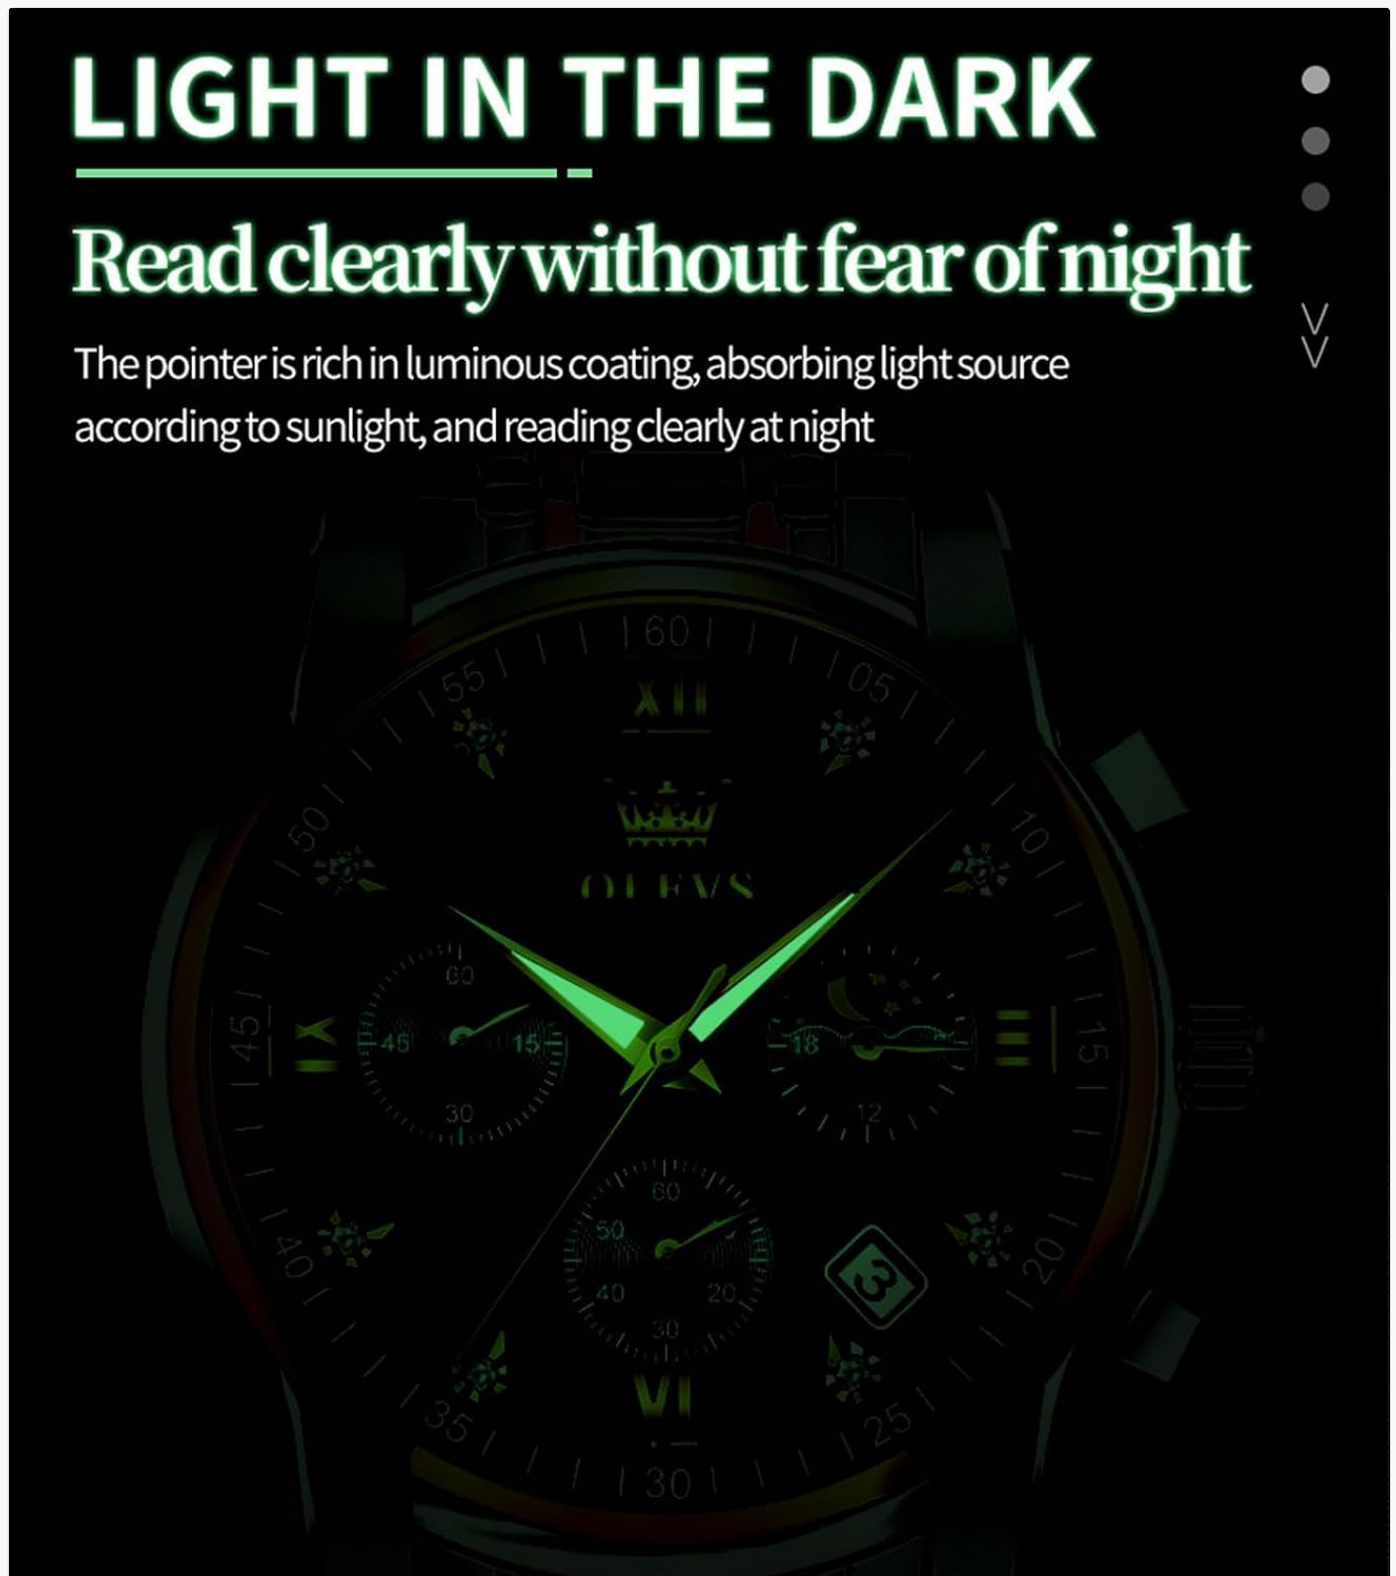


Image 4: Luminous display of the OLEVS GW-G2858 watch in the dark.

4. MAINTENANCE

4.1 Water Resistance

Your OLEVS GW-G2858 watch is water resistant up to 30 meters (3ATM). This rating means it is suitable for daily use, such as splashes or brief immersion in water. It is **not** suitable for bathing, swimming, diving, or any activities involving prolonged water exposure or high-pressure water.

4.2 General Care

- Clean your watch regularly with a soft, dry cloth to remove dust and dirt.
- Avoid exposing the watch to extreme temperatures, direct sunlight for extended periods, or strong magnetic fields.
- Prevent impacts or drops that could damage the internal mechanism or exterior.
- Ensure the crown is always pushed in completely to maintain water resistance.

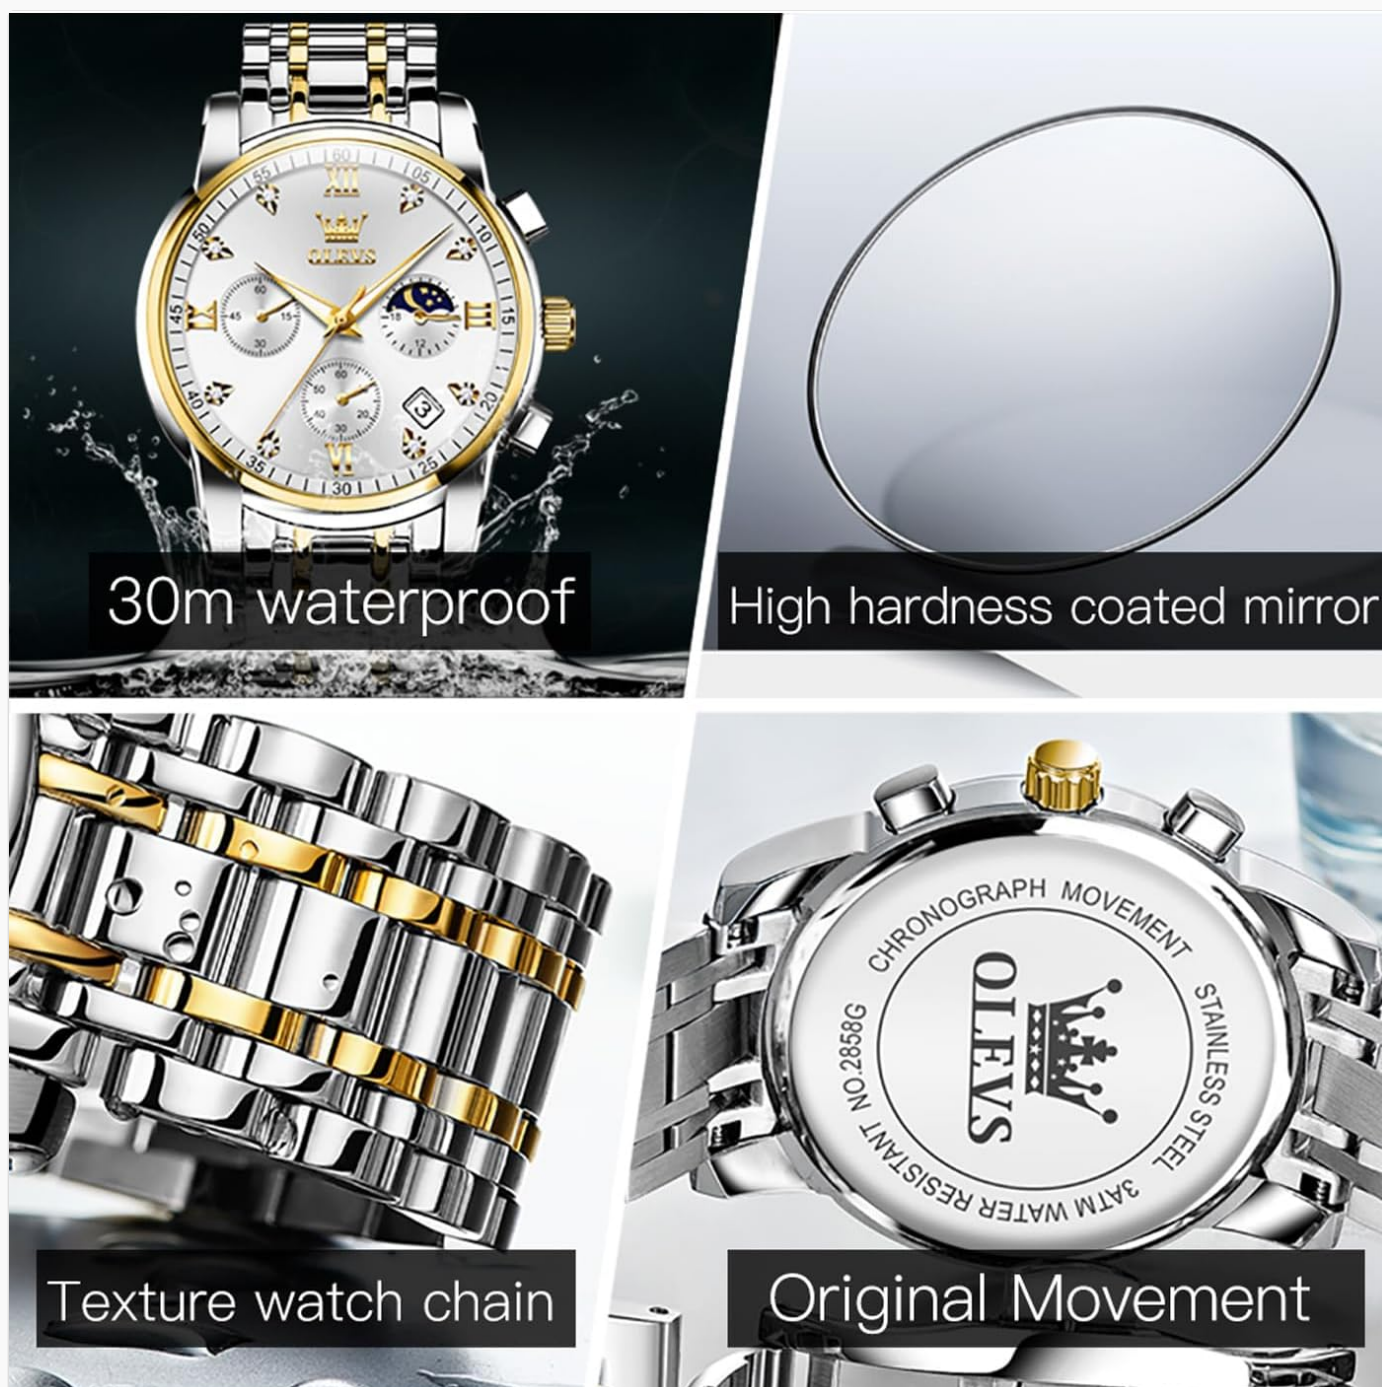


Image 5: Key features including 30m water resistance and high hardness coated mirror.

5. TROUBLESHOOTING

- **Watch Not Keeping Accurate Time:** As a quartz watch, it is designed for high precision. If the time deviation exceeds typical limits (e.g., more than 1 second per day), the battery may need replacement, or the movement may require inspection.
- **Date Not Advancing:** Ensure the crown is fully pushed in after setting the date. If the date still does not advance automatically, manually adjust it to the correct day. If the issue persists, professional service may be needed.
- **Difficulty Adjusting Bracelet:** The included tool is for basic adjustments. If you find it difficult to remove or add links, or if the tool breaks, seek assistance from a professional jeweler to avoid damaging the bracelet.

6. SPECIFICATIONS

Feature	Detail
Model Number	GW-G2858
Movement Type	Quartz
Case Material	Stainless Steel
Band Material	Stainless Steel
Water Resistance	30m (3ATM)
Dial Features	Chronograph (seconds, minutes), 24-hour lunar phase, Date Window, Luminous Hands/Markers
Manufacturer	OLEVS
Country of Origin	China

7. WARRANTY AND SUPPORT

Your OLEVS GW-G2858 watch comes with a **30-day free return policy** and a **24-month warranty** covering quality-related issues. For any questions, concerns, or warranty claims, please contact OLEVS customer support through your purchase platform or the official OLEVS website. Please retain your proof of purchase for warranty validation.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question