

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

> [Lazellz](#) /

> Lazellz Washing Machine Handle Instruction Manual for Blomberg Models 7169581500, 7169581600, WM77110NBL01, WM77120NBL01

Lazellz 7169581500, 7169581600, WM77110NBL01, WM77120NBL01

Lazellz Washing Machine Handle Instruction Manual

For Blomberg Models: 7169581500, 7169581600, WM77110NBL01, WM77120NBL01

1. PRODUCT OVERVIEW

This document provides essential information regarding the Lazellz replacement washing machine door handle. This component is designed to facilitate the opening and closing mechanism of your washing machine door.



Figure 1: White plastic washing machine door handle replacement part. This image displays the white plastic washing machine door handle, designed as a replacement component. It features a curved grip and attachment points for installation.

2. COMPATIBILITY

This Lazellz washing machine handle is compatible with the following Blomberg washing machine models:

- 7169581500
- 7169581600
- WM77110NBL01
- WM77120NBL01

Please verify your washing machine's model number to ensure proper fit and function.

3. INSTALLATION

Important Note: Detailed installation instructions are not included with this replacement part. Replacing washing machine components can be complex and may require specific tools and technical knowledge.

It is highly recommended to consult a qualified appliance technician for installation to ensure safety and proper functionality. Incorrect installation may lead to damage to the appliance or personal injury.

Before attempting any installation or repair, always ensure the washing machine is unplugged from the power outlet and the water supply is turned off.

4. OPERATION

The washing machine handle serves as the primary mechanism for opening and closing the appliance's door. To operate, grasp the handle firmly and pull it to release the door latch. To close, gently push the door until the handle mechanism engages, securing the door in place.

5. MAINTENANCE

To ensure the longevity and smooth operation of your washing machine handle, follow these general maintenance guidelines:

- **Cleaning:** Wipe the handle periodically with a soft, damp cloth to remove dirt and grime. Avoid using abrasive cleaners or solvents, as these can damage the plastic material.
- **Inspection:** Regularly inspect the handle for any signs of wear, cracks, or looseness. Address any issues promptly to prevent further damage.
- **Gentle Use:** Avoid excessive force when opening or closing the washing machine door, as this can stress the handle and its internal mechanisms.

6. TROUBLESHOOTING

If you encounter issues with your washing machine handle, consider the following:

- **Handle feels loose:** This may indicate that the handle's mounting screws or internal components are loose or damaged. Professional inspection is recommended.
- **Door not opening/closing properly:** Ensure there are no obstructions preventing the door from moving freely. The latch mechanism might be faulty, or the handle itself could be broken.
- **Visible damage:** If the handle is cracked or broken, it requires replacement.

For persistent issues, contact a qualified appliance repair technician.

7. PRODUCT SPECIFICATIONS

Attribute	Detail
Brand	Lazellz
Item Weight	3 ounces
Product Dimensions	9 x 8 x 2 inches
Color	White
Material	Plastic
Specific Uses For Product	Washing Machine Operation

UPC	810130966837
-----	--------------

8. SUPPORT

If you have questions regarding product compatibility or require assistance in selecting the correct item for your specific washing machine model, please contact the seller directly. Providing your washing machine's full model number will help expedite support.

