

Manuals.plus /

- › Beizuzu /
- › Beizuzu Cordless Immersion Hand Blender: 21-Speed & 3-Angle Adjustable with Stainless Steel Blades Instruction Manual

Beizuzu Hand Blender

Beizuzu Cordless Immersion Hand Blender Instruction Manual

1. INTRODUCTION

Thank you for choosing the Beizuzu Cordless Immersion Hand Blender. This manual provides essential information for the safe and efficient operation, maintenance, and care of your new appliance. Please read all instructions carefully before first use and retain this manual for future reference.





Figure 1: Beizuzu Cordless Immersion Hand Blender with blending attachment, shown alongside a blended drink and fruit.

2. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Keep hands, hair, and clothing, as well as spatulas and other utensils, away from moving blades during operation to prevent injury and/or damage to the appliance.
- Blades are sharp. Handle with care.
- Do not immerse the motor unit in water or other liquids. Only the blending shaft and attachments are designed for immersion.
- Ensure the appliance is fully charged before first use.
- Do not operate the appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- This appliance is not intended for use by children. Close supervision is necessary when any appliance is used near children.

- Avoid contact with moving parts.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Always disconnect the appliance from the power supply before assembling, disassembling, or cleaning.

3. PACKAGE CONTENTS

Your Beizuzu Cordless Immersion Hand Blender package includes the following components:

- Cordless Motor Unit (Main Handle)
- Immersion Blending Attachment (Stainless Steel)
- Whisk Attachment
- Beater Attachment
- Measuring Beaker (750 ml capacity)
- USB Charging Cable

4. PRODUCT FEATURES

- **Cordless & USB Rechargeable:** Equipped with a powerful rechargeable lithium-ion battery for optimal runtime and portability. Easily charges with the included USB cable.
- **Ergonomic Multi-Angle Operation:** Features three adjustable angles (90°, 135°, and 180°) for comfortable use in various containers and for different blending tasks.
- **Powerful & Adjustable 21-Speed:** A high-speed motor with 21 adjustable speed settings allows for precise control over blending consistency.
- **Multi-Functionality:** Ideal for preparing milkshakes, smoothies, purees, soups, marinades, sauces, baby food, and more.
- **Detachable Design:** Attachments can be easily switched and detached from the main unit for convenient cleaning and storage.
- **Durable Construction:** Features 304 stainless steel blades and a BPA-free design for safe and long-lasting use.



Figure 2: Key features of the blender, including 21 variable speed control, ergonomic handle, and anti-splash blades.

WIDELY USED



Figure 3: The blender is versatile for preparing a wide range of foods, including milkshakes, smoothies, soups, purees, sauces, and baby food.

5. SETUP

5.1 Charging the Appliance

1. Before first use, fully charge the motor unit.
2. Connect the USB charging cable to the charging port on the motor unit.
3. Plug the other end of the USB cable into a compatible USB power adapter (not included) or a USB port.
4. The battery indicator lights on the motor unit will illuminate to show charging progress. Once all lights are solid, the appliance is fully charged.



Figure 4: The cordless hand blender connected to a USB power source for charging.

5.2 Attaching/Detaching Accessories

1. Ensure the motor unit is turned off and disconnected from any power source.
2. Align the desired attachment (blending shaft, whisk, or beater) with the connection point on the bottom of the motor unit.
3. Twist the attachment clockwise until it locks securely into place.
4. To detach, twist the attachment counter-clockwise and pull it off.

6. OPERATING INSTRUCTIONS

6.1 Basic Operation

1. Attach the desired accessory firmly to the motor unit.
2. Press the **Power** button to turn on the appliance. The indicator lights will show the current battery level.
3. Immerse the blending attachment into the ingredients.
4. Press and hold the **Start** button to begin blending. Release the button to stop.

5. Adjust the speed by rotating the dial at the top of the motor unit. There are 21 variable speed settings.
6. After use, release the **Start** button and press the **Power** button to turn off the appliance.

6.2 Adjusting the Blending Angle

The motor unit can be adjusted to three different angles for enhanced versatility:

1. Locate the angle adjustment button on the side of the motor unit.
2. Press and hold this button.
3. Rotate the lower part of the motor unit to achieve the desired angle: 90°, 135°, or 180°.
4. Release the button to lock the angle in place.



Figure 5: The blender's handle can be adjusted to 90, 135, or 180 degrees for optimal control and comfort during use.

Your browser does not support the video tag.

Video 1: Demonstration of the cordless immersion blender's assembly, angle adjustment, and blending capabilities for smoothies.

7. MAINTENANCE AND CLEANING

7.1 Cleaning the Attachments

- Always ensure the appliance is turned off and attachments are removed from the motor unit before cleaning.
- The blending shaft, whisk, and beater attachments can be rinsed under running water or washed with warm, soapy water.
- Use a brush to clean around the blades of the blending shaft carefully.
- Dry all parts thoroughly before storing.

DETACHABLE & EASY TO CLEAN



Figure 6: The detachable design allows for easy removal of the blending head for thorough cleaning under running water.

7.2 Cleaning the Motor Unit

- Wipe the motor unit with a damp cloth. Do not immerse it in water or any other liquid.
- Do not use abrasive cleaners or scouring pads, as these may scratch the surface.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Low battery or not charged.	Charge the appliance fully using the USB cable.
Blades are not spinning.	Attachment not securely locked.	Ensure the attachment is twisted clockwise until it clicks into place.
Poor blending performance.	Incorrect speed setting or too much food.	Increase speed using the dial. Reduce the amount of ingredients. Ensure ingredients are cut into smaller pieces if necessary.
Appliance stops during operation.	Overload protection activated or low battery.	Turn off, remove some ingredients, and restart. Check battery level and recharge if needed.

9. SPECIFICATIONS

- **Brand:** Beizuzu
- **Model:** Hand Blender
- **Power Source:** DC
- **Voltage:** 7.4 Volts
- **Number of Speeds:** 21
- **Capacity (Beaker):** 750 Milliliters
- **Product Dimensions:** 2.9"D x 5.5"W x 10.6"H
- **Item Weight:** 1.9 pounds
- **Material Type:** BPA Free (for plastic components), 304 Stainless Steel (for blades/shaft)
- **Special Features:** 21-Speeds & Turbo Mode, Cordless, Ergonomic Multi-Angle Operation, USB Rechargeable

10. WARRANTY AND SUPPORT

This Beizuzu product comes with a full warranty. For detailed warranty information, product support, or service inquiries, please refer to the contact information provided with your purchase or visit the official Beizuzu website. Extended protection plans may also be available for purchase:

- 3-Year Protection Plan
- 4-Year Protection Plan
- Complete Protect (monthly plan covering eligible purchases)