

Surker RFC-5618

Surker Men's Hair Clipper & Grooming Kit User Manual

Model: RFC-5618

Introduction	Product Overview	Safety Information	Setup	Operation	Maintenance
	Troubleshooting	Specifications	Warranty & Support		

1. INTRODUCTION

Thank you for choosing the Surker Men's Hair Clipper and Grooming Kit. This comprehensive 7-in-1 grooming solution is designed to meet all your daily grooming needs, offering precision and versatility for hair, beard, and body trimming. This manual provides essential information on product components, safety guidelines, setup, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your device.

2. PRODUCT OVERVIEW

2.1 Kit Components

Your Surker grooming kit includes the main trimmer unit and a variety of interchangeable heads and accessories:

- **Main Trimmer Unit:** The core device with an all-metal body design, LED display for battery status, and USB charging capability.
- **T-Blade Trimmer Head:** Ideal for precise lines, detailing, and zero-gapped cuts.
- **Hair Clipper Head:** For general hair cutting and styling.
- **Nose/Ear Hair Trimmer Head:** Safely removes unwanted nose and ear hair.
- **Micro Shaver Head:** For a smooth, close shave on smaller areas.
- **Precision Trimmer Head:** For intricate detailing and shaping.
- **Beard Trimmer Head:** Specifically designed for beard grooming.
- **Body Trimmer Head:** For grooming body hair.
- **Guide Combs:** A total of 9 guide combs for various trimming lengths (1/3/5/7mm and 3/6/9/12/15mm).
- **Charging Cable:** USB cable for convenient charging.

- **Sideburn Comb:** For precise sideburn styling.
- **Cleaning Brush:** For removing hair debris from blades.
- **Storage Base:** Organizes and stores the main unit and various attachments.

2.2 Product Visuals



Figure 2.1: Complete Surker 7-in-1 Grooming Kit showing the main trimmer, various heads, guide combs, charging cable, cleaning brush, and storage base.

7 IN 1 Multi-Functional Grooming Kit



Figure 2.2: Visual representation of the seven interchangeable trimmer heads: T-blade Trimmer, Hair Clipper, Micro Shaver, Precision Trimmer, Nose Trimmer, Beard Trimmer, and Body Trimmer.

DETACHABLE ATTACHMENTS


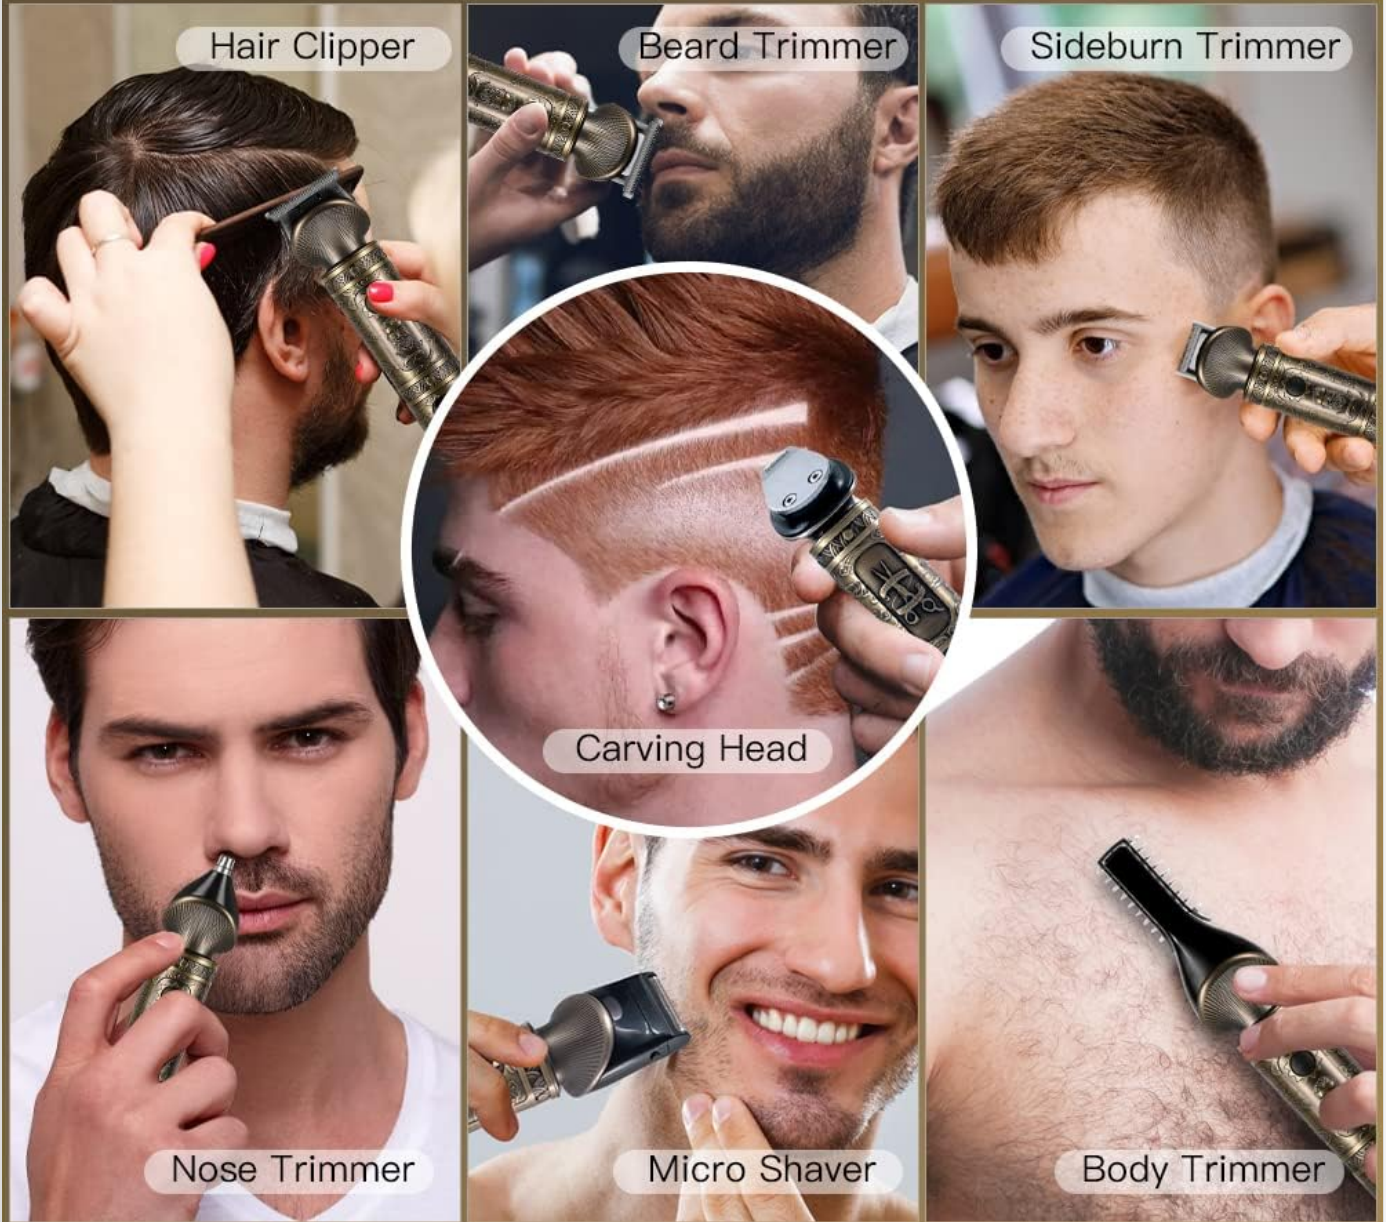


Figure 2.3: Demonstrations of various detachable attachments in use, including Hair Clipper, Beard Trimmer, Sideburn Trimmer, Carving Head, Nose Trimmer, Micro Shaver, and Body Trimmer.

MULTIPLE GUIDE COMBS FOR HAIR CUTTING

5 Guide Combs

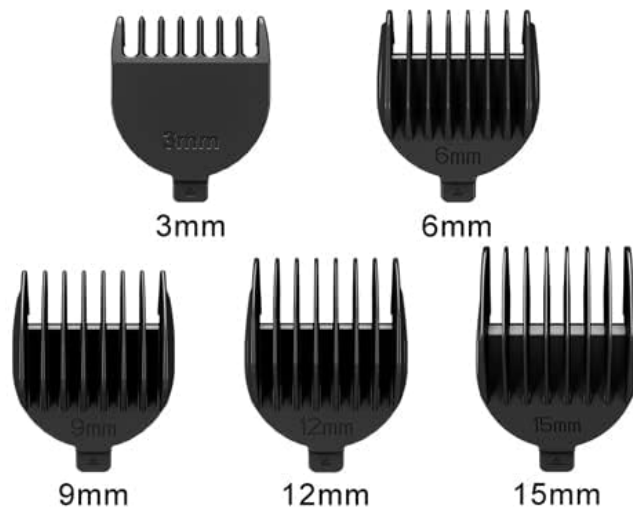

4 Guide Combs

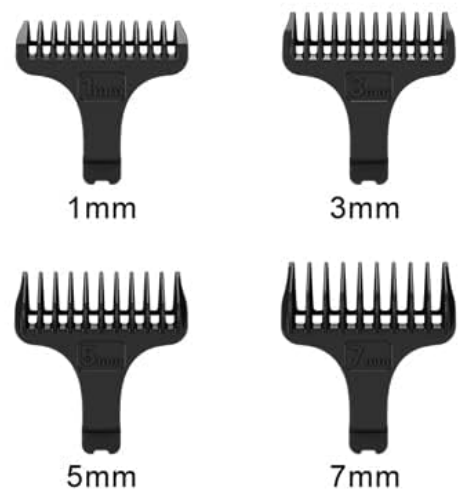


Figure 2.4: Illustration of the multiple guide combs provided for hair cutting, showing 5 guide combs (3mm, 6mm, 9mm, 12mm, 15mm) and 4 guide combs (1mm, 3mm, 5mm, 7mm).

3. SAFETY INFORMATION

Please read all safety instructions carefully before using the Surker grooming kit to prevent injury or damage to the device.

- Keep out of reach of children.
- Use caution when operating near eyes and ears.
- Do not use on injured or irritated skin.
- Clean and disinfect blades after each use to prevent infection.
- Do not immerse the entire unit in water. Only the cutter head is washable.
- For external use only.
- Ensure the device is fully charged before first use to optimize battery life.
- Do not attempt to repair or disassemble the unit yourself. Contact qualified personnel for service.

- Store the device in a dry place when not in use.

4. SETUP

4.1 Initial Charging

Before first use, fully charge the grooming kit. The device features a built-in rechargeable battery with an LED display indicating the remaining battery percentage.

1. Connect the provided USB charging cable to the charging port on the bottom of the trimmer unit.
2. Plug the other end of the USB cable into a compatible USB power source (e.g., computer, laptop, USB wall adapter, power bank).
3. The LED display will show charging progress. A full charge takes approximately 1.5 hours and provides up to 180 minutes of runtime.

**CHARGING
USB FAST CHARGING**

Up to 60 minutes runtime after fully charged

USB CONVENIENT CHARGING

computer Laptop Usbcharger Powerbank

1.5 Hours
Charge

180 Minutes
Runtime

Figure 4.1: The trimmer unit connected to a USB power source for charging. The LED display shows battery percentage. A 1.5-hour charge

provides 180 minutes of runtime.

4.2 Attaching and Detaching Trimmer Heads

The Surker grooming kit comes with multiple detachable trimmer heads for various grooming tasks.

1. To attach a head: Align the head with the main unit and gently push until it clicks into place.
2. To detach a head: Hold the main unit firmly and pull the attached head upwards away from the unit.

4.3 Attaching Guide Combs

Guide combs are used to achieve desired hair lengths.

1. Select the appropriate guide comb for your desired length.
2. Align the comb with the teeth of the trimmer head.
3. Slide the comb onto the trimmer head until it securely locks into position.
4. To remove, gently lift the comb from the back and slide it off.

5. OPERATING INSTRUCTIONS

5.1 General Operation

1. Ensure the desired trimmer head and guide comb (if needed) are securely attached.
2. Press the ON/OFF button to power on the device. The LED display will illuminate.
3. Hold the trimmer at a comfortable angle and move it against the direction of hair growth for best results.
4. After use, press the ON/OFF button to power off the device.



Figure 5.1: Close-up of the Surker trimmer highlighting key features such as sharp teeth, all-metal body design, LED display, ON/OFF button, and USB charge port.

5.2 Specific Trimmer Head Usage

- **T-Blade Trimmer / Hair Clipper:** Use for precise lines, edging, and general hair cutting. For zero-gapped cuts, use without a guide comb.



Figure 5.2: The zero-gapped T-blade trimmer head designed not to hurt the scalp, shown with various guide combs (1mm, 3mm, 5mm, 7mm).

- **Nose/Ear Hair Trimmer:** Gently insert the trimmer tip into the nostril or ear canal. Move in a circular motion to trim unwanted hair. Do not insert too deeply.
- **Micro Shaver:** For a close, smooth finish on small areas like cheeks or necklines. Hold flat against the skin and move in short, gentle strokes.
- **Precision Trimmer:** Ideal for intricate designs, shaping beards, or creating sharp lines. Use with precision and care.

MULTIPLE GUIDE COMBS FOR HAIR CUTTING



Figure 5.3: The precision comb attachment for detailed trimming and the body hair trimmer head with adjustable length settings.

- **Beard Trimmer:** Use with appropriate guide combs to maintain beard length. For shaping, use without a comb.
- **Body Trimmer:** For grooming body hair. Use with or without guide combs depending on desired length.

6. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your grooming kit.

6.1 Cleaning

- After each use, turn off the trimmer and detach the cutter head.
- Use the provided cleaning brush to remove hair clippings from the blades and the trimmer head.
- **Important:** Only the cutter head is washable. DO NOT immerse the entire clipper in running water or any liquid.
- Rinse the detached cutter head under running water to remove any remaining debris.
- Allow the cutter head to air dry completely before reattaching it to the main unit or storing.

6.2 Blade Care

For best cutting performance, periodically apply a small drop of clipper oil (not included) to the blades. Turn on the trimmer for a few seconds to distribute the oil evenly.

6.3 Battery Preservation

To preserve the life of the Lithium-Ion battery, it is recommended to let the battery run out completely every six months and then charge it for 2 hours.

7. TROUBLESHOOTING

If you encounter issues with your Surker grooming kit, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is depleted.	Charge the trimmer for at least 1.5 hours. Check the LED display for battery status.
Poor cutting performance or pulling hair.	Blades are dull, dirty, or not oiled.	Clean the blades thoroughly with the brush. Apply a drop of clipper oil. If issues persist, blades may need replacement (contact support).
Trimmer makes unusual noise.	Hair caught in blades or head not properly attached.	Clean blades. Ensure the trimmer head is securely attached.
LED display not working.	Device malfunction.	Ensure the device is charged. If the problem persists, contact customer support.

8. SPECIFICATIONS

Feature	Detail
Model Name	RFC-5618
Brand	Surker
Power Source	Battery Powered
Battery Type	Lithium-Ion
Charging Time	1.5 Hours
Runtime	Up to 3 hours (180 minutes)
Blade Material	Stainless Steel
Included Components	7 accessories (T-blade trimmer, hair clipper, nose/ear hair trimmer, micro shaver, precision trimmer, beard trimmer, body trimmer head), 9 guide combs, charging cable, sideburn comb, cleaning brush, storage base.
Dimensions	21.6 x 14.3 x 6.8 cm

Feature	Detail
Weight	660 g
Country of Origin	China

9. WARRANTY & SUPPORT

For specific warranty information and customer support, please refer to the documentation included with your product packaging or contact Surker customer service directly. Keep your purchase receipt as proof of purchase for any warranty claims.

Legal Disclaimer: Actual product packaging and materials may contain more and different information than what is shown in this manual. We recommend that you do not rely solely on the information presented and that you always read labels, warnings, and directions before using or consuming a product.

© 2025 Surker. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question