

manuals.plus /

› [Timex](#) /

› [Timex TW5M26600 Digital Watch User Manual](#)

Timex TW5M26600

Timex TW5M26600 Digital Watch User Manual

Model: TW5M26600

INTRODUCTION

This manual provides comprehensive instructions for the Timex TW5M26600 Digital Watch. Please read this manual carefully to understand the functions and proper operation of your watch. This watch is designed for durability and reliability, featuring a robust resin case and a digital display.

PRODUCT OVERVIEW



Figure 1: Front View

This image displays the front of the Timex TW5M26600 Digital Watch. It features a black resin case, a digital display with time, date, and mode indicators, and yellow accents around the display and on the pushers. The strap has a camouflage pattern.



Figure 2: Side View

This image shows the side profile of the Timex TW5M26600 Digital Watch, highlighting the textured pushers on the side of the black resin case. The thickness of the watch case is visible, along with the connection points for the camouflage strap.





Figure 3: Strap View

This image presents a view of the Timex TW5M26600 Digital Watch's camouflage silicone strap, showing the buckle and the strap keeper. The Timex logo is visible on the buckle, emphasizing the brand's presence.

SETUP

Initial Setup and Time Setting

1. **Activate the Watch:** If the display is off, press any button to activate the watch.
2. **Enter Set Mode:** Press and hold the **SET/RECALL** button (usually top-left) until the display flashes, indicating you are in set mode.
3. **Adjust Time:** Use the **START/LAP** button (top-right) to increase the value and the **STOP/RESET** button (bottom-right) to decrease.
4. **Navigate Fields:** Press the **MODE** button (bottom-left) to move between hours, minutes, seconds, 12/24-hour format, year, month, and day.

5. **Save Settings:** Once all settings are adjusted, press the **SET/RECALL** button again to exit set mode and save your changes.

Indiglo Night-Light

To activate the Indiglo night-light, press the **INDIGLO** button (usually top-right or a dedicated button). The display will illuminate for a few seconds, allowing visibility in low-light conditions.

OPERATING INSTRUCTIONS

Navigating Modes

Press the **MODE** button (bottom-left) repeatedly to cycle through the different functions of the watch. The available modes typically include:

- **Time Mode (CHR):** Displays current time, day, and date.
- **Chronograph (TMR):** Stopwatch function for measuring elapsed time.
- **Timer (ALM):** Countdown timer.
- **Alarm (REP):** Set daily alarms.

Using the Chronograph

1. **Enter Chronograph Mode:** Press **MODE** until "CHR" or "STOPWATCH" appears.
2. **Start/Stop:** Press **START/LAP** to begin timing. Press again to pause.
3. **Lap/Split:** While timing, press **LAP** (often the same as START/LAP or a dedicated button) to record lap times without stopping the main timer.
4. **Reset:** Press **STOP/RESET** to clear the chronograph to zero.

Setting and Using the Alarm

1. **Enter Alarm Mode:** Press **MODE** until "ALM" or "ALARM" appears.
2. **Set Alarm Time:** Press and hold **SET/RECALL** to enter alarm setting mode. Use **START/LAP** and **STOP/RESET** to adjust hours and minutes. Use **MODE** to switch between hours and minutes.
3. **Activate/Deactivate Alarm:** In Alarm Mode, press **START/LAP** to toggle the alarm ON/OFF. An alarm icon will appear when active.
4. **Snooze:** When the alarm sounds, press any button (except **STOP/RESET**) to activate snooze. The alarm will sound again after a few minutes.
5. **Stop Alarm:** Press **STOP/RESET** when the alarm sounds to turn it off completely.

MAINTENANCE

Cleaning Your Watch

To maintain the appearance of your watch, wipe it regularly with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials, as these can damage the resin case and strap.

Water Resistance

The Timex TW5M26600 is water-resistant up to 20 ATM (200 meters). This means it is suitable for professional marine activity and serious surface water sports, but not for diving. *Do not press any buttons while the watch is submerged in*

water. Ensure the crown (if applicable) is fully pushed in before exposing the watch to water.

Battery Replacement

The watch is powered by a long-life battery. When the display becomes dim or functions become erratic, it may be time for a battery replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and maintain water resistance.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Low battery.	Replace the battery.
Buttons are unresponsive.	Watch may be in a locked mode or internal issue.	Try a soft reset (refer to manual if available, or remove/reinsert battery if comfortable). If issue persists, contact support.
Time is incorrect.	Time not set correctly or accidental adjustment.	Re-set the time following the "Initial Setup and Time Setting" instructions.
Water inside the watch.	Water resistance compromised (e.g., buttons pressed underwater, seal failure).	Immediately take the watch to a qualified technician for inspection and repair to prevent further damage.

SPECIFICATIONS

- Brand:** Timex
- Model Number:** TW5M26600
- Case Material:** Resin
- Case Diameter:** 47mm (as per product description)
- Strap Material:** Silicone (camouflage pattern)
- Display Type:** Digital
- Water Resistance:** 20 ATM (200 meters)
- Features:** Indiglo Night-Light, Chronograph, Timer, Alarm
- Product Dimensions:** 10.5 x 10.5 x 8 cm; 60 grams (from shipping dimensions)







WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your purchase or visit the official Timex website. Timex provides support for product inquiries, service, and repairs.

For extended protection plans, please refer to options available at the point of purchase, such as those offered by Salama for 1 or 2 years.



Related Documents - TW5M26600

	<p>Руководство по эксплуатации часов Timex</p> <p>Подробное руководство по эксплуатации часов Timex, охватывающее настройку времени, использование хронографа, водонепроницаемость, регулировку браслета и функции подсветки INDIGLO® для различных механизмов Timex.</p>
	<p>Timex Analog Watch User Manual - Features, Settings, and Care</p> <p>Comprehensive user guide for Timex Analog watches, covering setup, features like INDIGLO® Night-Light, water resistance, alarms, perpetual calendar, and maintenance. Available in multiple languages.</p>
	<p>Timex Kids Digital Watch User Guide - Operation and Features</p> <p>Comprehensive user guide for the Timex Kids digital watch (model 791-095007). Covers features, basic operations, setting time and date, chronograph, alarm, timer, INDIGLO night light, water resistance, strap adjustments, battery information, and warranty details.</p>
	<p>Timex Atelier Marine M1a User Manual and International Warranty</p> <p>Comprehensive user manual and international warranty details for the Timex Atelier Marine M1a watch. Includes product specifications, instructions for setting the time and adjusting the bracelet, and warranty coverage information.</p>
	<p>Timex Ironman 50-Lap Watch User Manual</p> <p>Comprehensive user manual for the Timex Ironman 50-Lap watch, detailing features, operations, and maintenance for optimal use.</p>
	<p>Timex Watch User Manual and International Warranty</p> <p>Comprehensive guide to Timex watches, including operating instructions, water resistance details, battery replacement, and international warranty information. Features INDIGLO night-light and strap adjustment for Timex Kids and Timex Jr. models.</p>

Documents - Timex – TW5M26600

no relevant documents