

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [Timex](#) /

› Timex Men's Digital Watch TW2U17100 Instruction Manual

## Timex TW2U17100

# Timex Men's Digital Watch TW2U17100 Instruction Manual

Model: TW2U17100

## INTRODUCTION

---

This manual provides essential instructions for setting up, operating, maintaining, and troubleshooting your Timex Men's Digital Watch Model TW2U17100. Please read this guide thoroughly to ensure proper use and longevity of your timepiece.

The Timex Command Urban TW2U17100 digital watch for men features a durable design with a gold-tone stainless steel bracelet and a digital display. The watch case is constructed from resin, providing robustness and reliability. With a 47mm square gold-tone resin case, this timepiece is suitable for various daily activities.

## SETUP

---

### Initial Activation and Time Setting

Your watch is typically shipped with a battery installed. If the display is blank, press any button to activate it. To set the time and date:

1. Locate the control buttons on the side of the watch case.
2. Press and hold the **SET** button (usually top-left) until the time display begins to flash.
3. Use the **MODE** or **ADJUST** buttons (usually bottom-left or right) to cycle through hours, minutes, year, month, and day settings.
4. Use the **START/STOP** or **LIGHT** buttons (usually top-right or bottom-right) to increase or decrease the flashing value.
5. Once all settings are correct, press the **SET** button again to confirm and exit the setting mode.



Image: Side view of the Timex TW2U17100 watch, highlighting the control buttons on the right side of the case. These buttons are used for setting time, date, and accessing various functions.

## OPERATING INSTRUCTIONS

---

### Basic Functions

- **Time Display:** The watch displays time in a digital format. It may offer 12-hour or 24-hour modes, selectable in the setup menu.
- **Date Display:** The date (month, day, year) can be viewed by pressing the **MODE** button.
- **Backlight:** Press the **LIGHT** button (if available) to illuminate the display for a few seconds in low-light conditions.

### Water Resistance

This watch is water-resistant up to 10 ATM (103 meters). This means it is suitable for showering, swimming, and snorkeling. It is not recommended for scuba diving or high-impact water sports. Do not operate buttons while the watch is wet or submerged to prevent water intrusion.

## MAINTENANCE

---

### Cleaning

To clean your watch, wipe it with a soft, dry cloth. For the stainless steel bracelet, a slightly damp cloth can be used, followed by a dry cloth. Avoid using harsh chemicals, solvents, or abrasive cleaners, as these can damage the watch's finish or internal components.

### Battery Replacement

The watch is powered by a quartz battery. When the display dims or stops functioning, the battery may need replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and maintain water resistance.



Image: Rear view of the Timex TW2U17100 watch, displaying the stainless steel case back with engraved information and the gold-tone stainless steel bracelet with its deployment clasp.

## Storage

When not in use, store your watch in a cool, dry place away from direct sunlight and extreme temperatures. Avoid exposing it to strong magnetic fields.

## TROUBLESHOOTING

- **Display is blank or dim:** The battery may be low or depleted. Replace the battery.
- **Time is incorrect:** Reset the time and date following the instructions in the "Setup" section. Ensure the correct AM/PM setting if using 12-hour format.
- **Buttons are unresponsive:** Ensure the watch is not in a locked mode (if applicable, consult specific model features). If the issue persists, a battery replacement or professional inspection may be required.
- **Condensation under crystal:** This indicates a loss of water resistance. Avoid further water exposure and have the watch inspected by a professional immediately.

## SPECIFICATIONS

| Feature      | Detail    |
|--------------|-----------|
| Brand        | Timex     |
| Model Number | TW2U17100 |
| Display Type | Digital   |

|                           |                     |
|---------------------------|---------------------|
| Movement                  | Quartz              |
| Case Material             | Resin (Gold-tone)   |
| Case Diameter             | 47 millimeters      |
| Case Thickness            | 12.5 millimeters    |
| Band Material Type        | Stainless Steel     |
| Band Color                | Gold                |
| Band Width                | 22 millimeters      |
| Clasp Type                | Deployment Clasp    |
| Dial Window Material Type | Mineral Glass       |
| Water Resistance Depth    | 103 meters (10 ATM) |
| Special Features          | Easy Reader         |
| Power Source              | Battery Powered     |
| Item Weight               | 106 grams           |

## WARRANTY

---

This Timex watch is covered by a one-year limited warranty from the manufacturer. The warranty typically covers manufacturing defects in materials and workmanship under normal use. It does not cover damage resulting from improper handling, accidents, unauthorized repairs, or normal wear and tear. Please retain your proof of purchase for warranty claims.

## SUPPORT

---

For further assistance, technical support, or warranty service, please contact Timex customer service. Refer to the official Timex website or your product packaging for the most current contact information and support resources.

You can often find additional FAQs and detailed guides on the manufacturer's support pages.