

RED5 89309

RED5 Wireless Rainbow Party Speaker User Manual

Model: 89309

INTRODUCTION

Thank you for purchasing the RED5 Wireless Rainbow Party Speaker. This manual provides essential information for setting up, operating, and maintaining your speaker. Please read it thoroughly before use to ensure optimal performance and longevity of the product.

PRODUCT OVERVIEW

The RED5 Wireless Rainbow Party Speaker is designed to deliver rich sound with vibrant RGB LED lighting. It features multiple input options and includes a wired microphone for karaoke or public address.

Key Features:

- RGB LED Colour Changing Lights
- Bluetooth 5.0 Connectivity
- Super Deep Bass
- Rechargeable Built-In Battery
- Multiple Inputs: FM Radio, USB, TF Card, Auxiliary
- Wired Microphone Included
- Internal Microphone for Calls

Package Contents:

- RED5 Wireless Rainbow Party Speaker
- USB Cable
- Wired Microphone
- User Manual (this document)

Component Identification:



Figure 1: Top Panel Controls and Ports

This image displays the top panel of the speaker, highlighting the microphone input, DC 5V charging port, ON/OFF switch, TF card slot, and USB port. Control buttons for mode, volume, and track selection are also visible.



Figure 2: Front View of Speaker

A direct front view of the RED5 speaker, showcasing its central speaker grille and the vibrant rainbow LED lighting effect around the speaker body.

SETUP

Charging the Speaker:

1. Locate the DC 5V charging port on the top panel of the speaker.
2. Connect the provided USB cable to the speaker's DC 5V port.
3. Connect the other end of the USB cable to a compatible USB power adapter (not included) or a computer USB port.
4. The charging indicator light will illuminate during charging and turn off when fully charged.
5. A full charge typically takes approximately 3-4 hours.

Initial Power On:

Before first use, ensure the speaker is fully charged. Slide the ON/OFF switch on the top panel to the "ON" position to power on the speaker.

OPERATING INSTRUCTIONS

Power On/Off:

- To power on, slide the ON/OFF switch to "ON".
- To power off, slide the ON/OFF switch to "OFF".

Mode Selection:

Press the "M" (Mode) button on the top panel to cycle through available modes: Bluetooth, FM Radio, USB, TF Card, and Auxiliary Input.

Bluetooth Pairing:

1. Power on the speaker. It will automatically enter Bluetooth pairing mode, indicated by an audible prompt.
2. Enable Bluetooth on your mobile device (smartphone, tablet, etc.).
3. Search for "RED5 Speaker" in your device's Bluetooth list.
4. Select "RED5 Speaker" to connect. Once paired, you will hear a confirmation sound.
5. The speaker will automatically reconnect to the last paired device when powered on, if the device is within range and Bluetooth is enabled.

FM Radio Mode:

1. Press the "M" button to switch to FM Radio mode.
2. Press and hold the Play/Pause (▶▶) to automatically scan and save available FM stations.
3. Use the Previous (◀◀) and Next (▶▶) buttons to navigate between saved stations.

USB/TF Card Playback:

1. Insert a USB flash drive or TF (microSD) card into the respective port on the top panel.
2. The speaker will automatically switch to USB or TF Card mode and begin playing audio files.
3. Use the Play/Pause (▶▶), Previous (◀◀), and Next (▶▶) buttons to control playback.

Auxiliary Input:

- Connect an external audio device (e.g., MP3 player, laptop) to the speaker's auxiliary input port using a 3.5mm audio cable (not included).
- The speaker will automatically switch to Auxiliary mode.
- Control playback from your connected device.

Microphone Usage:

- Plug the wired microphone into the "MIC" port on the top panel.
- Ensure the microphone's ON/OFF switch is set to "ON".
- Adjust the speaker's master volume for microphone output. Note: Microphone volume is not independently adjustable on the speaker.

Volume Control:

- Press the "+" button to increase volume.

- Press the "-" button to decrease volume.

Call Function (Bluetooth Mode):

- When a call comes in during Bluetooth mode, press the Play/Pause button (▶▶) to answer.
- Press the Play/Pause button (▶▶) again to end the call.
- The speaker has an internal microphone for hands-free calling.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the speaker's exterior. Do not use abrasive cleaners, waxes, or solvents.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures when not in use for extended periods.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in use, to maintain battery health.
- **Water Exposure:** This speaker is not waterproof. Avoid exposure to water or high humidity.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is low or depleted.	Charge the speaker using the provided USB cable.
No sound from speaker.	Volume is too low; incorrect mode selected; device not connected properly.	Increase volume; press "M" button to select correct mode; ensure Bluetooth is paired or cables are securely connected.
Bluetooth pairing fails.	Speaker is not in pairing mode; device is too far; interference.	Ensure speaker is in Bluetooth mode; move device closer to speaker; turn off other Bluetooth devices nearby.
Microphone not working.	Microphone not plugged in correctly; microphone switch is off.	Ensure microphone is fully inserted into the "MIC" port; slide the microphone's ON/OFF switch to "ON".
Poor FM radio reception.	Weak signal; environmental interference.	Relocate the speaker to an area with better reception; re-scan for stations.

SPECIFICATIONS

Model Name:	RED5 Speaker 89309
Brand:	RED5
Product Dimensions:	20 x 19 x 26.5 cm (L x W x H)
Weight:	1.3 kg
Connectivity Technology:	Bluetooth, Auxiliary, USB
Bluetooth Version:	5.0

Audio Output Mode:	Surround
Input Voltage:	5 Volts
Battery:	1 Lithium Ion battery (required)
Material:	Plastic
Special Features:	Wireless, Bass Boost, Portable, Built-In Microphone, RGB LED Lights

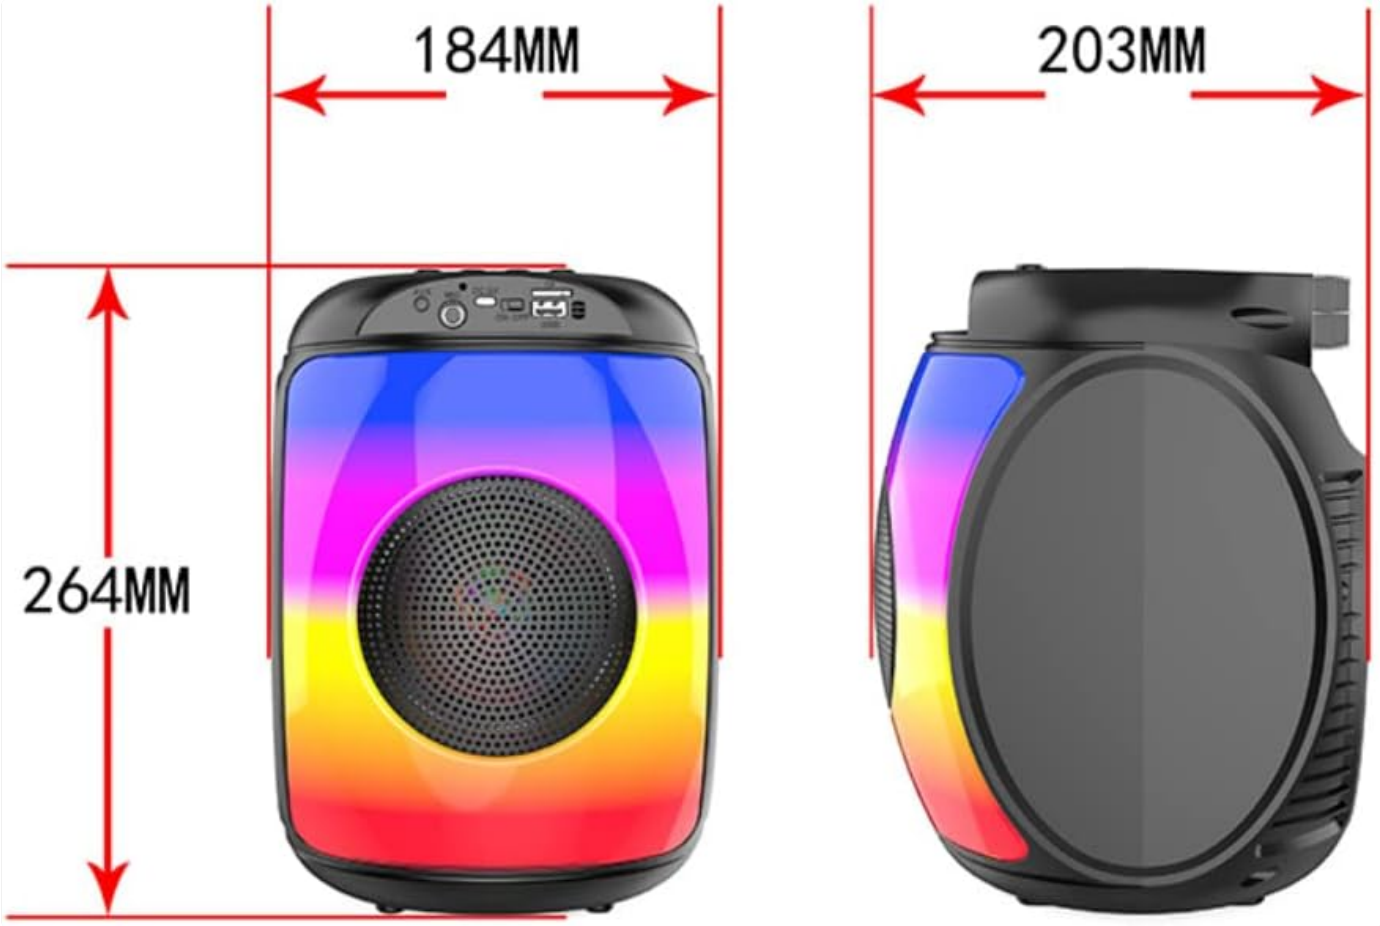


Figure 3: Speaker Dimensions

This diagram illustrates the physical dimensions of the speaker: approximately 264mm (height), 184mm (width), and 203mm (depth).

SAFETY INFORMATION

- Do not expose the speaker to extreme temperatures, direct sunlight, or high humidity.
- Do not disassemble, repair, or modify the unit yourself. Refer all servicing to qualified personnel.
- Keep the speaker away from sources of strong magnetic fields.
- Do not drop or subject the speaker to strong impacts.
- Dispose of the product and its battery responsibly according to local regulations.
- Keep out of reach of children and pets.

WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. For detailed warranty information, please refer to the warranty card included in your product packaging or contact the retailer where you purchased the product. For technical support or inquiries, please contact RED5 customer service through their official website or the contact information

provided with your purchase.
For further assistance, please visit the [RED5 Store on Amazon](#).

© 2024 RED5. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question