

[Manuals.plus](#) /

› [Dpofirs](#) /

› Dpofirs 1080P 16MP Digital Video Camera Camcorder User Manual

Dpofirs Dpofirsz9kg2fbnmu-12

Dpofirs 1080P 16MP Digital Video Camera Camcorder User Manual

Model: Dpofirsz9kg2fbnmu-12

INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your Dpofirs 1080P 16MP Digital Video Camera Camcorder. Please read through these instructions carefully to ensure optimal performance and longevity of your device.

WHAT'S IN THE BOX

- Digital Video Camera
- USB Power Cord
- Audio Cable
- User Manual



Image: The Dpofirs camcorder shown alongside its USB power cord and audio cable.

PRODUCT FEATURES

- **2.7-inch LCD Display:** Features a 2.7-inch LCD display that supports 270° rotation for flexible viewing and recording angles.
- **1080P Video Recording:** Capable of recording full 1080P video, capturing dynamic and clear footage.
- **16X Digital Zoom:** Equipped with 16x digital zoom to bring distant subjects closer.
- **USB Interface:** Includes a USB interface for easy connection to a computer to transfer files, watch, and edit videos or photos.
- **Built-in Flash:** A built-in flash allows for taking photos in low-light environments.
- **1/4-inch Screw Interface:** A 1/4-inch screw interface at the bottom provides compatibility with tripods and other accessories.



Image: A detailed view of the camcorder's video lens, showing aperture and focal length markings.



With its own 16x zoom, the high definition camera shooting can also be clearly visible. The camera has a USB interface, which can be connected to a computer to transfer files, watch and edit videos or photos. With a built in flash, you can take normal photos even in dark environments.



Image: The camcorder with its screen open, displaying text highlighting its 16x zoom, USB interface, and built-in flash capabilities.

PRODUCT OVERVIEW

The Dpofirs camcorder is designed for ease of use, featuring a compact body and intuitive controls. Its lightweight design makes it suitable for various recording situations.



Image: A hand holding the Dpofirs camcorder with the screen open and rotated, showing the compact size and ergonomic design.



Image: The Dpofirs camcorder with its screen fully open and extended, ready for use.



Image: Rear view of the Dpofirs camcorder, highlighting the control buttons and battery compartment.

SETUP

Battery Installation

Open the battery compartment cover. Insert the provided rechargeable battery, ensuring correct polarity. Close the compartment cover securely.

SD Card Installation

Locate the SD card slot, typically found on the side or bottom of the camcorder. Insert a compatible SD card (up to 32GB recommended) until it clicks into place. Close the slot cover.

Charging the Battery

Connect the USB power cord to the camcorder's USB port and the other end to a USB power adapter or computer. The charging indicator light will illuminate. A full charge typically takes approximately 1 hour per

battery.





Image: A close-up of the USB charging cable included with the Dpofirs camcorder.

OPERATING INSTRUCTIONS

Power On/Off

Open the LCD screen to power on the camcorder. Close the LCD screen to power off the camcorder.

Recording Videos

With the camcorder powered on and in video mode, press the Record button (usually a red button) to start recording. Press it again to stop.

Taking Photos

Switch the camcorder to photo mode. Frame your shot using the LCD screen, then press the Shutter button to capture a photo.

Zoom Function

Use the zoom rocker switch, typically located on the top of the camcorder, to zoom in (T) or zoom out (W). Note that this is a digital zoom function.

Menu Navigation

Press the 'MENU' button to access the settings. Use the directional buttons (up, down, left, right) or joystick to navigate through options. Press 'OK' or the central button to select an option.

MAINTENANCE

Cleaning

Use a soft, dry cloth to clean the camcorder body. For the lens, use a specialized lens cleaning cloth and solution. Avoid using abrasive materials or harsh chemicals.

Storage

When not in use, store the camcorder in a cool, dry place away from direct sunlight and extreme temperatures. Remove the battery if storing for extended periods.

TROUBLESHOOTING

Camcorder Not Powering On

- Ensure the battery is correctly inserted and charged.
- Verify the power button is pressed correctly or the LCD screen is fully opened.

Poor Image/Video Quality

- Check lighting conditions. Use the built-in flash in dark environments.
- Clean the lens if it appears smudged or dirty.
- Avoid excessive digital zoom, as it can reduce image clarity.

Files Not Transferring to Computer

- Ensure the USB cable is securely connected to both the camcorder and the computer.
- Check if the computer recognizes the camcorder as a removable disk.

SPECIFICATIONS

- **Brand:** Dpofirs
- **Model Number:** Dpofirsz9kg2fbnmu-12
- **Item Weight:** 3 pounds
- **Photo Sensor Technology:** CMOS
- **Video Capture Resolution:** 1080p
- **Flash Memory Type:** SD
- **Video Capture Format:** AVI
- **Supported Audio Format:** AAC
- **Screen Size:** 2.7 Inches
- **Connectivity Technology:** USB
- **Color:** Red
- **Special Feature:** 16x Zoom, 270-degree rotatable screen

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided in your product packaging or visit the official Dpofirs website. Keep your purchase receipt as proof of purchase for any warranty claims.