

manuals.plus /

- › [Paramount](#) /
- › [Paramount Faster DVD Instruction Manual](#)


Paramount DVD B0BXM21QT2

Paramount Faster DVD Instruction Manual

Model: DVD B0BXM21QT2

PRODUCT OVERVIEW

This manual provides essential information for the proper use and care of your Faster DVD. Please read these instructions carefully to ensure optimal viewing experience and longevity of your product.

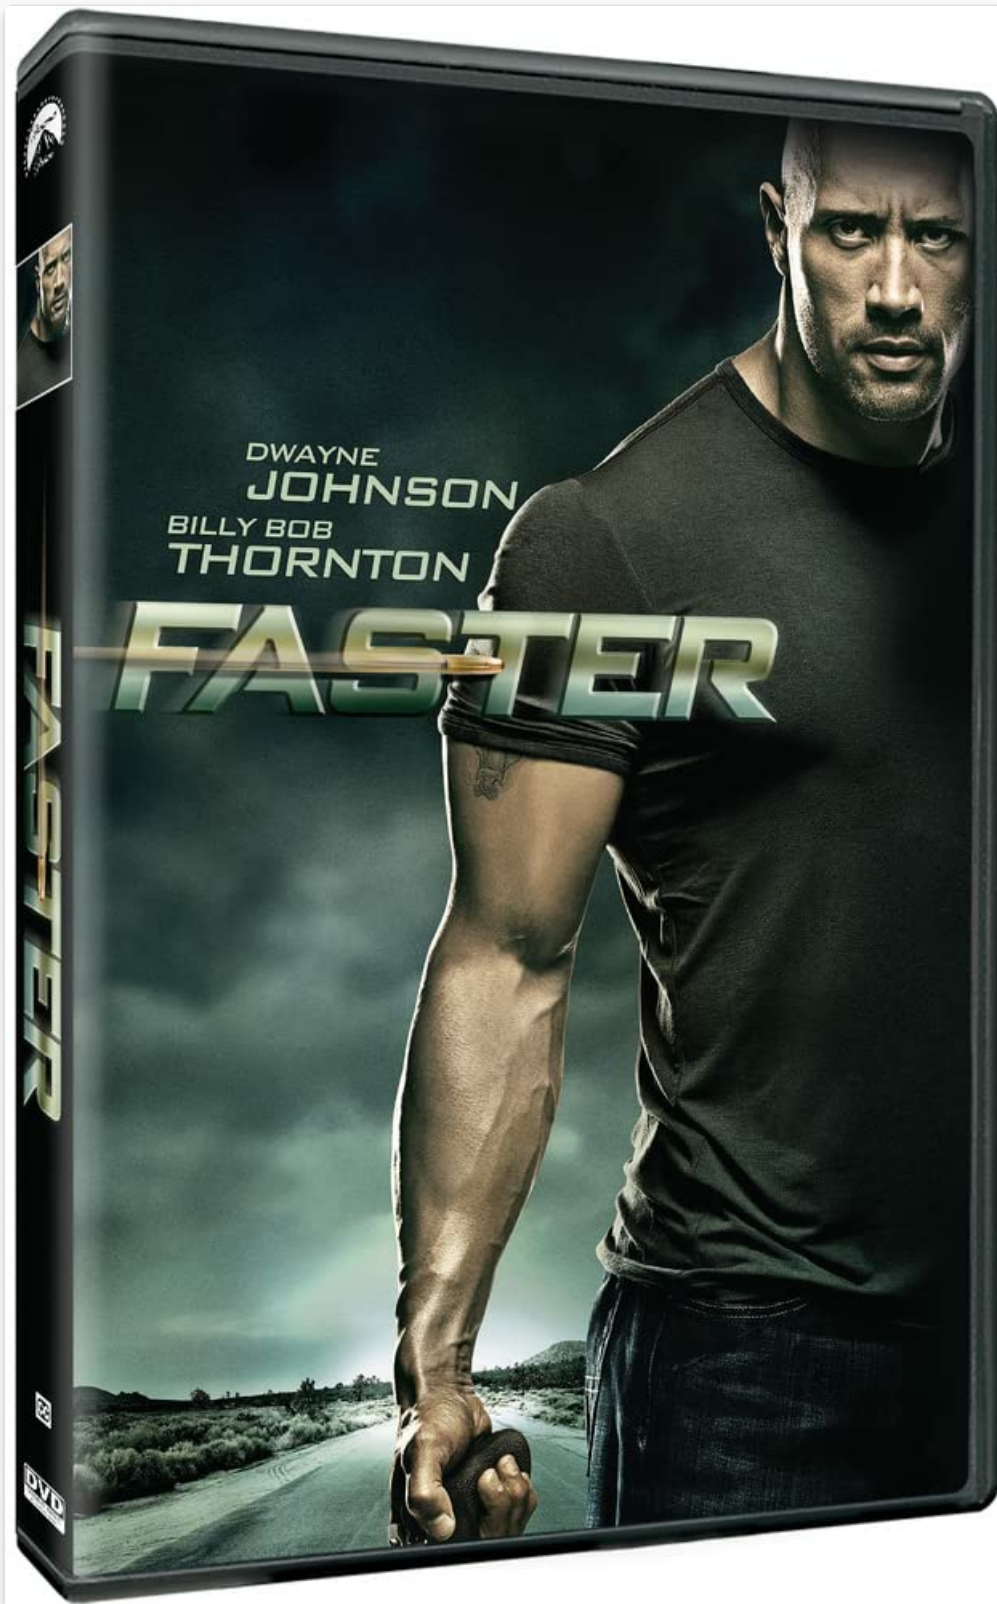

This image displays the front cover of the Faster DVD. It features a prominent image of Dwayne Johnson, also known as The Rock, with a determined expression. The movie title 'FASTER' is displayed in large, stylized letters across the center, with a bullet passing through the 'S'. The names 'Dwayne Johnson' and 'Billy Bob Thornton' are also visible, indicating the main actors. The background suggests a desolate, open road under a dramatic sky.

SETUP

To begin watching your Faster DVD, follow these general setup steps:

1. **Connect your DVD player:** Ensure your DVD player is properly connected to your television or display device using the appropriate cables (e.g., HDMI, composite, component). Refer to your DVD player's manual for specific

connection instructions.

2. **Power on devices:** Turn on your television and your DVD player.
3. **Select input:** Use your television remote to select the correct input source (e.g., HDMI 1, Video 1) that corresponds to your DVD player's connection.
4. **Insert DVD:** Gently insert the Faster DVD into the disc tray of your DVD player with the label side facing up. Close the disc tray.

OPERATING INSTRUCTIONS

Once the DVD is inserted and your player is recognized by the television, you can operate the DVD:

1. **Automatic Playback:** Many DVD players will automatically begin playing the movie or display the main menu once the disc is loaded.
2. **Manual Playback:** If the disc does not start automatically, use your DVD player's remote control to select 'Play' or 'Start Movie' from the on-screen menu.
3. **Navigation:** Use the arrow keys on your remote to navigate through menu options (e.g., Scene Selection, Special Features, Audio Settings) and the 'Enter' or 'OK' button to make selections.
4. **Playback Controls:** Use standard remote buttons for functions such as Play, Pause, Stop, Fast Forward, Rewind, and Skip Chapter.

MAINTENANCE

Proper care of your DVD will help preserve its quality and ensure reliable playback:

- **Handling:** Always hold the DVD by its edges or by placing a finger through the center hole. Avoid touching the shiny playback surface.
- **Cleaning:** If the disc becomes dirty or smudged, gently wipe it with a soft, lint-free cloth. Wipe from the center of the disc outwards in a straight line, not in a circular motion. Do not use abrasive cleaners or solvents.
- **Storage:** Store the DVD in its original case when not in use to protect it from dust, scratches, and direct sunlight. Keep discs away from extreme temperatures and humidity.
- **Avoid Bending:** Do not bend or flex the disc, as this can cause irreparable damage.

TROUBLESHOOTING

If you encounter issues while playing your Faster DVD, consider the following:

- **Disc Not Playing:** Ensure the disc is inserted correctly (label side up). Check if the disc is clean and free of scratches. Try playing another DVD to determine if the issue is with the player or the disc.
- **Skipping or Freezing:** This is often caused by dirt, dust, or scratches on the disc. Clean the disc as described in the Maintenance section. If the problem persists, the disc may be damaged.
- **No Picture/Sound:** Verify that your DVD player is connected correctly to your television and that the correct input source is selected on your TV. Check all cable connections.
- **Region Code Error:** Ensure your DVD player is compatible with Region 1 DVDs (North America). This DVD is formatted for Region 1.

SPECIFICATIONS

Feature	Detail
MPAA Rating	R (Restricted)
Product Dimensions	0.5 x 5.35 x 7.5 inches
Item Weight	2.56 ounces
Director	George Tillman Jr.
Media Format	DVD, NTSC
Run Time	98 minutes
Release Date	April 18, 2023
Actors	Billy Bob Thornton, Dwayne Johnson, Oliver Jackson-Cohen
Studio	Paramount
ASIN	B0BXM21QT2
Number of Discs	1
Genre	Drama

WARRANTY INFORMATION

Specific warranty details for this DVD are not provided in the product information. Please refer to the packaging or contact the retailer for any applicable warranty information regarding manufacturing defects.


SUPPORT






For technical support related to your DVD player, please consult your DVD player's instruction manual or contact its manufacturer. For inquiries regarding the Faster DVD content or manufacturing, please refer to the contact information provided on the DVD packaging or the official Paramount website.



© 2023 Paramount. All rights reserved.

Related Documents - DVD B0BXM21QT2

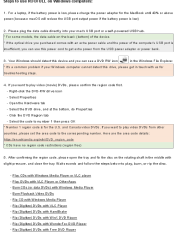	<p>Samsung DVD Player User Manual - DVD-C450K/C450, DVD-C360, DVD-C350K/C350</p> <p>User manual for Samsung DVD Player models DVD-C450K/C450, DVD-C360, and DVD-C350K/C350. Provides setup, operation, features, and troubleshooting information.</p>
---	---

	<p>Samsung DVD-VR375 User Manual: Record, Edit, and Play Digital Video</p> <p>Comprehensive user manual for the Samsung DVD-VR375 DVD & VCR. Learn how to record, edit, and play high-quality digital video on various disc types, including DVD-RAM, DVD±RW, and DVD±R. Features include progressive scan, HDMI connectivity, and easy-to-use interface.</p>
	<p>DVD Player Operation and Features</p> <p>A comprehensive guide to operating the DVD player, including disc insertion, playback controls, special functions, and screen format settings.</p>
	<p>ROOFULL External Drive: Guide to Using on Windows Computers</p> <p>Comprehensive guide on how to connect, play, burn, and rip CDs and DVDs using your ROOFULL external drive on Windows. Includes software recommendations like VLC, HandBrake, and detailed step-by-step instructions.</p>
	<p>Panasonic DVD/CD Player Operating Instructions - Models DVD-CP67, DVD-CV52, DVD-CV47, DVD-CV37</p> <p>Comprehensive operating instructions for Panasonic DVD/CD Players, covering setup, basic and advanced operations, troubleshooting, specifications, and warranty information. Includes detailed guidance on connecting to a TV, using the remote control, playing various disc formats (DVD-Video, CD, MP3, WMA), and enhancing movie viewing experiences.</p>
	<p>DVD Player Operation and Features</p> <p>A comprehensive guide to operating the DVD player, including disc insertion, playback controls, menu navigation, special features like subtitles and angles, and screen format settings.</p>