## Manuals+

Q & A | Deep Search | Upload

#### manuals.plus /

- Casio /
- > Casio FX-991CEX CLASSWIZ Scientific Calculator User Manual


## Casio FX-991CEX

# Casio FX-991CEX CLASSWIZ Scientific Calculator User Manual

Model: FX-991CEX

## INTRODUCTION

This manual provides detailed instructions for the proper use and maintenance of your Casio FX-991CEX CLASSWIZ scientific calculator. Please read this manual thoroughly before using the calculator to ensure optimal performance and longevity.

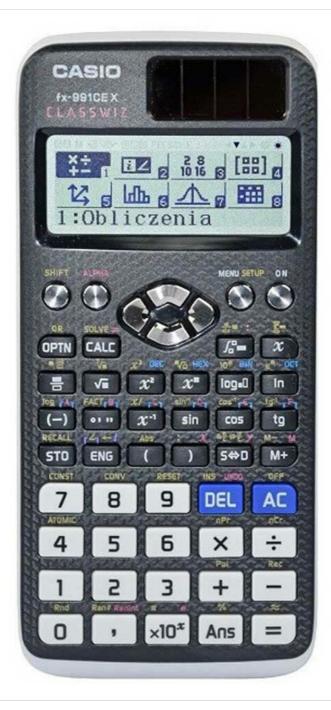

A front view of the Casio FX-991CEX CLASSWIZ scientific calculator, displaying its screen, solar panel, and full keypad with various function buttons.

# 1. SETUP

# 1.1 Powering On

The Casio FX-991CEX CLASSWIZ calculator is primarily powered by a solar cell, with a button battery (LR44) providing backup power for memory retention and operation in low light conditions. Ensure sufficient light is available for the solar cell to operate. Press the **ON** button to turn on the calculator.

## 1.2 Initial Settings

Upon first use or after a reset, you may need to configure initial settings. Press[SHIFT] then [MENU SETUP] to access the setup menu. Use the arrow keys to navigate and select options such as input/output format, angle unit, and display format.

- Input/Output: Select MathI/MathO for natural display or LineI/LineO for linear display.
- Angle Unit: Choose between Degree, Radian, or Gradian.

• Display Format: Configure number of decimal places or significant figures.

## 2. OPERATING INSTRUCTIONS

#### 2.1 Basic Calculations

Enter numbers and operations using the keypad. Press[=] to obtain the result. For example, to calculate 5 + 3, press[5] [+] [3] [=].

#### 2.2 Function Modes

The calculator offers various modes for different types of calculations. Press[MENU] to access the mode selection screen. Common modes include:

- 1. Calculate (COMP): For general arithmetic and function calculations.
- 2. Complex: For complex number calculations.
- 3. Base-N: For binary, octal, decimal, and hexadecimal calculations.
- 4. Matrix: For matrix calculations.
- 5. Vector: For vector calculations.
- 6. Statistics (STAT): For statistical calculations.
- 7. **Table:** To generate a number table for a function.
- 8. **Equation/Func:** For solving equations and inequalities.

## 2.3 Using Secondary Functions

Many keys have secondary functions printed above them. To access these, press the [SHIFT] key (yellow) followed by the desired function key. For alpha characters and variables, press the [ALPHA] key (red) followed by the corresponding key.

## 2.4 Memory Functions

The calculator includes independent memory (M) and variable memories (A, B, C, D, E, F, X, Y). To store a value, enter the value, press [STO], then press the desired memory key. To recall a value, press[RCL], then the desired memory key.

# 3. MAINTENANCE

### 3.1 Cleaning

Wipe the calculator gently with a soft, dry cloth. Do not use abrasive cleaners, solvents, or wet cloths, as these can damage the surface or internal components.

## 3.2 Storage

Store the calculator in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. Keep it away from strong magnetic fields.

#### 3.3 Solar Panel Care

Ensure the solar panel is not obstructed during use to maintain optimal power supply. Keep the solar panel clean and free from dust or debris.

# 4. TROUBLESHOOTING

## 4.1 "Math ERROR" Displayed

This error indicates an invalid mathematical operation (e.g., division by zero, square root of a negative number). Review

your input and correct any errors.

## 4.2 Display is Blank or Dim

- Ensure the calculator is in a well-lit area for the solar panel.
- If the issue persists, the internal button battery may be low. Contact Casio support for battery replacement information.

## 4.3 Calculator Not Responding

If the calculator becomes unresponsive, try performing a reset. Locate the **RESET** button (usually a small hole on the back or side) and gently press it with a thin, pointed object (like a straightened paper clip). Note that this will clear all memory and settings.

# 5. SPECIFICATIONS

Model Name	FX-991CEX
Brand	Casio
Dimensions (L x W x H)	25.4 x 5.1 x 6.9 cm (approx.)
Weight	240 g (approx.)
Power Source	Solar power with button battery backup
Display	High-resolution LCD, 12-digit display
Key Features	Natural Textbook Display, 552 functions, QR Code generation, Spreadsheet, Equation Solver, Matrix/Vector calculations.

# 6. WARRANTY AND SUPPORT

Your Casio FX-991CEX CLASSWIZ calculator comes with a standard manufacturer's warranty. For specific warranty terms, service, or technical support, please refer to the official Casio website or contact your local Casio distributor. Official Casio Support: www.casio.com/support

© 2024 Casio Computer Co., Ltd. All rights reserved.

**Related Documents - FX-991CEX** 

