

## Braun 60-B4200cs

# Braun Series 6 6040cs Electric Shaver User Manual

Model: 60-B4200cs

---

## 1. INTRODUCTION

---

This manual provides essential information for the safe and effective use of your Braun Series 6 6040cs Electric Shaver. Please read these instructions thoroughly before first use and retain them for future reference. The Braun Series 6 electric shaver is designed for a close and comfortable shave, featuring a SensoFlex swivel head and SensoFoil blades for sensitive skin.



Image 1.1: Braun Series 6 6040cs Electric Shaver and included accessories.

## 2. SAFETY INFORMATION

- This appliance is suitable for cleaning under running water.
- Do not use the shaver if the foil or cord is damaged.
- Keep the appliance dry when charging.
- This appliance contains batteries that are non-replaceable.
- Do not open the appliance.
- Keep out of reach of children.
- Only use the power supply provided with the appliance.

## 3. PACKAGE CONTENTS

Your Braun Series 6 6040cs package includes the following items:

- 1x Braun Series 6 Electric Shaver (Blue)
- 1x Precision Trimmer attachment
- 1x Charging Stand

- 1x Travel case
- 1x Smart plug for automatic 100-240 voltage adjustment
- 1x Cleaning Brush



Image 3.1: All components included in the Braun Series 6 6040cs package.

## 4. SETUP

### 4.1 Initial Charging

Before using your shaver for the first time, it must be fully charged. Connect the smart plug to the shaver or the charging stand, then plug it into an electrical outlet. The Li-Ion battery provides up to 50 minutes of shaving runtime on a full charge, which typically takes about 1 hour. A 5-minute quick charge provides enough power for one shave.

# 3 Flexible blades

that adapt to facial contours  
for a close shave made easy



Image 4.1: Battery indicator lights on the shaver handle.

## 4.2 Attaching Accessories

To attach the Precision Trimmer or other EasyClick attachments (sold separately), first remove the shaver head. Align the attachment with the shaver body and press firmly until it clicks into place.

## 5. OPERATING INSTRUCTIONS

### 5.1 Shaving with the SensoFlex Head

The SensoFlex swivel head adapts to your facial contours, minimizing pressure on sensitive skin. For best results, hold the shaver at a right angle (90°) to your skin and shave against the direction of hair growth. Apply gentle pressure. The AutoSense technology reads and adapts power to your beard density, ensuring efficient shaving.

# Li-Ion battery

50 mins  
runtime and  
up to 3 weeks  
of shaving on  
one full charge



Image 5.1: The SensoFlex tilting head adapts to facial contours.

# For a shaver like new everyday



Image 5.2: Flexible blades adapt to facial contours for a close shave.

## 5.2 Wet & Dry Use

Your Braun Series 6 shaver is 100% waterproof and can be used for both dry and wet shaving. For a refreshing shave, use it with foam, gel, or in the shower. Ensure the shaver is fully charged before wet use.

## 5.3 Using the Precision Trimmer

Attach the Precision Trimmer to define sideburns, moustaches, or trim longer hairs before shaving. Use short, controlled strokes for precise styling.

## 6. MAINTENANCE

### 6.1 Cleaning

Regular cleaning ensures optimal performance. After each use, rinse the shaver head under warm running water. For a more thorough cleaning, remove the shaver head and brush away any trapped hairs using the provided cleaning brush. The shaver can also be cleaned with Braun's Clean & Charge Station (sold separately).

### 6.2 Replacing the Foil & Cutter Block

To maintain peak shaving performance, replace the foil and cutter block every 18 months. A worn foil and cutter block can reduce shaving efficiency and comfort. Replacement parts are available from authorized Braun retailers.

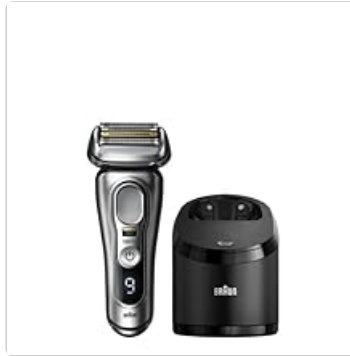


Image 6.1: The shaver head with foil and cutter block.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Shaver does not turn on.	Battery is depleted.	Charge the shaver for at least 5 minutes or until fully charged.
Poor shaving performance.	Foil and cutter block are worn or dirty.	Clean the shaver head thoroughly or replace the foil and cutter block.
Shaver pulls hair.	Foil and cutter block are worn or hair is too long.	Replace the foil and cutter block. For longer hair, use the precision trimmer first.

## 8. SPECIFICATIONS

Feature	Detail
Model Number	60-B4200cs
Power Source	Battery Powered (1 Lithium Ion battery included)
Special Feature	Waterproof (Wet & Dry use)
Recommended Use	Beard shaving
Product Dimensions	9.84 x 5.43 x 2.68 inches
Item Weight	1.12 Pounds
UPC	069055888674

## 9. WARRANTY AND SUPPORT

Your Braun Series 6 6040cs Electric Shaver is covered by a manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions. For technical support, replacement parts, or further assistance, please visit the official Braun website or contact their customer service department.

You can find more information and support at the [Braun Store on Amazon](#).

