

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [KECHAODA](#) /

> [KECHAODA A8 Triple Sim Phone User Manual](#)

KECHAODA A8

KECHAODA A8 Triple SIM Phone User Manual

Model: A8

1. INTRODUCTION

This manual provides essential information and instructions for the safe and efficient use of your KECHAODA A8 Triple SIM Phone. Please read this manual thoroughly before operating the device to ensure proper functionality and to prevent damage. Keep this manual for future reference.

2. PACKAGE CONTENTS

Verify that all items listed below are present in your product package:

- KECHAODA A8 Handset
- Battery
- Charger
- Warranty Card

3. DEVICE OVERVIEW

Familiarize yourself with the physical components of your KECHAODA A8 phone.

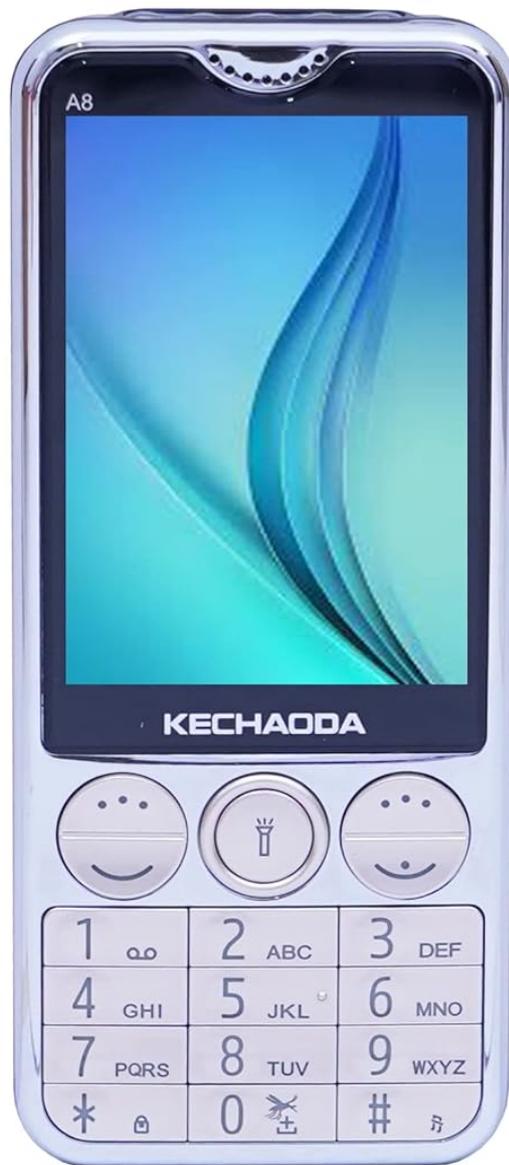


Figure 3.1: Front View. This image displays the front of the KECHAODA A8 phone, featuring its 3.5-inch display screen, the KECHAODA brand logo below the screen, and the numeric keypad with function buttons. The model number "A8" is visible at the top.

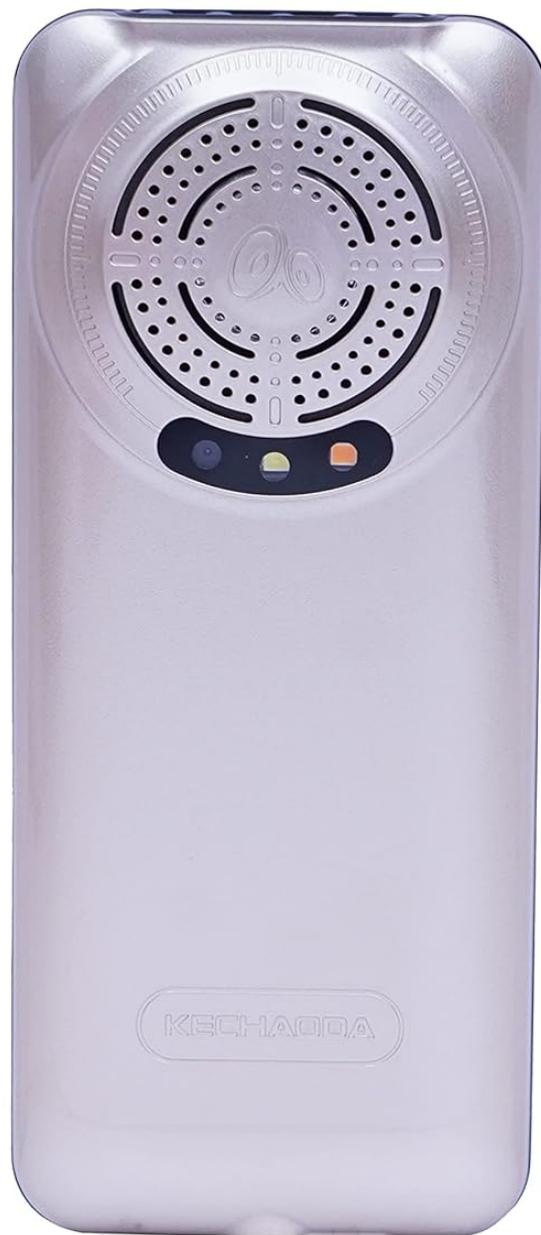


Figure 3.2: Rear View. This image shows the back of the KECHAODA A8 phone, highlighting the circular speaker grille at the top, the camera lens, and the KECHAODA brand name embossed at the bottom.



Figure 3.3: Side View (Left). This image presents a left-side profile of the KECHAODA A8 phone, emphasizing its slim design.



Figure 3.4: Angled Front-Side View. This image provides an angled view of the KECHAODA A8, showcasing both the front display and keypad, and a portion of its side profile.

4. SETUP

4.1. Battery Installation

1. Gently remove the back cover of the phone.
2. Align the battery contacts with the terminals inside the battery compartment.
3. Press the battery down until it is securely seated.
4. Replace the back cover, ensuring it clicks into place.

4.2. SIM Card Installation

The KECHAODA A8 supports up to three SIM cards.

1. With the back cover and battery removed, locate the SIM card slots.
2. Carefully insert your SIM cards into the designated slots, ensuring the gold contacts face downwards and the cut corner aligns correctly.
3. Reinstall the battery and back cover.

4.3. Charging the Battery

1. Connect the charger to the charging port on your phone.
2. Plug the charger into a power outlet.
3. Allow the phone to charge fully before first use. The battery indicator on the screen will show charging status.

5. OPERATING INSTRUCTIONS

5.1. Power On/Off

- To power on: Press and hold the Power/End Call button until the screen lights up.
- To power off: Press and hold the Power/End Call button until the power-off options appear, then select "Power off".

5.2. Making and Receiving Calls

- **Making a Call:** Enter the phone number using the keypad and press the Call button (usually green). If using multiple SIMs, you may be prompted to select which SIM to use.
- **Receiving a Call:** When a call comes in, press the Call button to answer. To reject, press the End Call button.

5.3. Sending and Receiving Messages

- Navigate to the "Messages" menu.
- Select "Write message" or "New SMS".
- Enter the recipient's number and type your message.
- Press "Send".

5.4. Camera Usage

- Access the camera application from the main menu.

- Frame your shot using the display.
- Press the designated camera button or the center navigation key to capture a photo.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the phone's screen and body. Avoid using liquid cleaners or abrasive materials.
- **Battery Care:** Do not expose the battery to extreme temperatures. Avoid overcharging or completely draining the battery frequently to prolong its lifespan.
- **Storage:** Store the phone in a cool, dry place away from direct sunlight and moisture when not in use for extended periods.
- **Water Resistance:** This phone is not water-resistant. Avoid exposure to water or other liquids.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Phone does not power on	Low battery; Battery not installed correctly; Faulty battery/charger	Charge the battery; Reinstall battery; Try a different charger
No network signal	Out of network coverage; SIM card not installed correctly; SIM card issue	Move to an area with better coverage; Reinstall SIM card(s); Contact your service provider
Cannot make/receive calls	No network signal; Insufficient balance (prepaid); Call barring activated	Check network; Recharge account; Check call settings
Battery drains quickly	Excessive usage; Old battery; Background processes	Reduce usage; Consider battery replacement; Close unused applications

If the problem persists after attempting these solutions, please contact customer support.

8. SPECIFICATIONS

Feature	Detail
Model	A8
Display Size	7.11 cm (3.5 inches)
Display Resolution	240 x 320 pixels
Operating System	Symbian 9.1
RAM	16 MB
Internal Storage	8 MB (Memory Storage Capacity)
Primary Camera	0.3 MP
Battery Capacity	2500 mAh Lithium-ion
SIM Support	Triple SIM

Feature	Detail
Connectivity	GSM Cellular
Audio Jack	3.5 mm
Item Weight	280 g
Package Dimensions	16.4 x 8.1 x 5.6 cm

9. WARRANTY AND SUPPORT

Your KECHAODA A8 phone comes with a manufacturer's warranty to cover potential defects.

- **Device Warranty:** 1 year manufacturer warranty from the date of purchase.
- **Accessory Warranty:** 6 months manufacturer warranty for in-box accessories, including the battery, from the date of purchase.

Please retain your purchase receipt and warranty card for any warranty claims. For technical support or service inquiries, refer to the contact information provided on your warranty card or the official KECHAODA website.