

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Techwood](#) /

› [Techwood Ice Maker Machine User Manual \(Model: Techwood Machine à Glaçons\)](#)

Techwood Techwood Machine à Glaçons

Techwood Ice Maker Machine User Manual

Model: Techwood Machine à Glaçons

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using your Techwood Ice Maker Machine. Keep this manual for future reference.

- Ensure the power supply matches the voltage specified on the appliance (220-240V ~ 50Hz).
- Do not immerse the appliance, power cord, or plug in water or other liquids.
- Unplug the appliance from the outlet when not in use, before cleaning, and before servicing.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Place the ice maker on a stable, flat surface, away from direct sunlight and heat sources. Ensure adequate ventilation around the unit.
- Use only potable water in the water reservoir.
- Keep children away from the appliance during operation.

2. PRODUCT OVERVIEW

Familiarize yourself with the components of your Techwood Ice Maker Machine.



Image: Front view of the Techwood Ice Maker Machine, showing the transparent lid, control panel, and ice basket area.

Main Components:

- **Control Panel:** Includes indicator lights for 'Add Water' and 'Ice Full', and a 'Start/Stop' button.
- **Transparent Lid:** Allows observation of the ice making process.
- **Ice Basket:** Removable basket for collecting produced ice cubes.
- **Water Reservoir:** Internal tank for holding water for ice production.
- **Air Vent:** Located on the side, ensures proper heat dissipation.

3. SETUP

3.1 Unpacking

1. Carefully remove the ice maker from its packaging.
2. Remove all packaging materials, including any tape or protective films.
3. Check for any damage during transit. If damaged, do not operate and contact your retailer.

3.2 Placement

- Place the ice maker on a firm, level surface.
- Ensure there is at least 15 cm (6 inches) of space around the unit for proper ventilation, especially around the air vents.
- Avoid placing the unit near heat sources (e.g., ovens, radiators) or in direct sunlight.
- Do not place the unit in an enclosed cabinet.

3.3 Initial Cleaning

1. Before first use, clean the interior of the ice maker.
2. Remove the ice basket.

3. Wash the ice basket and ice scoop (if included) with warm water and a mild detergent. Rinse thoroughly.
4. Wipe the interior of the water reservoir and ice collection area with a soft cloth dampened with warm water and a small amount of vinegar or mild detergent. Rinse by wiping with a clean, damp cloth.
5. Dry all parts thoroughly before reassembling.

4. OPERATING INSTRUCTIONS

4.1 Filling the Water Reservoir

1. Open the transparent lid.
2. Remove the ice basket.
3. Fill the water reservoir with potable water up to the MAX fill line. Do not overfill. The reservoir capacity is 1.3 liters.
4. Replace the ice basket and close the lid.

4.2 Starting Ice Production

1. Plug the power cord into a grounded electrical outlet.
2. Press the 'Start/Stop' button on the control panel. The 'Ice Making' indicator light will illuminate.
3. The ice maker will begin its cycle. The first batch of 9 ice cubes will be produced in approximately 7 to 14 minutes, depending on the ambient temperature and water temperature.
4. The ice maker will continue to produce ice until the ice basket is full or the water reservoir is empty.

4.3 Indicator Lights

- **'Add Water' Indicator:** This light will illuminate when the water reservoir is low or empty. Refill the reservoir to resume ice production.
- **'Ice Full' Indicator:** This light will illuminate when the ice basket is full. The machine will automatically stop ice production. Remove ice from the basket to resume operation.

4.4 Stopping Operation

To stop the ice maker at any time, press the 'Start/Stop' button. Unplug the unit from the power outlet when not in use.

5. MAINTENANCE

5.1 Regular Cleaning

1. Always unplug the ice maker before cleaning.
2. Remove the ice basket and clean it with warm, soapy water.
3. Clean the interior of the unit, including the water reservoir and ice collection area, with a soft cloth dampened with a mild detergent solution.
4. Wipe the exterior of the unit with a soft, damp cloth. Do not use abrasive cleaners or solvents.
5. Ensure all parts are completely dry before reassembling and storing or reusing.

5.2 Draining Water

To drain residual water from the reservoir, locate the drain plug (usually at the bottom or side of the unit).

Place a container under the plug, remove it, and allow all water to drain. Replace the plug securely.

5.3 Storage

If the ice maker will not be used for an extended period, clean and dry it thoroughly. Store it in a cool, dry place, away from direct sunlight and out of reach of children.

6. TROUBLESHOOTING

Before contacting customer support, please refer to the following troubleshooting guide for common issues.

Problem	Possible Cause	Solution
Ice maker not working	No power; 'Add Water' or 'Ice Full' indicator on.	Check power connection; refill water; empty ice basket.
No ice production	Water reservoir empty; low ambient temperature; air vent blocked.	Refill water; ensure room temperature is adequate (above 10°C); clear air vents.
'Add Water' light on, but reservoir has water	Water sensor issue.	Unplug and replug the unit; ensure water level is above the sensor.
Ice cubes are too small or soft	Water temperature too high; high ambient temperature.	Use colder water; ensure unit is in a cooler environment.

7. SPECIFICATIONS

Technical details for the Techwood Ice Maker Machine.



Image: Techwood Ice Maker Machine with indicated dimensions: 31cm (depth), 32cm (width), 25cm (height).

- **Model Name:** Techwood Machine à Glaçons
- **Brand:** Techwood
- **ASIN:** B0BXPL39WJ
- **Daily Ice Production Capacity:** 12 Kg / 24h
- **Water Reservoir Capacity:** 1.3 Liters
- **Ice Basket Capacity:** 700g
- **Ice Production Cycle:** 9 ice cubes in 7 to 14 minutes (depending on ambient temperature)
- **Power:** 50 Watts
- **Voltage:** 220-240V ~ 50Hz
- **Product Dimensions (D x W x H):** 31 cm x 32 cm x 25 cm
- **Automatic Features:** 'Ice Full' sensor, 'Add Water' indicator

8. WARRANTY AND SUPPORT

8.1 Warranty Information

This Techwood Ice Maker Machine comes with **a2-year manufacturer's warranty**. Please retain your proof of purchase for warranty claims. The warranty covers defects in materials and workmanship under normal use.

8.2 Customer Support

For any questions, technical assistance, or warranty claims, please contact your retailer or the Techwood customer service department. Refer to the contact information provided with your purchase or on the official Techwood website.