

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Exquisit](#) /

› [Exquisit MW900-030 Countertop Microwave Oven User Manual](#)

Exquisit MW900-030

Exquisit MW900-030 Countertop Microwave Oven

User Manual

Model: MW900-030



IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should be followed, including the following:

- Read all instructions before using the appliance.
- To reduce the risk of fire, electric shock, or injury to persons, do not operate the oven when empty.
- Do not heat liquids or other foods in sealed containers since they are liable to explode.
- Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.
- Do not use corrosive chemicals or vapors in this appliance.
- This appliance is intended to be used in household and similar applications.
- Do not immerse the cord or plug in water.
- Keep the cord away from heated surfaces.
- Do not let the cord hang over the edge of a table or counter.

PRODUCT OVERVIEW

The Exquisit MW900-030 is a compact countertop microwave oven designed for efficient heating and defrosting. It features a mechanical control panel for ease of use.



Figure 1: Front view of the Exquisit MW900-030 microwave oven, showing the door, control panel, and brand logo.



Figure 2: Close-up of the control panel, featuring the power level knob (Leistung) and the timer/defrost knob (Zeit/Auftauen).

SETUP

1. **Unpacking:** Carefully remove the microwave oven and all packing materials from the carton. Check the oven for any damage, such as dents or a broken door. Do not operate the oven if it is damaged.

2. **Placement:** Place the microwave oven on a flat, stable surface that can support its weight and the heaviest food likely to be cooked in it. Ensure there is adequate ventilation around the unit. Maintain a minimum of 20 cm (8 inches) of space above the oven, 10 cm (4 inches) at the rear, and 5 cm (2 inches) on both sides for proper airflow.

3. **Turntable Installation:**

exQUISIT

MW 900-030 Blanco
Microondas





Panel de control sin reloj
Panel de control de operación fácil e intuitiva.



Plato giratorio
Plato giratorio de cristal



Anillo giratorio





20
Litros



Temporizador



700
Watts

Marca Exquisit
Modelo MW 900-030 Blanco
Color Blanco
Código EAN 4016572413670
Código del artículo 812720000

Conexión eléctrica
Tensión / frecuencia 230 V~ / 50 Hz
Consumo de energía 1050 W
Frecuencia del microondas 2450 MHz
Potencia de entrada del microondas 1050 W
Potencia de salida del microondas 700 W
Longitud del cable de alimentación 100 cm
Sello de conformidad CE

Instalación
Forma de instalación Libre instalación

Dimensiones y peso
Volumen de la cámara de cocción 20 litros
Dimensiones del equipo
alto x ancho x fondo 25.8 x 44.0 x 34.6 cm
Dimensiones del embalaje 29.1 x 46.5 x 36.0 cm
Peso del equipo bruto / neto 11.1 / 10.2 Kg

Programas y funciones
Niveles de potencia del microondas 5
Microondas Si
Programa de descongelación Si

Accesorios y características
Temporizador Mecánico
Máximo ajuste del temporizador 35 min
Señal acústica del temporizador Si
Tipo de control Manual
Iluminación interior Si
Dispositivo de cierre de la puerta Si
Apertura de la puerta Pulsador
Diámetro del plato giratorio 255 mm

Figure 3: The glass turntable plate, which rotates during operation to ensure even heating.

Place the roller ring in the center of the oven cavity. Position the glass turntable plate securely on top of the roller ring. Ensure the turntable rotates freely.

4. **Power Connection:** Plug the power cord into a grounded electrical outlet. Ensure the voltage matches the specifications of the microwave oven (220 Volts).

OPERATING INSTRUCTIONS

The Exquisit MW900-030 microwave oven features two mechanical control knobs for setting power level and cooking time/defrost weight.



Figure 4: The control panel with the upper knob for power settings and the lower knob for time/defrost settings.

Setting Power Level

The upper knob, labeled 'Leistung' (Power), controls the microwave power output. Rotate this knob to select the desired power level:

- **700W:** High power for fast cooking and reheating.
- **540W:** Medium-High power for general cooking.
- **390W:** Medium power for slower cooking or delicate foods.
- **230W:** Medium-Low power for simmering or softening.
- **120W:** Low power for keeping food warm or very gentle defrosting.
- **Auftauen (Defrost):** Specific setting for defrosting by weight.

Setting Cooking Time or Defrost Weight

The lower knob, labeled 'Zeit (Min)' (Time) and 'Auftauen (Kg)' (Defrost), controls the cooking duration or defrost weight.

- **For Cooking:** After selecting a power level, rotate this knob clockwise to set the desired cooking time, up to a maximum of 35 minutes. The oven will start automatically once the timer is set.
- **For Defrosting by Weight:** First, set the upper knob to 'Auftauern'. Then, rotate the lower knob to select the weight of the food to be defrosted (e.g., 0.2 kg, 0.4 kg, 0.6 kg, 0.8 kg, 1.0 kg). The oven will automatically calculate the defrosting time.

Basic Operation Steps

1. Place the food in a microwave-safe container on the glass turntable.
2. Close the oven door securely.
3. Rotate the upper 'Leistung' knob to select the desired power level.
4. Rotate the lower 'Zeit (Min)' knob to set the desired cooking time.
5. The oven will begin cooking. The internal light will illuminate, and the turntable will rotate.
6. When the set time expires, the oven will emit an audible signal and automatically turn off.
7. Carefully remove the cooked food. Be aware that the container and food may be hot.

MAINTENANCE AND CLEANING

Regular cleaning of your microwave oven will ensure its longevity and efficient operation.

Cleaning the Exterior

- Wipe the exterior surfaces with a damp cloth and mild detergent.
- Avoid using abrasive cleaners or harsh chemicals, as they can damage the finish.

Cleaning the Interior

- To clean the interior, wipe with a damp cloth and mild detergent.
- For stubborn food splatters, place a bowl of water with a few lemon slices inside the oven and heat on high for 2-3 minutes. The steam will loosen the residue, making it easier to wipe away.
- Ensure the oven is unplugged before cleaning.

Cleaning the Glass Turntable and Roller Ring

- The glass turntable and roller ring can be removed for cleaning.
- Wash them in warm, soapy water or in the dishwasher.
- Ensure they are completely dry before placing them back into the oven.

TROUBLESHOOTING

If you encounter any issues with your microwave oven, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Oven will not start	Power cord not plugged in securely. Door not closed properly.	Ensure the power cord is firmly plugged into the outlet. Close the door firmly until it latches.

Problem	Possible Cause	Solution
---------	----------------	----------

Food not heating	Power level set too low. Cooking time too short.	Increase the power level or extend the cooking time. Ensure the correct power level is selected for the food type.
Turntable not rotating	Turntable or roller ring not positioned correctly. Obstruction.	Check that the turntable and roller ring are correctly seated. Remove any obstructions.
Light not working	Bulb failure.	Contact qualified service personnel for bulb replacement. Do not attempt to replace it yourself.

If the problem persists after attempting these solutions, please contact customer support.

SPECIFICATIONS

Feature	Specification
Model Name	MW900-030
Item Model Number	812720000
Brand	Exquisit
Capacity	20 Liters
Wattage	1050 watts (Input), 700 watts (Output)
Voltage	220 Volts
Product Dimensions (L x W x H)	13.62 x 17.32 x 10.16 inches (34.6 x 44.0 x 25.8 cm)
Item Weight	24.2 pounds (11 kg)
Material	Glass (turntable)
Human Interface Input	Buttons (Rotary Knobs)

WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided with your purchase or contact your retailer. For additional product information and support, you may visit the manufacturer's website:

[Exquisit Product Page](#)



