



Manuals.plus /

› Soobaby /

› Soobaby 3-in-1 Convertible Baby High Chair Instruction Manual

Soobaby B0BXRSSKX6

Soobaby 3-in-1 Convertible Baby High Chair Instruction Manual

Model: B0BXRSSKX6

INTRODUCTION

Thank you for choosing the Soobaby 3-in-1 Convertible Baby High Chair. This versatile product is designed to adapt to your child's growth, functioning as a traditional high chair, a low play chair, and a booster seat. It is suitable for children aged 6 to 36 months. This manual provides essential information for safe assembly, operation, and maintenance of your high chair.

SAFETY INFORMATION

Please read all instructions carefully before assembly and use. Failure to follow these instructions could result in serious injury or death.

- Always use the safety harness to secure your child in the high chair.
- Never leave your child unattended in the high chair.
- Ensure all parts are correctly assembled and securely fastened before each use.
- Do not use the high chair if any parts are broken, torn, or missing.
- Keep children away from the product during assembly.
- Do not place the high chair near open flames, heaters, or other heat sources.
- Maximum weight recommendation for this high chair is 50 pounds.

PARTS LIST

Before assembly, verify that all components are present:

- High Chair Seat Unit (with integrated safety harness)
- Adjustable Food Tray (removable and washable)
- Upper Leg Sections (4 pieces)
- Lower Leg Sections (4 pieces)

- Footrest
- Non-Slip Foot Pads (4 pieces, pre-attached to lower leg sections)
- Instruction Manual

SETUP AND ASSEMBLY

The Soobaby high chair is designed for quick and tool-free assembly.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, flat surface.
2. **Assemble Legs (High Chair Mode):**
 - Connect the upper leg sections to the designated slots on the underside of the high chair seat unit. Ensure they click securely into place.
 - Attach the lower leg sections to the upper leg sections. The non-slip foot pads should be at the bottom. Verify all connections are firm.



Image: The high chair assembled in both its full height and low chair configurations, demonstrating its versatility.

3. **Attach Footrest:** Slide the footrest into the slots on the lower front of the seat unit. Ensure it is securely in place.

Original Design

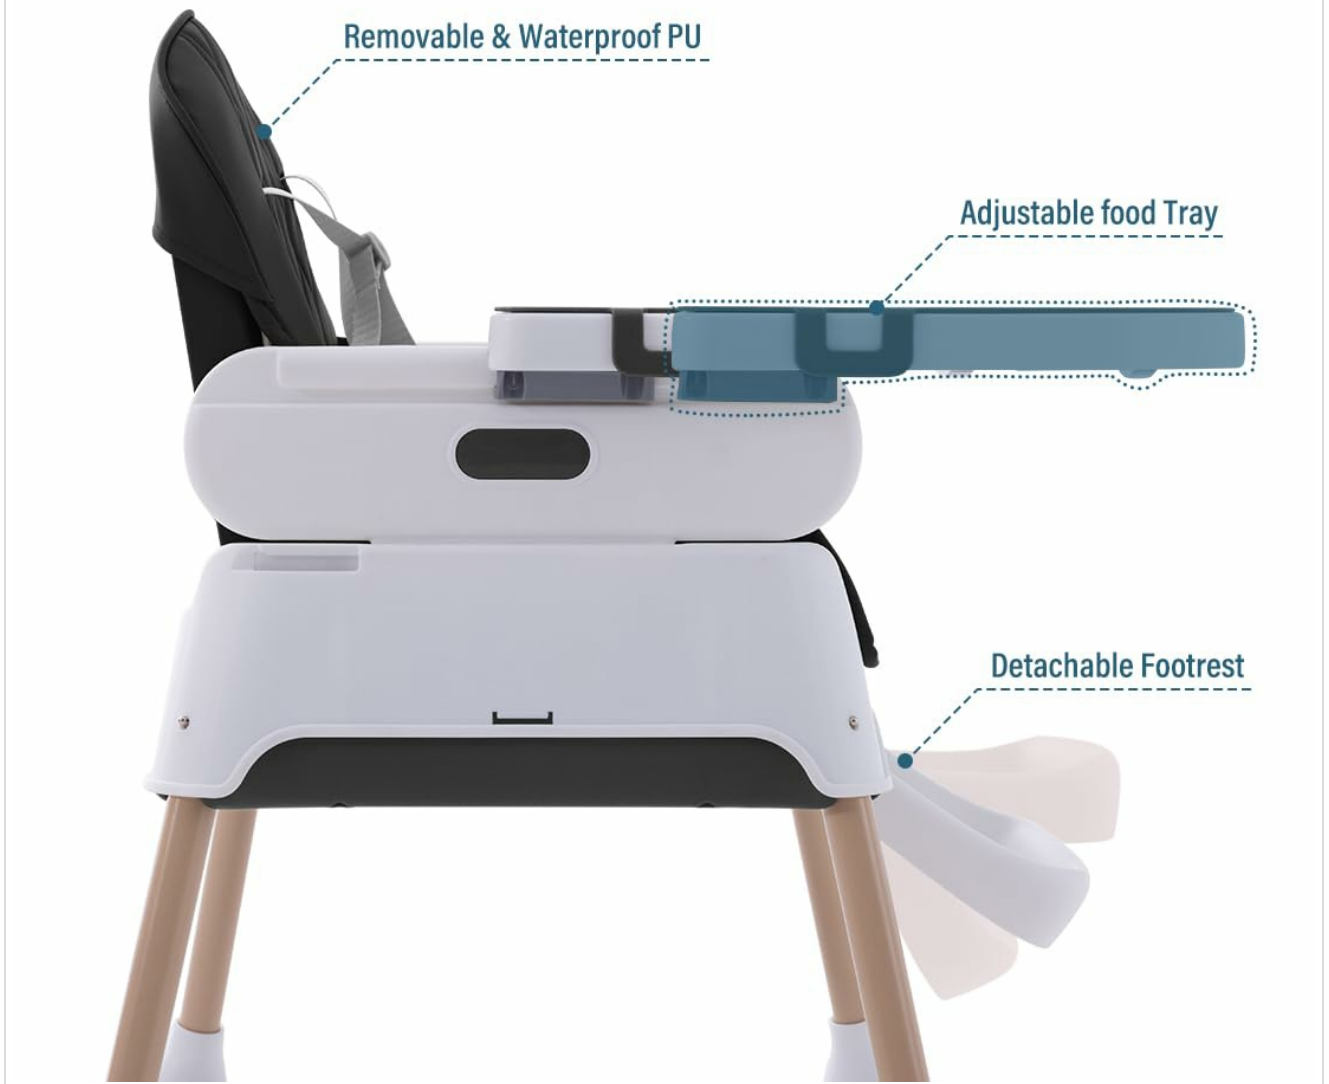


Image: A detailed view highlighting the adjustable food tray and the detachable footrest, indicating their positions on the high chair.

4. **Install Food Tray:** Slide the food tray onto the armrests until it locks into position. The tray is adjustable.



Image: Close-up views of the detachable 5-point safety harness, the removable and washable trays, and the non-slip foot pads, illustrating key features.

OPERATING INSTRUCTIONS

1. High Chair Mode

Use this mode for feeding your baby at standard table height. Ensure all leg sections are securely connected.

- Place your child in the seat and secure them with the 5-point safety harness.
- Adjust the food tray to a comfortable position for your child.

Safe Design

- Non-slip Design
- Strong Support



Image: A baby seated in the high chair, demonstrating its stable and safe design, with dimensions indicated for reference.

2. Play Chair Mode

Convert the high chair into a low play chair for toddlers to use at a lower table or for independent play.

- Remove the lower leg sections by pressing the release buttons and pulling them off.
- The high chair will now be at a lower height, suitable for play.



Image: A child engaged in play while seated in the low chair configuration, illustrating the "Play Mode" functionality.

3. Booster Seat Mode

The seat unit can be detached and used as a booster seat on a standard dining chair (straps for securing to dining chair not explicitly mentioned in product details, assume standard booster use).

- Detach the seat unit from the leg assembly.
- Place the seat unit on a stable adult dining chair. (Note: Ensure the booster seat is securely fastened to the adult chair if attachment straps are provided. Refer to product packaging for specific booster attachment instructions if applicable.)
- Secure your child with the 5-point safety harness.



Image: The high chair in its full configuration, with an inset image demonstrating how the seat unit can be used as a booster seat on a standard adult chair.

MAINTENANCE AND CLEANING

Regular cleaning will ensure the longevity and hygiene of your high chair.

- **Seat Cover:** The seat cover is waterproof and easy to clean. Wipe spills immediately with a damp cloth and mild soap. For thorough cleaning, the cover can be removed and wiped down.

waterproof, breathable, easy to clean



Image: A hand wiping the seat of the high chair, demonstrating its waterproof and easy-to-clean material.

- **Food Tray:** The detachable food tray is dishwasher safe for convenient cleaning. Alternatively, wash with warm soapy water and rinse thoroughly.
- **Harness Straps:** Wipe harness straps with a damp cloth and mild soap. Allow to air dry completely before re-use.
- **Frame and Legs:** Wipe down the frame and legs with a damp cloth. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use, the high chair can be folded for compact storage.



Image: The high chair folded into a compact form for storage, with additional views showing the top and bottom of the folded unit.

TROUBLESHOOTING

Problem	Possible Cause	Solution
High chair feels unstable.	Legs not fully engaged or uneven surface.	Ensure all leg sections are securely clicked into place. Place the high chair on a flat, level surface.
Food tray does not attach securely.	Tray not aligned correctly or debris in slots.	Align the tray with the armrest slots and push firmly until it locks. Check for any food debris blocking the mechanism.
Harness is difficult to buckle/unbuckle.	Buckle mechanism is dirty or misaligned.	Clean the buckle mechanism. Ensure all harness straps are inserted correctly into the buckle before attempting to close.

SPECIFICATIONS

- **Model:** B0BXRSSKX6
- **Brand:** Soobaby
- **Product Dimensions (Assembled):** Approximately 27"D x 24"W x 34"H
- **Item Weight:** 10.88 pounds
- **Maximum Weight Recommendation:** 50 pounds
- **Material Type:** Polypropylene
- **Recommended Age:** 6 to 36 months
- **Portability:** Yes (Foldable design)

WARRANTY AND SUPPORT

For warranty information or product support, please contact Soobaby customer service through the retailer where the product was purchased or visit the official Soobaby website. Please have your model number (B0BXRSSKX6) and purchase date available when contacting support.

For additional assistance or to view frequently asked questions, please refer to the product listing page or the brand's official support channels.