

[manuals.plus](#) /

› [DEZIN](#) /

› [Dezin Electric Cooker, 2L Non-Stick Sauté Pan, Rapid Noodles Cooker, Mini Pot for Ramen with Power Adjustment, Dorm Room Essential Round - A\(Black/without Steamer\) User Manual](#)

DEZIN B0BXS31WT7

Dezin Electric Cooker User Manual

Model: B0BXS31WT7 | Brand: DEZIN

1. INTRODUCTION

Welcome to the user manual for your new Dezin Electric Cooker. This 2L non-stick sauté pan is designed for versatile cooking, including sautéing, boiling, and simmering, making it ideal for various settings such as dorm rooms, offices, or travel. Its compact design and dual power settings (250W & 600W) offer convenience and efficiency for preparing a wide range of meals, from rapid noodles to stir-fries. Please read this manual thoroughly before first use to ensure safe and optimal operation of your appliance.

2. SAFETY INSTRUCTIONS

- Always ensure the electric cooker is placed on a stable, heat-resistant surface during operation.
- Do not immerse the main unit, power cord, or plug in water or any other liquid. This appliance is not dishwasher safe.
- Unplug the appliance from the power outlet when not in use and before cleaning.
- Exercise caution when handling hot surfaces and steam. Use oven mitts or pot holders if necessary.
- Keep out of reach of children and pets.
- Do not operate the appliance if the power cord or plug is damaged, or if the appliance malfunctions or has been damaged in any manner.
- Ensure proper ventilation during use to prevent overheating.
- Do not use abrasive cleaners or scouring pads on the non-stick coating.
- The electric cooker is equipped with over-heating protection and boil dry protection for enhanced safety.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your Dezin Electric Cooker.



Figure 3.1: Dezin Electric Cooker with included spatula and lid.

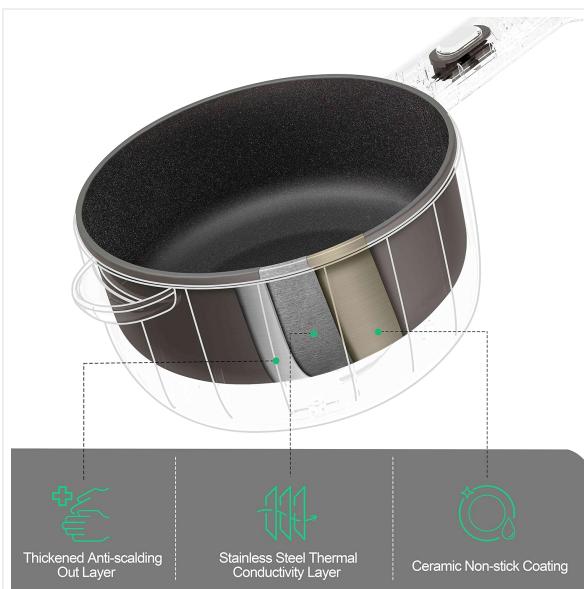


Figure 3.2: Internal structure showing thickened anti-scalding outer layer, stainless steel thermal conductivity layer, and ceramic non-stick coating.



Figure 3.3: Demonstration of the premium non-stick coating, allowing food to slide off easily.



Figure 3.4: Close-up of the handle featuring the dual power setting switch (Mode I: 250W, Mode II: 600W).

4. SETUP

- Unpacking:** Carefully remove all packaging materials and inspect the electric cooker for any damage. Retain packaging for future storage or transport if desired.
- Initial Cleaning:** Before first use, wash the interior of the pot and the lid with warm, soapy water. Rinse thoroughly and dry completely. Ensure the electrical components (power inlet) remain dry.
- Placement:** Place the electric cooker on a flat, stable, and heat-resistant surface, away from flammable materials. Ensure there is adequate space around the unit for ventilation.
- Power Connection:** Connect the detachable power cord to the appliance's power inlet, then plug the cord into a standard electrical outlet.

5. OPERATING INSTRUCTIONS

Your Dezin Electric Cooker offers two power settings for versatile cooking.

- **Power Settings:**

- **Mode I (250W):** Ideal for simmering, keeping food warm, or cooking delicate items like oatmeal and dumplings.
- **Mode II (600W):** Provides faster heating for boiling water, cooking noodles, sautéing, frying, and preparing dishes like steak or paella.

- **Operation:**

1. Add desired ingredients and liquid to the pot. Do not overfill; ensure contents are below the maximum fill line.
2. Select the desired power mode using the switch on the handle.
3. The indicator light will illuminate, indicating the cooker is active.
4. Monitor your cooking. The non-stick coating allows for cooking with minimal oil.
5. Once cooking is complete, switch the power off and unplug the appliance.

- **Cooking Examples:**

- **Ramen/Noodles:** Add water and noodles, select Mode II for rapid boiling. Once boiling, reduce to Mode I if needed for simmering.

- **Sautéing/Frying:** Add a small amount of oil, select Mode II. Add ingredients and stir with the included silicone spatula.
- **Soups/Hot Pot:** Combine ingredients and liquid, use Mode II to bring to a boil, then switch to Mode I for gentle simmering.

[REDACTED]

Video 5.1: Official product demonstration of the Dezin 2L Electric Cooker in use, showcasing its features and versatility.

6. MAINTENANCE AND CLEANING

Proper cleaning and maintenance will extend the life of your electric cooker.

1. **Always unplug** the appliance and allow it to cool completely before cleaning.
2. **Interior Cleaning:** The non-stick interior can be easily cleaned with a soft sponge or cloth and warm, soapy water. For stubborn food residue, soak the pot with warm water for a few minutes before cleaning. Rinse thoroughly.
3. **Exterior Cleaning:** Wipe the exterior with a damp cloth. Do not use abrasive cleaners or immerse the entire unit in water.
4. **Lid Cleaning:** The glass lid can be washed with warm, soapy water and rinsed.
5. **Drying:** Ensure all parts are completely dry before storing or next use.
6. **Storage:** Store the cooker in a dry place, away from direct sunlight and moisture.

EASY COOKING & CLEANING

Environmentally Friendly

Non-stick Pot Liner

Easy to Clean

Toxin-free

Safer



Figure 6.1: Cleaning the non-stick interior of the Dezin Electric Cooker with ease.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; power switch off.	Ensure the power cord is securely plugged into both the appliance and a working outlet. Check the power switch on the handle.
Food sticks to the pot.	Insufficient oil; cooking at too high a temperature for too long; damaged non-stick coating.	Use a small amount of oil. Adjust power setting. Avoid using metal utensils that can scratch the coating.

Problem	Possible Cause	Solution
Lid appears fragile or breaks easily.	Accidental impact; improper handling.	Handle the lid with care. Avoid dropping or subjecting it to sudden temperature changes. Replacement lids may be available from the manufacturer.
Overheating or automatic shut-off.	Boil-dry protection activated; prolonged use without liquid.	Unplug the unit and allow it to cool down. Ensure there is always sufficient liquid in the pot during operation.

8. SPECIFICATIONS

Brand: DEZIN

Model: B0BXS31WT7

Capacity: 2 Liters

Material: Non-stick Coating

Color: Round - A (Black/without Steamer)

Product Dimensions: 16.5"D x 8"W x 5.5"H

Control Method: Touch (Switch on handle)

Operation Mode: Automatic

Item Weight: 2.88 pounds

Power Settings: 250W & 600W

9. WARRANTY AND SUPPORT

For information regarding product warranty, please refer to the warranty card included with your purchase or visit the official DEZIN website.

Should you encounter any issues or require assistance with your Dezin Electric Cooker, please contact DEZIN customer support. Contact details can typically be found on the product packaging or the brand's official online presence.

Optional protection plans are available for purchase to extend coverage beyond the standard warranty. Details on these plans can be found where you purchased the product.

© 2025 DEZIN. All rights reserved.

Documents - DEZIN – B0BXS31WT7

no relevant documents