

Maxi-Cosi 2050043110

Maxi-Cosi Loa Baby Bouncer Instruction Manual

Model: 2050043110

1. INTRODUCTION

Thank you for choosing the Maxi-Cosi Loa Baby Bouncer. This manual provides essential information for the safe and correct use, assembly, and maintenance of your product. Please read it thoroughly before use and keep it for future reference.

The Maxi-Cosi Loa is an ultra-lightweight (2 kg) and ultra-compact baby bouncer designed for comfort and convenience. It features a soft padded seat and two recline positions, suitable for babies from birth up to approximately 2 years (0-12 kg). The seat cover is made from 100% recycled fabrics, reflecting an Eco Care design.

2. IMPORTANT SAFETY WARNINGS

- **WARNING:** Never leave the child unattended.
- **WARNING:** Do not use this bouncer once your child can sit unaided.
- **WARNING:** This bouncer is not intended for prolonged periods of sleep.
- **WARNING:** Never use this bouncer on an elevated surface (e.g., a table) as a child's movement may cause the bouncer to fall.
- **WARNING:** Always use the restraint system. Ensure the harness is correctly fitted and adjusted.
- **WARNING:** Do not move or lift the bouncer with the child in it.
- Ensure all assembly components are securely fastened before each use.
- Keep children away from the bouncer during assembly and disassembly.
- Regularly inspect the bouncer for any signs of damage or wear. Discontinue use if any part is broken or missing.

3. COMPONENTS OVERVIEW

The Maxi-Cosi Loa Baby Bouncer typically includes the following components:

- Bouncer frame (base and support bars)
- Padded seat cover with integrated harness
- Stabilizing feet (for fixed mode)



Figure 1: Maxi-Cosi Loa Baby Bouncer, fully assembled.

4. SETUP AND ASSEMBLY

The Maxi-Cosi Loa Baby Bouncer is designed for quick and easy setup. Minimal assembly is required.

1. **Unfolding the Frame:** Carefully unfold the bouncer frame until it locks into place. Ensure all locking mechanisms are engaged.
2. **Attaching the Seat Cover:** If not already attached, secure the padded seat cover to the frame according to the instructions provided with the product. Ensure all straps and fasteners are

correctly positioned.

3. **Checking Stability:** Before placing your child in the bouncer, ensure it is stable on a flat, level surface.

Léger et
ultra-compact



Figure 2: The bouncer in its ultra-compact folded state, highlighting its portability.

5. OPERATING INSTRUCTIONS

5.1 Adjusting Recline Positions

The Loa bouncer offers two comfortable recline positions. To adjust the recline:

1. Locate the recline adjustment mechanism, typically found on the sides or rear of the bouncer frame.
2. Press the release buttons or levers and gently move the seat to the desired position. Ensure it locks securely into place.

Adapté dès la
naissance, 2
positions
d'inclinaison



Figure 3: Illustration of the two available recline positions for the bouncer.

5.2 Rocking and Fixed Modes

The Loa bouncer features a 2-in-1 design, allowing for both rocking and fixed modes.

- **Rocking Mode:** To enable rocking, ensure the stabilizing feet are retracted or in the rocking position. The bouncer will gently sway with your baby's movements or a gentle push.
- **Fixed Mode:** To convert to a stationary seat, extend the stabilizing feet or engage the locking mechanism to prevent rocking. This mode is ideal for feeding or when your baby is resting.

Conception 2 en 1

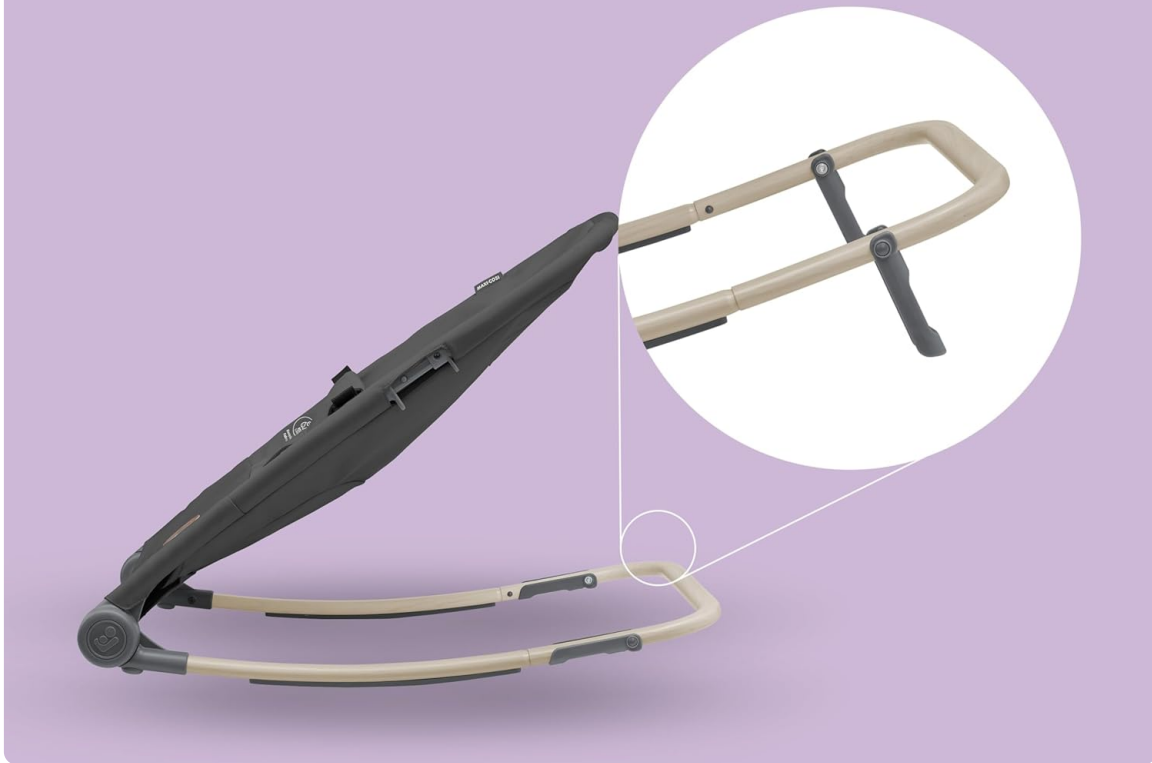


Figure 4: Close-up of the bouncer's frame, illustrating the mechanism for switching between rocking and fixed modes.

5.3 Securing Your Child

Always use the integrated padded harness to secure your child in the bouncer.

1. Place your child in the bouncer.
2. Fasten the buckle and adjust the straps to ensure a snug but comfortable fit. The harness should not be too tight or too loose.

5.4 Folding for Storage and Travel

The Loa bouncer can be quickly folded into an ultra-compact size for storage or transport.

1. Ensure your child is removed from the bouncer.
2. Follow the specific folding instructions provided with your product, typically involving releasing a latch or button on the frame.
3. Fold the bouncer until it is flat and compact.



Figure 5: A person easily carrying the Maxi-Cosi Loa bouncer after it has been folded for transport.

6. MAINTENANCE AND CLEANING

6.1 Cleaning the Seat Cover

The bouncer's seat cover is designed for easy removal and cleaning.

- To remove the seat cover, unfasten all straps and detach it from the frame.
- The seat cover is machine washable at 30 degrees Celsius. Refer to the care label for specific instructions.
- Do not bleach, tumble dry, iron, or dry clean the seat cover.
- Allow the cover to air dry completely before reattaching it to the frame.

6.2 Cleaning the Frame

The bouncer frame can be cleaned with a damp cloth and mild soap. Wipe dry immediately.

6.3 Storage

When not in use, store the bouncer in a clean, dry place, away from direct sunlight and extreme temperatures. Its ultra-compact fold makes it easy to store in small spaces.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Bouncer does not rock smoothly.	Stabilizing feet are engaged or frame is on an uneven surface.	Ensure stabilizing feet are retracted for rocking mode. Place bouncer on a flat, level surface.
Recline position is difficult to adjust.	Adjustment mechanism may be stiff or misaligned.	Ensure no weight is on the seat when adjusting. Press release buttons firmly and move gently. If issue persists, contact customer support.
Bouncer feels unstable.	Frame not fully locked or on an uneven surface.	Check that all frame components are securely locked into place. Move the bouncer to a flat, stable surface.

8. PRODUCT SPECIFICATIONS

- **Model Number:** 2050043110
- **Maximum Supported Weight:** 12 Kilograms
- **Main Material:** Polyester
- **Composition:** Steel, PP, PA, 600D, 150D, 300D
- **Number of Items in Package:** 1
- **Batteries Required:** No
- **Portable:** Yes
- **Manufacturer:** Dorel Juvenile
- **Product Dimensions (L x W x H):** 67.5 x 44.2 x 47 cm
- **Item Weight:** 2.05 Kilograms
- **Age Range (description):** From birth to 24 months
- **Assembly Required:** No



Figure 6: Product dimensions: Height 49.5 cm, Width 44.2 cm, Depth 67 cm.

9. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your purchase or visit the official Maxi-Cosi website. For customer support, questions, or to report any issues, please contact Dorel Juvenile customer service.

Manufacturer: Dorel Juvenile

Brand: Maxi-Cosi

Website: www.maxi-cosi.com