

Hisense HS623D10X

Hisense HS623D10X Freestanding Dishwasher User Manual

Model: HS623D10X

1. INTRODUCTION

Thank you for choosing the Hisense HS623D10X Freestanding Dishwasher. This manual provides essential information for the safe and efficient installation, operation, and maintenance of your appliance. Please read these instructions carefully before using your dishwasher and keep them for future reference.

2. SAFETY INSTRUCTIONS

WARNING: To reduce the risk of fire, electric shock, or injury, read and follow all instructions before operating this appliance.

- **Electrical Safety:** Ensure the appliance is properly grounded. Do not use extension cords or adapters. Disconnect power before servicing.
- **Water Safety:** Ensure all water connections are secure to prevent leaks. Do not operate if there is visible water leakage.
- **Child Safety:** Keep children away from the dishwasher when it is operating. Detergents and rinse aids are corrosive; keep them out of reach of children.
- **Proper Use:** Use only detergents and rinse aids specifically designed for dishwashers. Do not wash plastic items unless marked 'dishwasher safe'.
- **Sharp Objects:** Load sharp items (knives, forks) with handles up to prevent injury.

3. PRODUCT OVERVIEW

The Hisense HS623D10X is a freestanding dishwasher designed for efficient and quiet dish cleaning. It features a stainless steel finish and a user-friendly push-button control panel.

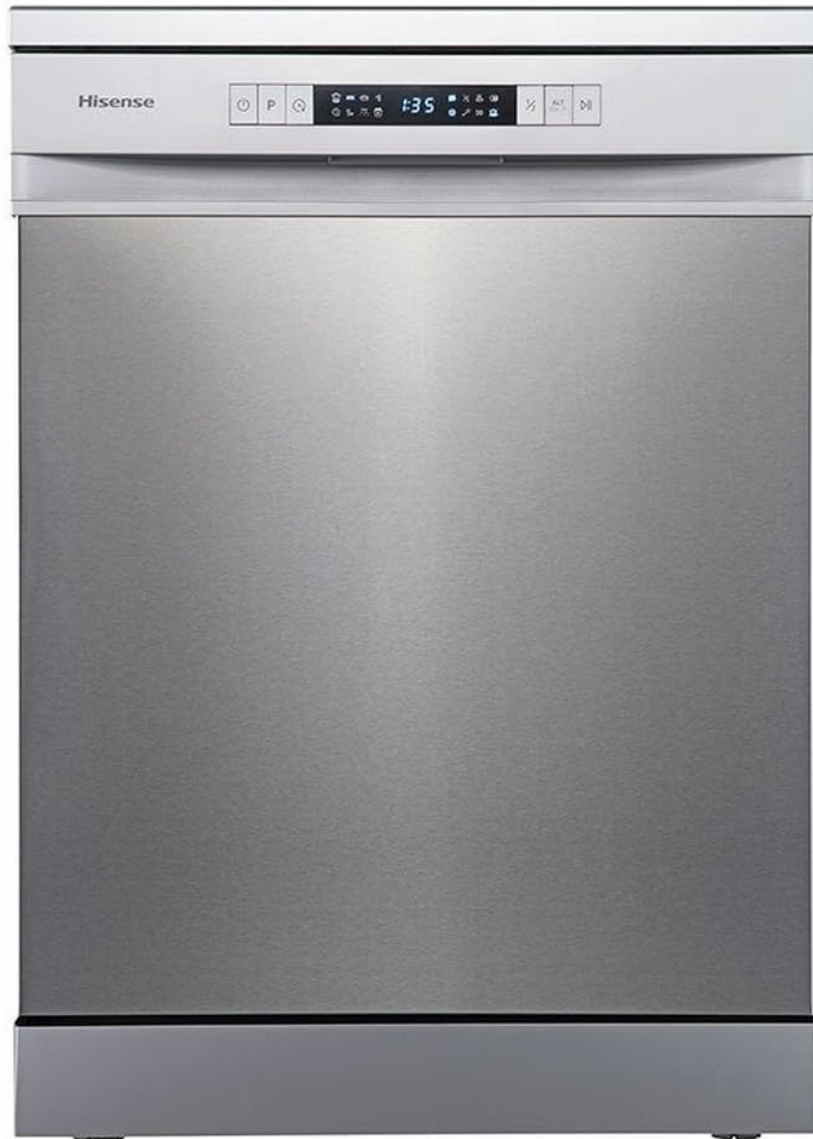


Figure 1: Hisense HS623D10X Freestanding Dishwasher

Key Features:

- **Capacity:** 14 place settings, ideal for families.
- **3rd Cutlery Tray:** Provides dedicated space for cutlery, optimizing basket space.
- **Height-Adjustable Upper Basket:** Allows flexibility for loading taller items in the lower basket.
- **ECO Mode:** Reduces water and energy consumption for environmentally friendly washing.
- **Quiet Operation:** Operates at a low noise level of 45 dB.
- **Quick Wash Mode:** For lightly soiled items requiring a faster cycle.
- **Half-Load Function:** Efficiently washes smaller loads without full water and energy consumption.

4. INSTALLATION

Proper installation is crucial for the performance and longevity of your dishwasher. It is recommended that installation be performed by a qualified technician.

4.1 Unpacking

Carefully remove all packaging materials. Inspect the dishwasher for any damage during transit. Report any damage to your retailer immediately.

4.2 Placement

The dishwasher is a freestanding unit with dimensions of 85 cm (Height) x 60 cm (Width) x 60 cm (Depth). Ensure there is adequate space for installation and proper ventilation. Place the dishwasher on a flat, stable surface.

4.3 Leveling

Adjust the leveling feet at the bottom of the dishwasher to ensure it is perfectly level. A level appliance prevents vibrations and ensures proper door closure.

4.4 Water Connection

- **Water Inlet:** Connect the water inlet hose to a cold water supply tap with a 3/4-inch thread. Ensure the connection is tight to prevent leaks.
- **Water Outlet:** Connect the drain hose to a suitable drain pipe or the sink trap. Ensure the hose is not kinked or obstructed.

4.5 Electrical Connection

The dishwasher requires a 240V electrical supply. Connect the provided power cord to a properly grounded electrical outlet. Do not use multi-plugs or extension cords.

5. OPERATING INSTRUCTIONS

5.1 First Use

1. **Add Dishwasher Salt:** Fill the salt dispenser with dishwasher salt to soften hard water. Refer to the water hardness test strip (if provided) to set the correct salt consumption level.
2. **Add Rinse Aid:** Fill the rinse aid dispenser. Rinse aid helps with drying and prevents water spots.
3. **Add Detergent:** Place the appropriate amount of dishwasher detergent into the dispenser.

5.2 Loading the Dishwasher

For optimal cleaning and drying, load dishes according to the guidelines in Section 7.

5.3 Selecting and Starting a Program

1. Close the dishwasher door securely.
2. Press the Power button to turn on the appliance.
3. Use the push-button controls to select your desired wash program (refer to Section 6 for program details).
4. Press the Start button to begin the cycle.

5.4 Interrupting or Changing a Program

To interrupt a program, open the door slightly to pause the cycle. To change a program, press and hold the Start/Pause button for a few seconds until the program resets, then select a new program.

5.5 End of Cycle

The dishwasher will signal the end of the cycle. Allow a few minutes for dishes to cool before unloading to prevent breakage and improve drying results.

6. PROGRAMS AND SETTINGS

The Hisense HS623D10X offers 7 wash programs to suit various needs:

Program	Description	Recommended Use
ECO Mode	Optimized for energy and water efficiency.	Normal soiled daily dishes.
Quick Wash	Fast cycle for lightly soiled items.	Lightly soiled dishes, glasses.
Intensive	High temperature wash for heavily soiled items.	Pots, pans, heavily soiled dishes.
Daily	Standard wash for everyday use.	Mixed dishes with normal soil.
Glassware Care	Gentle wash for delicate glassware.	Delicate glasses and crystal.
Half-Load	Reduces water and energy for smaller loads.	Small loads, partial capacity.
Pre-Rinse	Short rinse cycle to prevent food from drying on dishes.	Pre-rinsing dishes before a full wash.

7. LOADING THE DISHWASHER

Proper loading ensures effective cleaning and prevents damage to dishes.

- **Remove Large Food Scraps:** Scrape off any large food particles before loading.
- **Lower Basket:** Place larger and more heavily soiled items (plates, pots, pans) in the lower basket.
- **Upper Basket:** Use the upper basket for smaller items, glasses, cups, and bowls. The upper basket is height-adjustable to accommodate taller items below.
- **3rd Cutlery Tray:** Arrange cutlery individually in the dedicated 3rd tray to ensure thorough cleaning and prevent scratching.
- **Avoid Overloading:** Do not overcrowd the baskets, as this can hinder water circulation and cleaning performance.
- **Face Down:** Ensure all items with recesses (bowls, cups) are placed face down to allow water to drain.

8. MAINTENANCE AND CLEANING

Regular maintenance helps keep your dishwasher performing optimally.

8.1 Cleaning the Filters

The filter system prevents larger food particles from reaching the pump. Clean the filters regularly (e.g., weekly) to ensure efficient operation.

1. Twist the cylindrical filter counter-clockwise and lift it out.
2. Remove the fine filter from the bottom of the wash tub.

3. Rinse all filters under running water to remove food particles. Use a soft brush if necessary.
4. Reassemble the filters in reverse order, ensuring they are securely in place.

8.2 Cleaning the Spray Arms

Check the spray arm nozzles for blockages. If necessary, remove the spray arms and clean the holes with a thin wire or toothpick.

8.3 Exterior and Interior Cleaning

- **Exterior:** Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners.
- **Interior:** Periodically run a dishwasher cleaning cycle with a specialized dishwasher cleaner to remove grease and limescale buildup.

9. TROUBLESHOOTING

Before contacting customer service, refer to the following table for common issues and solutions:

Problem	Possible Cause	Solution
Dishwasher does not start	No power supply; Door not closed properly; Program not selected.	Check power connection; Close door firmly; Select a program and press Start.
Poor cleaning results	Incorrect program; Overloading; Clogged spray arms/filters; Insufficient detergent.	Select appropriate program; Load correctly; Clean filters/spray arms; Use correct detergent amount.
Water not draining	Drain hose kinked/blocked; Clogged filter.	Check and clear drain hose; Clean filters.
Water spots on dishes	Insufficient rinse aid; Water hardness setting incorrect.	Refill rinse aid dispenser; Adjust water hardness setting.
Unusual noise	Dishes interfering with spray arms; Foreign object in pump.	Rearrange dishes; Check for and remove foreign objects.

10. SPECIFICATIONS

Feature	Detail
Brand	Hisense
Model Name	HS623D10X
Product Type	Freestanding Dishwasher
Capacity	14 Place Settings
Dimensions (H x W x D)	85 cm x 60 cm x 60 cm

Feature	Detail
Color	Stainless Steel
Material	Stainless Steel
Noise Level	45 Decibels
Number of Programs	7
Controls Type	Push-button
Voltage	240V
Included Components	Power Cord
Recommended Uses	Daily dishes and glassware, lightly soiled items

11. WARRANTY AND SUPPORT

Your Hisense HS623D10X Dishwasher comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions. For technical support, spare parts, or service requests, please contact Hisense customer service or visit the official Hisense website. Keep your proof of purchase for warranty claims.