

[Manuals.plus](#) /

› [Armitron](#) /

› Armitron Men's Date Function Dial Bracelet Watch, 20/5497 Silver/Navy Blue User Manual

Armitron 20/5497NVSVWM

Armitron Men's Date Function Dial Bracelet Watch

Model: 20/5497NVSVWM

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Armitron Men's Date Function Dial Bracelet Watch, model 20/5497NVSVWM. Designed for durability and style, this timepiece features a matte navy blue dial, date calendar window, luminous hands and markers, and is water resistant to 165 feet (50M).





Front view of the Armitron Men's Date Function Dial Bracelet Watch, showcasing the navy blue dial and silver-tone bracelet.

SETUP

Setting the Time

1. Pull the crown (the small knob on the side of the watch) out to the furthest position.
2. Turn the crown clockwise or counter-clockwise to move the hands until the desired time is set.
3. Push the crown back in to its original position to start the watch.

Setting the Date

1. Pull the crown out to the first click position.
2. Turn the crown clockwise to advance the date. If the date changes during the day, adjust it to the previous day and

then advance the time to the correct date.

3. Once the correct date is displayed, push the crown back in to its original position.

Adjusting the Bracelet

The watch features an adjustable link bracelet. To ensure a comfortable fit, links may need to be added or removed. This process typically requires specialized tools and is best performed by a professional jeweler or watch repair service. Refer to the image below for a view of the bracelet and clasp mechanism.





Back view of the watch, showing the adjustable link bracelet and fold-over clasp with double push-button safety.

OPERATING

Basic Timekeeping

Once the time is set, the watch will continuously display the current time. The luminous hands and markers provide visibility in low-light conditions.

Date Function

The date calendar window automatically advances the date once every 24 hours. If the watch is not worn for an extended period, you may need to manually adjust the date as described in the 'Setting the Date' section.

Water Resistance

This watch is water resistant to 165 feet (50M). This means it is suitable for short periods of recreational swimming, but not for diving or snorkeling. **Do not operate the crown while the watch is wet or submerged.**

MAINTENANCE

Cleaning

To clean your watch, wipe it gently with a soft, damp cloth. For the metal bracelet, a soft brush can be used to remove dirt from between the links. Avoid using harsh chemicals or abrasive materials, as these can damage the watch's finish.

Battery Replacement

The watch is powered by a quartz movement and requires a battery. When the watch stops running, it indicates that the battery needs replacement. Battery replacement should be performed by a qualified watch technician to ensure the water

resistance seal is maintained.

Water Resistance Care

To maintain the water resistance of your watch, ensure the crown is always fully pushed in. Avoid exposing the watch to extreme temperature changes, as this can affect the seals. If the watch is exposed to saltwater, rinse it with fresh water and dry it thoroughly.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch not running	Dead battery; Crown not pushed in; Internal malfunction.	Check if crown is fully pushed in. If not, push it in. If still not running, battery may need replacement. Consult a professional.
Date not changing at midnight	Time is set for AM/PM incorrectly.	Advance the time by 12 hours. The date should change at midnight.
Condensation under crystal	Water ingress; Extreme temperature change.	Immediately take the watch to a professional for inspection and repair to prevent further damage.

SPECIFICATIONS

- **Model Number:** 20/5497NVSVWM
- **Movement:** Quartz
- **Crystal:** Slightly domed mineral crystal lens
- **Dial:** Matte navy blue with date calendar window, silver-tone luminous hands and markers, white outer minute track
- **Case Material:** Stainless Steel
- **Bracelet Material:** Silver-tone adjustable link bracelet
- **Clasp:** Fold over clasp with double push-button safety
- **Water Resistance:** 165 feet (50M)
- **Package Dimensions:** 4.13 x 3.15 x 2.87 inches
- **Item Weight:** 8.82 ounces

WARRANTY AND SUPPORT

Armitron watches are manufactured to high standards and are typically covered by a limited warranty against defects in materials and workmanship. For specific warranty details, including duration and coverage, please refer to the warranty

card included with your purchase or visit the official Armitron website.

For customer support, service, or to inquire about repairs, please contact Armitron directly through their official channels. You can find more information and contact details by visiting the [Armitron Store on Amazon](#) or their corporate website.

© 2024 Armitron. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question