

Winado WASHER-047

Winado 15LBS Portable Twin Tub Washing Machine User Manual

Model: WASHER-047

1. INTRODUCTION

Thank you for choosing the Winado 15LBS Portable Twin Tub Washing Machine. This compact and lightweight appliance is designed for efficient laundry care in small living spaces such as apartments, dorms, RVs, and camping sites. It features a twin tub design, allowing for simultaneous washing and spin-drying, saving you time and energy. Please read this manual thoroughly before operating the machine to ensure safe and optimal performance. Keep this manual for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, follow these basic precautions:

- Read all instructions before using the appliance.
- Do not operate any appliance with a damaged cord or plug.
- Do not operate if the machine is malfunctioning or has been damaged. Contact customer support.
- Do not install or store the appliance where it will be exposed to weather or freezing temperatures.
- Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in this manual.
- Always ensure the drain hose is properly positioned to prevent water leakage.
- Keep children away from the appliance during operation.
- Unplug the appliance from the power outlet when not in use or before cleaning.
- Do not overload the machine. Refer to capacity guidelines for optimal performance.
- Ensure the machine is placed on a flat, stable surface to prevent tipping.

3. PARTS LIST

The following components are included with your Winado Portable Twin Tub Washing Machine:

- 1 x Washing Machine with Built-in Drain Pump

- 1 x Water Inlet Hose (found in the washing tub)
- 1 x Drain Pipe
- 1 x Spin Cap/Pressing Plate for spin dryer



Figure 1: Overview of the Winado Portable Twin Tub Washing Machine.

4. SETUP

Before first use, ensure the machine is set up correctly.

1. **Unpacking:** Carefully remove the washing machine from its packaging. Inspect for any damage.
2. **Placement:** Place the machine on a flat, stable, and level surface. It is recommended to place it in an area with drainage, such as a shower stall or bathtub, due to its gravity drain system.



Figure 2: Recommended placement in a bathroom for easy drainage.

3. **Drain Hose Connection:** Locate the drain pipe at the bottom side of the machine. Ensure it is positioned downwards for gravity drainage. For effective draining, the machine should be elevated or the drain hose placed lower than the machine's base, leading into a sink or tub.



Figure 3: The drain hose should be positioned downwards for proper water flow.

4. **Water Inlet Connection:** Connect the provided water inlet hose to a faucet. The other end of the hose connects to the "Water Inlet" port on the top of the washing machine. Alternatively, water can be manually poured into the wash tub using a bucket or showerhead.



Figure 4: Water inlet port and control panel.

5. OPERATING INSTRUCTIONS

5.1. Washing Cycle

1. **Load Clothes:** Open the lid of the wash tub (left side) and place your clothes inside. Do not overload; the maximum washing capacity is 8 LBS.
2. **Add Water:** Fill the wash tub with water to the desired level using the water inlet hose or manually.
3. **Add Detergent:** Add the appropriate amount of laundry detergent directly into the wash tub.
4. **Set Wash Time:** Turn the "Wash Timer" knob (leftmost) to select the desired wash duration, up to 15 minutes.
5. **Select Wash Mode:** Turn the "Select Switch" knob (middle) to choose between "Soft" for delicate items or

"Standard" for normal loads.



**Less than the maximum
volume of the TV set**

Figure 5: Control panel for setting wash and spin cycles.

6. **Start Washing:** Close the wash tub lid. The machine will begin the washing process.

5.2. Draining Water

1. **Set to Drain:** Once the wash cycle is complete, turn the "Select Switch" knob (middle) to the "Drain" position.
2. **Gravity Drain:** Ensure the drain pipe is positioned to allow water to flow out into a suitable drain (e.g., bathtub, sink). The built-in drain pump assists, but gravity is essential for complete drainage.



Figure 6: Proper positioning of the drain hose for effective water removal.

5.3. Spin-Drying Cycle

1. **Transfer Clothes:** After draining, transfer the washed clothes from the wash tub to the spin dryer tub (right side). Do not overload; the maximum spin capacity is 7 LBS.
2. **Place Spin Cap:** Place the provided spin cap/pressing plate on top of the clothes in the spin dryer tub. This prevents small items from being thrown out during spinning.



Figure 7: Ensure the pressing plate is correctly positioned in the spin tub.

3. **Set Spin Time:** Turn the "Spin Timer" knob (rightmost) to select the desired spin duration, up to 5 minutes.
4. **Start Spin-Drying:** Close the spin dryer lid. The machine will begin the spin-drying process.
5. **Repeat for Rinsing (Optional):** For a thorough rinse, you can add clean water to the spin tub while it's spinning for a short period, then drain again.

6. MAINTENANCE

Regular maintenance ensures the longevity and efficiency of your washing machine.

- **Cleaning:** Wipe the exterior of the machine with a soft, damp cloth after each use. Do not use abrasive cleaners.
- **Interior Cleaning:** Periodically clean the interior of both tubs to prevent detergent residue buildup. Run a short cycle with just water and a small amount of vinegar if needed.
- **Drain Pipe:** Ensure the drain pipe is clear of any lint or debris.
- **Storage:** When not in use for extended periods, ensure the machine is completely dry. Store it in a cool, dry place.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Machine does not start.	Not plugged in; power outage; timer not set.	Check power connection; ensure power is on; set wash/spin timer.
Water does not drain.	Drain pipe not positioned correctly (too high); drain pipe clogged.	Ensure drain pipe is lower than the machine's base; check for clogs and clear them.
Excessive vibration during spin.	Uneven load in spin tub; machine not on a level surface.	Redistribute clothes evenly in the spin tub; ensure machine is on a flat, stable surface.
Clothes not clean.	Overloaded wash tub; insufficient detergent; incorrect wash mode.	Reduce load size; use recommended amount of detergent; select appropriate wash mode.

8. SPECIFICATIONS

- **Brand:** Winado
- **Model:** WASHER-047
- **Washing Capacity:** 15 Pounds (approx. 8 LBS wash, 7 LBS spin)
- **Product Dimensions:** 26.13"D x 22.62"W x 14.58"H
- **Item Weight:** 24.25 Pounds

- **Material Type:** Plastic
- **Voltage:** 110 Volts
- **Wattage:** 360 watts
- **Maximum Rotational Speed:** 1300 RPM
- **Special Features:** Compact, Portable, Twin Tub Design, Built-in Drain Pump
- **Included Components:** 1 x Washing Machine with Built-in Drain Pump, 1 x Water Inlet Hose, 1 x Drain Pipe

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or visit the official Winado website. Keep your purchase receipt for warranty claims.

You may also contact the seller directly through the platform where the purchase was made for assistance.