

BOBLOV M7

BOBLOV M7 128GB Body Worn Camera User Manual

Model: M7 | Brand: BOBLOV

INTRODUCTION

Thank you for choosing the BOBLOV M7 128GB Body Worn Camera. This manual provides detailed instructions on how to set up, operate, and maintain your device. The M7 is designed for reliable video and audio recording, featuring a 1800 rotating lens, long-lasting battery, and built-in GPS for various applications including law enforcement, security, and personal use.

WHAT'S IN THE BOX

Upon opening your BOBLOV M7 package, please verify that all the following items are included:

- 1x M7 128GB Security Camera
- 1x USB-C Cable
- 1x Short 3600 Clip
- 1x Long 3600 Clip
- 1x Fast Charger Plug
- 1x User Manual (this document)

What's in the Box?



Image: The BOBLOV M7 camera and its included accessories: USB-C cable, fast charger plug, short 3600 clip, and long 3600 clip, all neatly arranged next to the product box.

PRODUCT OVERVIEW

Familiarize yourself with the main components of your BOBLOV M7 camera:

180° Rotating Lens: Allows flexible adjustment of the recording angle.

Display Screen: Shows live view, menu options, and playback.

Recording Button: Large, easily accessible button for quick start/stop recording.

USB-C Port: For charging and data transfer.

Indicator Lights: Provide status information (e.g., recording, charging).

Clips: Short and long 3600 rotating clips for versatile attachment to clothing or gear.



Image: A detailed view of the BOBLOV M7 body camera, highlighting its rotatable lens, front-facing controls, and rear display screen, along with the included attachment clips.

SETUP

1. Charging the Battery

Before first use, fully charge the camera. The BOBLOV M7 is equipped with a 4000mAh battery, providing up to 12-15 hours of continuous recording. A full charge typically takes approximately 4 hours using the provided fast charger plug and USB-C cable.

1. Connect the USB-C cable to the camera's USB-C port.
2. Connect the other end of the USB-C cable to the fast charger plug.
3. Plug the charger into a standard wall outlet.

4. The charging indicator light will illuminate. It will change or turn off once charging is complete.

4000mAh Battery for Extended Recording



15Hrs
Recording Time



4Hrs
Charging Time

Image: An illustration depicting the internal structure of the BOBLOV M7 camera's 4000mAh battery, highlighting its capacity and indicating a 15-hour recording time and 4-hour charging time.

2. Attaching the Clip

Select either the short or long 3600 clip based on your preference and intended mounting location. The clips allow for secure attachment to clothing, belts, or other gear.

1. Align the clip with the mounting slot on the back of the camera.
2. Slide the clip firmly into place until it clicks, ensuring it is securely fastened.
3. The 3600 rotation allows you to adjust the camera's orientation as needed.

OPERATING INSTRUCTIONS

1. Powering On/Off

- To power on: Press and hold the Power button until the screen illuminates.
- To power off: Press and hold the Power button until the device shuts down.

2. Recording Video

The M7 features a convenient one-touch recording function.

- To start recording: Press the large Recording button on the front of the camera. The recording indicator light will activate.
- To stop recording: Press the Recording button again. The recording will save automatically.



Image: The BOBLOV M7 body camera positioned on a road with miniature vehicles, emphasizing the large, easily accessible recording button on its front face.

3. Adjusting the 1800 Rotating Lens

The unique 1800 rotating lens allows you to capture footage from various angles without repositioning the entire camera.

- Gently rotate the lens module upwards or downwards to achieve the desired viewing angle.
- This feature is ideal for first-person recording, selfies, or adjusting to different mounting positions.



Image: A group of young adults taking a selfie with the BOBLOV M7 camera, demonstrating its 180° rotatable lens for capturing various perspectives.

4. Night Vision

The M7 is equipped with night vision capabilities to ensure clear recordings in low-light conditions.

- Refer to the on-screen menu for specific instructions on activating and deactivating night vision mode.
- The camera utilizes four IR lights for enhanced visibility in darkness.

5. GPS Functionality

The built-in GPS module provides precise location tagging for all recorded videos, offering verifiable proof of where and when events occurred.

- GPS data is automatically embedded into video files.
- To view GPS data, connect the camera to a computer and use compatible playback software.

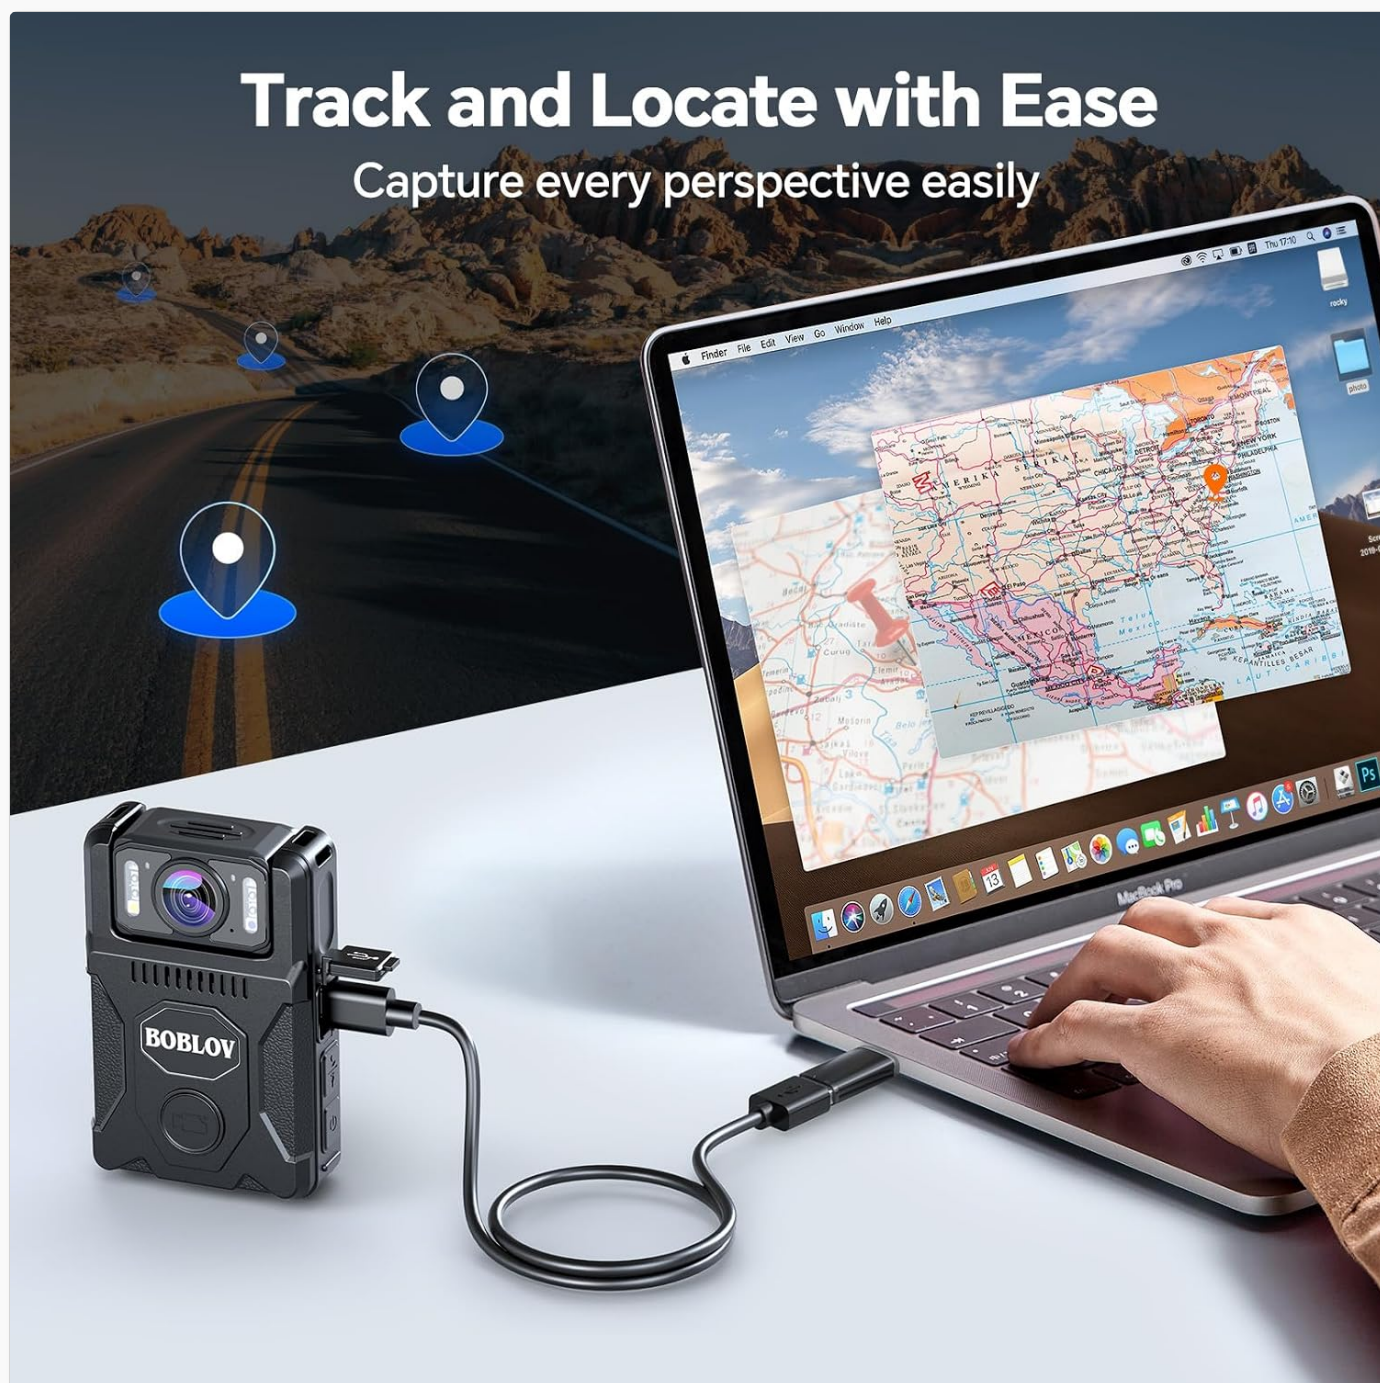


Image: The BOBLOV M7 camera connected via USB to a laptop, with a map displayed on the screen indicating GPS location tracking points, demonstrating the camera's ability to record precise routes and locations.


6. Car Mode (Dashcam Use)

The BOBLOV M7 can function as a dashcam, providing continuous recording while driving. Note that a dash mount is not included.

- Access the camera's settings menu to enable Car Mode.
- When connected to a vehicle's power source, the camera can automatically start recording when the vehicle starts and stop when it turns off.

See Clearly, Even at Night

Four IR Lights ensure recording in low light

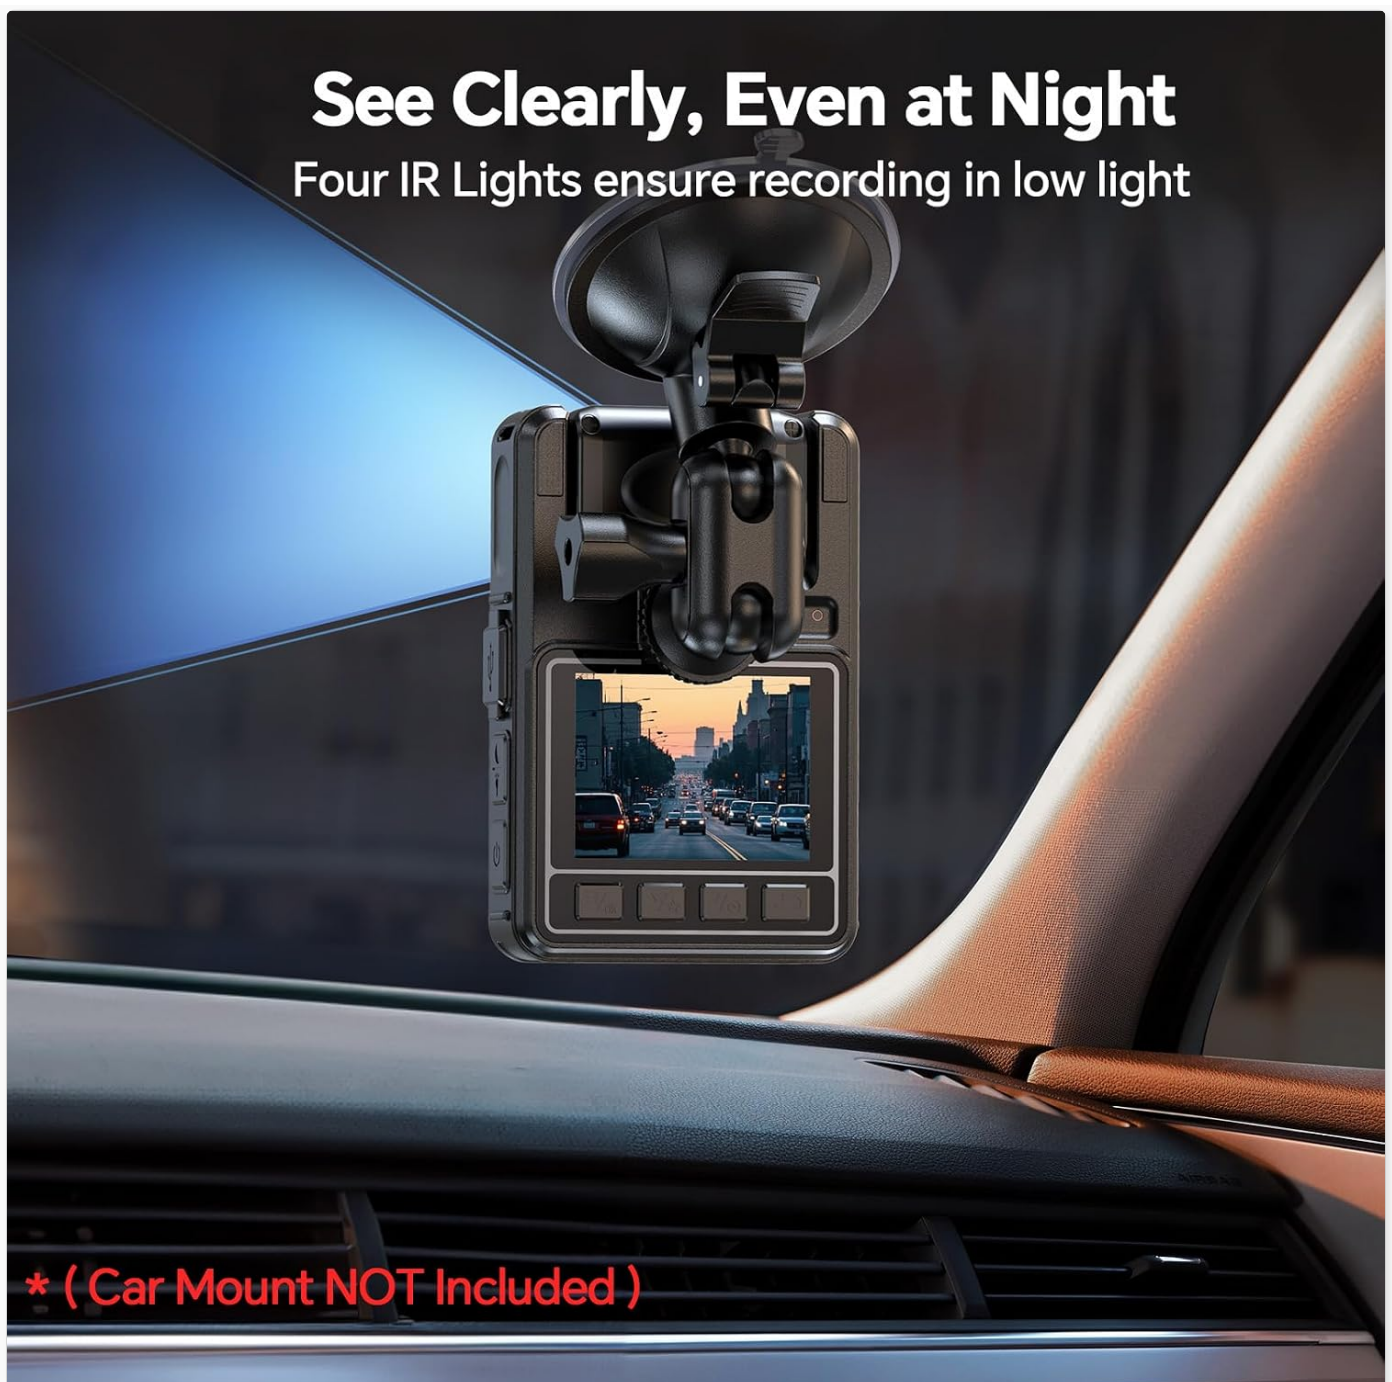

*** (Car Mount NOT Included)**

Image: The BOBLOV M7 camera mounted on a car windshield, functioning as a dashcam, with the view of a city street visible through the windshield, illustrating its use for continuous recording during journeys.

7. Connecting to a Computer

To transfer files or access GPS data, connect the camera to your computer using the provided USB-C cable.

- Connect the USB-C cable to the camera and your computer's USB port.
- The camera will appear as a removable storage device.
- You can then drag and drop files to your computer.

MAINTENANCE

1. Cleaning

- Use a soft, dry cloth to clean the camera body.
- For the lens, use a specialized lens cleaning cloth and solution to avoid scratches.
- Do not use harsh chemicals or abrasive materials.

2. Storage

- Store the camera in a cool, dry place away from direct sunlight and extreme temperatures.
- If storing for extended periods, ensure the battery is partially charged (around 50%) to prolong its lifespan.

TROUBLESHOOTING

If you encounter issues with your BOBLOV M7 camera, refer to the following common solutions:

- **Camera not turning on:** Ensure the battery is fully charged. If the issue persists, try connecting it to the charger and attempting to power on.
- **Recording issues (e.g., freezing, poor quality):** Check if the internal storage is full. Ensure the lens is clean and free from obstructions. Try resetting the camera to factory settings (refer to the on-screen menu for this option).
- **Battery life shorter than expected:** Continuous recording, night vision, and GPS usage can consume more power. Ensure background processes are minimized if possible.
- **Date/Time incorrect:** Connect the camera to a computer; it often synchronizes the time automatically. Otherwise, adjust the date and time manually through the camera's settings menu.
- **Cannot connect to computer:** Ensure the USB-C cable is securely connected to both the camera and the computer. Try a different USB port or cable.

If these steps do not resolve the issue, please contact BOBLOV customer support.

SPECIFICATIONS

Feature	Detail
Brand Name	BOBLOV
Item Weight	13.4 ounces
Product Dimensions	3.94 x 1.97 x 2.36 inches
Country of Origin	China
Item model number	NEW-M-7
Batteries	1 Lithium Polymer batteries required. (included)
Color Name	Black
Special Features	Body camera for law enforcement, Rotate Body Worn Camera
Photo Sensor Technology	CMOS

Feature	Detail
Video Capture Resolution	1080p
Maximum Focal Length	28 Millimeters
Maximum Aperture	99.98 Millimeters
Flash Memory Type	Micro SD (Internal 128GB)
Video Capture Format	MOV
Supported Audio Format	AAC, MP3
Screen Size	2 Inches
Connectivity Technology	USB

WARRANTY AND SUPPORT

BOBLOV products come with a 24-month product warranty. For any technical assistance or support inquiries, BOBLOV offers quick response within 24 hours and lifetime technical support.
For further assistance, please visit the official BOBLOV store or contact their customer service directly:

Visit BOBLOV
Store

© 2024 BOBLOV. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BXWVM6VT>

More documents and user manuals: <https://manuals.plus/>