

[Manuals.plus](#) /

› [Monstake](#) /

› Monstake Automatic Foaming Soap Dispenser User Manual

Monstake 005

Monstake Automatic Foaming Soap Dispenser User Manual

Model: 005

INTRODUCTION

Thank you for choosing the Monstake Automatic Foaming Soap Dispenser. This user manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new device. Please read this manual thoroughly before use and retain it for future reference.



Image: The Monstake Automatic Foaming Soap Dispenser, showcasing its sleek design and touchless operation.

PRODUCT FEATURES

- **Touchless Operation:** Infrared sensor for automatic foam dispensing.
- **Adjustable Foam Volume:** Three gear settings (0.6s, 1s, 1.5s) to meet different needs.
- **Wide Compatibility:** Suitable for hand soap, dish soap, and body wash (requires dilution).
- **Full-Screen Display:** Shows remaining battery and indoor temperature.
- **Large Capacity:** 300ml liquid reservoir, providing approximately 500 uses per fill.

- **Long Battery Life:** Built-in 2000mAh high-capacity battery, lasting up to 4 months on a single charge.
- **USB-C Charging:** Fast and safe charging.
- **IPX5 Waterproof:** Resistant to water splashes.
- **Wall-Mounted Design:** Space-saving and elegant.



Image: An overview of the dispenser's key features, including adjustable foam volume, waterproof rating, and charging method.

SETUP INSTRUCTIONS

1. Wall Mounting

1. **Clean the Wall:** Ensure the wall surface is clean and dry using a cloth.
2. **Apply Adhesive:** Tear off the back adhesive from the mounting bracket and firmly stick it to the desired wall location. Allow it to stand for more than 24 hours for optimal adhesion.
3. **Install Dispenser:** Fasten the soap dispenser onto the adhesive mounting bracket.



You can put foam soap directly

Water 9oz

Ordinary gel/ liquid
soap 3oz



Firstly

Secondly

Ordinary gel/ liquid soap
should be deluted with 3-4 times water.



Foam soap 12oz



★ Not compatible with bar soap!

★ In order to avoid the clogging of the bubble outlet caused by the viscous soap, please add water first, then add soap for blending.

★ It is better to mix it with a container first and then pour it in

Image: Step-by-step guide for wall mounting the dispenser using the provided adhesive.

2. Filling the Dispenser

The dispenser is compatible with various liquid soaps. For optimal foaming, dilution is often required for non-foaming liquid soaps.

- **Foam Soap:** You can pour foam soap directly into the reservoir.
- **Ordinary Gel/Liquid Soap:** Dilute with 3-8 times water. A common ratio is 9oz water to 3oz liquid soap **Important:** To prevent clogging, always add water first, then add soap for blending. It is recommended to mix it in a separate container first, then pour it into the dispenser.
- **Note:** Not compatible with bar soap.

300ML LARGE CAPACITY

It Can Be Used About 500
Times When Filled With Liquid Once



Image: Illustrates the process of refilling the 300ml liquid reservoir.



Image: Visual guide for diluting liquid soap to achieve optimal foam consistency.

OPERATING INSTRUCTIONS

Power On/Off

Locate the power button on the side of the dispenser. Press and hold to turn the device on or off.

Dispensing Foam

Place your hand under the dispenser's nozzle. The infrared sensor will detect your hand and automatically dispense foam.

Adjusting Foam Volume (Gears)

The dispenser has three adjustable gear settings for foam volume. Press the power button briefly to cycle through the settings:

- **Gear 1:** 0.6 seconds of foam dispensing.
- **Gear 2:** 1.0 second of foam dispensing.
- **Gear 3:** 1.5 seconds of foam dispensing.

THREE GEARS TO ADJUST AS YOU LIKE

Can Meet The Different Needs Of Adults And Children



01 Gear
Bubble 0.6s

02 Gear
Bubble 1s

03 Gear
Bubble 1.5s

Image: Demonstrates the three adjustable foam volume settings, catering to different user preferences.

Display Information

The full-screen display shows:

- **Remaining Battery Percentage:** Indicates the current charge level.
- **Indoor Temperature:** Displays the ambient temperature in Fahrenheit or Celsius.
- **Current Gear Setting:** Shows which of the three foam volume settings is active.

FULL-SCREEN DISPLAY

The Remaining Battery
The Indoor Temperature Is Clear At A Glance



Image: A clear view of the dispenser's full-screen display, showing battery level, temperature, and active gear setting.

MAINTENANCE

Cleaning

- Wipe the exterior of the dispenser with a soft, damp cloth.
- Do not submerge the dispenser in water. While it is IPX5 waterproof, direct submersion can cause damage.
- Regularly clean the nozzle to prevent soap residue buildup. The 45-degree inclination of the nozzle helps prevent residual foam.



Image: Highlights the IPX5 waterproof feature, indicating resistance to water splashes for easy cleaning.



Image: Detail of the 45-degree inclined nozzle, designed to prevent soap residue buildup.

Charging

- When the battery indicator on the display shows low charge, connect the dispenser to a power source using the provided USB-C charging cable.
- A full charge provides approximately 4 months of use.

4 MONTHS LONG BATTERY LIFE

Built-In 2000 capacity High-Capacity Battery,
Using Type-C 3.0 Fast Charging Cable,
Charging Faster And Safer

2000 capacity

 


Image: Illustrates the internal 2000mAh battery and USB-C charging capability for long-lasting power.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Dispenser not turning on.	Low battery.	Charge the dispenser using the USB-C cable.

Problem	Possible Cause	Solution
No foam dispensed.	Low liquid level. Sensor obstructed. Soap too thick/not diluted properly. Nozzle clogged.	Refill the liquid reservoir. Ensure nothing is blocking the sensor. Dilute liquid soap with water (3-8 times). Mix thoroughly before pouring. Clean the nozzle.
Foam is too watery or too thick.	Incorrect soap-to-water ratio.	Adjust the dilution ratio. For thicker foam, use less water. For more liquid foam, add more water. Remember to add water first, then soap.
Dispenser falls off wall.	Wall surface not clean/dry. Adhesive not given enough time to set. Textured wall surface.	Re-clean and dry the wall thoroughly. Ensure adhesive sets for at least 24 hours before mounting the dispenser. Consider alternative mounting methods if wall is heavily textured.

SPECIFICATIONS

Feature	Detail
Brand	Monstake
Model Number	005
Color	Pink
Material	Plastic (Plastic Free material type)
Liquid Volume Capacity	300 Milliliters
Battery Capacity	2000mAh
Charging Port	USB Type-C 3.0
Product Dimensions	5.5 x 5.5 x 2.9 inches
Item Weight	13.4 ounces
Waterproof Rating	IPX5
UPC	659252830073

COMPATIBLE WITH VARIOUS LIQUIDS

Hand Soap, Dish soap,
Body Wash Can Be Foamed After
Being Diluted With 3–8 Times Of Water



Image: Visual representation of the dispenser's dimensions.

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the product packaging or contact Monstake customer service directly. You can also visit the official Monstake store on Amazon for more information and frequently asked questions:

[Visit the Monstake Store on Amazon](#)

MONSTAKE is committed to providing high-quality smart home products. We are here to make your home better.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question