

Tesvor M2

Tesvor M2 Robot Vacuum Cleaner User Manual

Model: M2

1. INTRODUCTION

Thank you for choosing the Tesvor M2 Robot Vacuum Cleaner. This manual provides essential information for the safe operation, maintenance, and troubleshooting of your device. Please read it thoroughly before first use and keep it for future reference.

2. SAFETY INSTRUCTIONS

- Ensure the robot is fully charged before first use.
- Do not use the robot in wet environments or near water.
- Keep loose cables, curtains, and other objects that could entangle the robot out of its path.
- Supervise children and pets when the robot is operating.
- Only use the original charging dock and power adapter.
- Do not attempt to repair the robot yourself. Contact customer support for assistance.

3. PRODUCT OVERVIEW

The Tesvor M2 is a 2-in-1 robot vacuum cleaner designed for efficient vacuuming and mopping. It features powerful suction, intelligent navigation, and smart control options.



Image: Tesvor M2 Robot Vacuum Cleaner with its charging base and a smartphone displaying the control app.

4. SETUP AND INITIAL USE

4.1 Charging Dock Placement

Place the charging dock against a wall in an open area, ensuring there are no obstacles within 1 meter (3 feet) to the sides and 2 meters (6 feet) in front of the dock. Ensure the area is well-lit for optimal dock detection.

4.2 Initial Charging

Connect the power adapter to the charging dock and plug it into a power outlet. Place the robot onto the charging dock. The robot will automatically begin charging. A full charge takes approximately 3 hours, providing up to 180 minutes of runtime.

90% **ERFASSUNGSBEREICH**
Große Akkulaufzeit Reinigung von ca.

2.4  **GHz** | **100**  **M²**



Image: The Tesvor M2 robot vacuum cleaner operating in a living room, highlighting its 90% coverage area and battery capacity for cleaning up to 100 square meters.

4.3 App Download and Connection

Download the TESVOR app from your smartphone's app store. Follow the in-app instructions to connect your Tesvor M2 to your home Wi-Fi network. The app allows for full control and scheduling of cleaning tasks.



Image: The Tesvor M2 robot vacuum cleaner shown with a smartphone displaying its control app, indicating compatibility with Amazon Alexa and Google Home for voice control.

4.4 Water Tank and Dustbin Installation

Ensure the dustbin is properly inserted for vacuuming. For mopping, fill the water tank with clean water and attach the mopping pad. Insert the water tank assembly into the robot until it clicks into place.

5. OPERATION

5.1 Cleaning Modes

The Tesvor M2 offers five cleaning modes:

- **Smart Clean:** Systematic zigzag cleaning for general areas.
- **Edge Clean:** Cleans along walls and furniture edges.
- **Spot Clean:** Concentrated cleaning in a specific dirty area.

- **Rand Clean:** (Likely a mistranslation, possibly similar to Edge Clean or a specific boundary cleaning)
- **Random Clean:** Cleans randomly, suitable for smaller, less complex areas.

5.2 Suction Power and Mopping Function

The Tesvor M2 features an impressive 6000Pa suction power, effective on both hard floors and carpets for dirt and pet hair. The electronic water supply system allows for a three-stage adjustable water flow for optimal mopping.



Image: An internal view of the Tesvor M2 robot vacuum cleaner highlighting its 6000Pa suction power and a battery indicator showing 180 minutes of runtime and 5200mAh capacity.



Image: The Tesvor M2 robot vacuum cleaner demonstrating its mopping function on a wooden floor, with visual indicators for High, Medium, and Low water flow settings.

5.3 Intelligent Gyroscopic Navigation

The robot uses advanced gyroscopic navigation to clean systematically in a zigzag path, ensuring thorough coverage and avoiding missed spots.



Image: A collage showing the Tesvor M2 robot vacuum cleaner's systematic zigzag cleaning path, its ability to clean up debris, and its obstacle detection capabilities to avoid falls and collisions.

5.4 Smart Control

Control the Tesvor M2 via the TESSVOR app, remote control, or voice commands through Amazon Alexa or Google Home.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your robot vacuum cleaner.

6.1 Dustbin and Filter Cleaning

Empty the dustbin after each use. Remove the filter and tap it gently to remove dust. Rinse the filter with water if necessary, but ensure it is completely dry before re-inserting.

6.2 Main Brush and Side Brush Cleaning

Periodically remove the main brush and side brushes to clear any tangled hair or debris. Use the cleaning tool provided to cut and remove hair from the main brush.

6.3 Water Tank and Mopping Pad Cleaning

After mopping, empty any remaining water from the tank and rinse it thoroughly. Wash the mopping pad by hand or machine and allow it to air dry completely.

6.4 Sensor Cleaning

Wipe the cliff sensors, wall sensors, and charging contacts on the robot and charging dock with a clean, dry cloth to ensure proper function.

7. TROUBLESHOOTING

If you encounter issues with your Tesvor M2, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Robot does not turn on or charge.	Low battery; charging contacts dirty; power adapter not connected.	Ensure robot is on charging dock; clean charging contacts; check power connection.
Robot cannot connect to Wi-Fi.	Incorrect Wi-Fi password; router too far; 5GHz network.	Verify password; move robot closer to router; ensure 2.4GHz Wi-Fi is used.
Mopping function not working or uneven wetting.	Water tank empty; water outlet clogged; mopping pad not properly attached.	Fill water tank; clean water outlets; re-attach mopping pad correctly.
Robot gets stuck or navigates erratically.	Obstacles in path; sensors dirty; dark environment affecting navigation.	Clear obstacles; clean all sensors; ensure sufficient lighting, especially near the charging dock.
Reduced suction power.	Dustbin full; filter clogged; main brush tangled.	Empty dustbin; clean/replace filter; clean main brush.

8. SPECIFICATIONS

Feature	Specification
Brand	Tesvor
Model Number	M2

Feature	Specification
Suction Power	6000Pa
Battery Capacity	5200 mAh
Runtime	Up to 180 minutes (3 hours)
Noise Level	75 dB
Dimensions (L x W x H)	33L x 33B x 8H cm
Weight	5 Kilograms
Compatible Devices	Smartphones, Tablets, Google Home, Amazon Alexa
Special Feature	Cordless, 2-in-1 Vacuum & Mop
ASIN	B0BXX86TSG
First Available Date	May 21, 2023

9. WARRANTY AND SUPPORT

Your Tesvor M2 Robot Vacuum Cleaner comes with a standard manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions. For technical support, troubleshooting assistance, or warranty claims, please contact Tesvor customer service through their official website or the TESVOR app.

You can also visit the official Tesvor store for more information:[Tesvor Store on Amazon](#)