

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY COV33662806 Replacement Remote Control User Manual for LG DVD Players

ECONTROLLY COV33662806

ECONTROLLY COV33662806 Replacement Remote Control User Manual

For LG DVD Player Models: DVX640H, DVX641KH, DVX692H, DP132H, DVX697KH, DP132HE, DV276-E2M, DVX647KH, DVX691KH, DVX276, DVX642H, DVX690H



Image: The ECONTROLLY COV33662806 replacement remote control, black in color, viewed from a slight angle, showcasing its array of buttons.

1. INTRODUCTION

This manual provides instructions for the ECONTROLLY COV33662806 replacement infrared remote control. This remote is designed to work seamlessly with various LG DVD Player models without requiring any programming. Please read this manual carefully before use to ensure proper operation and longevity of your remote control.

2. SETUP

2.1 Battery Installation

The remote control requires two (2) AAA ALKALINE batteries for operation. Rechargeable batteries are not recommended. Batteries are not included with the remote control.

1. Locate the battery compartment on the back of the remote control.
2. Press down on the latch and slide the battery cover downwards to open it.
3. Insert two AAA ALKALINE batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



Image: A side view of the ECONTROLLY COV33662806 remote control, illustrating the location of the battery compartment on the rear.

3. OPERATING INSTRUCTIONS

This remote control is pre-programmed and ready for use with compatible LG DVD Players. Ensure there is a clear line of sight between the remote control and the DVD player's infrared sensor.



Image: A top-down view of the ECONTROLLY COV33662806 remote control, clearly showing the layout and labels of all 19 buttons.

3.1 Button Functions

- **POWER (Blue Button):** Turns the DVD player on or off.
- **OPEN/CLOSE:** Opens or closes the disc tray.
- **Number Buttons (0-9):** Used for direct track selection or inputting numbers.
- **CLEAR:** Clears numerical input.
- **AV:** Switches audio/video input sources.
- **PR/CH (+/-):** Adjusts program or channel (if applicable to DVD player functions).
- **VOL (+/-):** Adjusts volume.
- **SCAN (◀◀ / ▶▶):** Fast reverse/forward during playback.
- **SKIP (◀◀ / ▶▶):** Skips to the previous/next track or chapter.
- **PAUSE/STEP (■):** Pauses playback or advances frame by frame.
- **PLAY (▶):** Starts or resumes playback.
- **STOP (■):** Stops playback.
- **DVD MENU:** Accesses the DVD disc menu.
- **TITLE:** Accesses the DVD title menu.
- **Navigation Buttons (Up, Down, Left, Right):** Navigates through menus and options.
- **ENTER:** Confirms selections.
- **DISPLAY:** Shows on-screen display information.
- **AUDIO:** Changes audio tracks or languages.
- **SUBTITLE:** Toggles or selects subtitle options.
- **ANGLE:** Changes camera angles (if available on disc).
- **SETUP:** Accesses the DVD player's setup menu.
- **RETURN:** Returns to the previous menu or screen.
- **MARKER-SEARCH:** Used for marking and searching specific points.
- **PROGRAM:** Programs playback order.
- **ZOOM:** Zooms in or out on the picture.
- **REPEAT:** Repeats a track, chapter, or entire disc.
- **A-B:** Repeats a specific section between points A and B.
- **RESOLUTION:** Adjusts video output resolution.
- **CAPTION:** Toggles closed captions.

4. MAINTENANCE

- Keep the remote control dry. Avoid exposure to moisture or liquids.
- Clean the remote control with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- Avoid dropping the remote control or subjecting it to strong impacts.

5. TROUBLESHOOTING

5.1 Remote Control Not Responding

- **Check Batteries:** Ensure the batteries are inserted correctly with the correct polarity (+/-). Replace old batteries with new AAA ALKALINE batteries.
- **Line of Sight:** Make sure there are no obstructions between the remote control and the infrared sensor on your LG DVD player.
- **Distance:** Ensure you are within the effective operating range (up to 33 feet) of the DVD player.
- **Infrared Interference:** Strong light sources or other infrared devices might interfere with the remote's signal. Try operating the remote in a different environment.

5.2 Specific Buttons Not Working

- If only certain buttons are unresponsive, try replacing the batteries first.
- Ensure the remote is clean and free from debris that might be obstructing button presses.

6. SPECIFICATIONS

Feature	Specification
Brand	ECONTROLLY
Model Name/Number	COV33662806
Special Feature	Pre Programmed
Color	Black
Max Number of Supported Devices	1
Compatible Devices	Home Theater (LG DVD Players)
Connectivity Technology	Infrared
Button Quantity	19
Controller Type	Button Control
Maximum Range	33 Feet
Number of Batteries Required	2 AAA batteries
Battery Type	Alkaline (AAA)
Item Weight	43 Grams
Item Dimensions (L x W x H)	5.96" x 1.79" x 0.56"

7. WARRANTY INFORMATION

This ECONTROLLY remote control comes with a**12-month warranty** from the date of purchase. Please retain your proof of purchase for any warranty claims. The warranty covers manufacturing defects but does not cover damage caused by misuse, accidents, or unauthorized modifications.

8. SUPPORT

If you have any questions, encounter issues, or require further assistance with your ECONTROLLY COV33662806 remote control, please do not hesitate to contact our customer support. Refer to your purchase documentation for specific contact details or visit the ECONTROLLY official website for support information.

© 2023 ECONTROLLY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question