

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [VAXCEL](#) /

› [VAXCEL T0697 Bronze Motion Sensor Outdoor Security Flood Light User Manual](#)

VAXCEL T0697

VAXCEL T0697 Bronze Motion Sensor Outdoor Security Flood Light User Manual

Model: T0697

INTRODUCTION

Thank you for choosing the VAXCEL T0697 Bronze Motion Sensor Outdoor Security Flood Light. This manual provides detailed instructions for the safe installation, operation, and maintenance of your new security light. Please read all instructions carefully before installation and retain this manual for future reference.



Image: The VAXCEL Bronze Motion Sensor Outdoor Security Flood Light mounted on the exterior of a house, illuminating the area.

SAFETY INFORMATION

- **WARNING:** Risk of electric shock. Disconnect power at the fuse or circuit breaker before installation or servicing.
- This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.
- Use only UL or ETL listed wire for connections.
- Do not install near combustible materials.
- Ensure all connections are secure and properly insulated.

WHAT'S IN THE BOX

Verify that all components are present before beginning installation:

- Security Flood Light Fixture
- Mounting Hardware

- Shade
- Instruction Manual

Note: Light bulbs (2 x 150 watt PAR 38 medium base E26 screw-in bulbs) are not included. LED compatible.

SETUP AND INSTALLATION

This VAXCEL security light is designed for hardwired installation and can be mounted to a wall or eave. Ensure the mounting surface is structurally sound and capable of supporting the fixture's weight.

Mounting Options

The fixture offers flexible mounting options, allowing for installation on either a wall or an eave. The light heads and motion sensor are adjustable to direct light where needed most.



Image: A diagram illustrating the flexibility of the VAXCEL flood light, showing how it can be mounted on a wall or an eave, with arrows indicating the rotatable light heads and sensor joint for optimal positioning.

Wiring Instructions

1. Turn off power at the circuit breaker or fuse box.
2. Attach the mounting bracket to the junction box using the provided hardware.

3. Connect the fixture's wires to the household wiring: black to black (live), white to white (neutral), and green/bare copper to green/bare copper (ground). Secure connections with wire nuts.
4. Carefully tuck all wires into the junction box.
5. Mount the fixture to the mounting bracket, ensuring a tight seal against the mounting surface to prevent water intrusion.
6. Install two PAR38 E26 base bulbs (not included) into the sockets.
7. Restore power at the circuit breaker.

Product Dimensions



Image: A technical drawing providing the precise measurements of the VAXCEL flood light fixture, indicating its length, width, and height for installation planning.

OPERATING INSTRUCTIONS

Your VAXCEL security flood light features advanced motion sensing and dusk-to-dawn capabilities, offering multiple modes for customized security and energy efficiency.

THREE LIGHTS IN ONE

1. MOTION SENSOR



2. DUSK TO DAWN



3. SWITCH CONTROLLED



MULTI
3-IN-1
FUNCTION

VARIABLE
LIGHT ACTIVATION
VIA
3 UNIQUE MODES

Image: A visual representation of the three primary operational modes of the VAXCEL flood light: motion sensor activation, automatic dusk-to-dawn operation, and manual switch control.

Motion Sensor Function

- **Detection Range:** The sensor detects motion within a 240-degree range and up to 85 feet.
- **Adjustable Sensitivity:** The motion sensitivity can be adjusted to cover distances up to 85 feet, preventing false triggers from distant objects.
- **Motion Shut-off Delay:** Customize how long the light stays on after motion is detected, with settings from 5 seconds to 3 minutes.

EXTRA SAFETY & SECURITY



Image: A graphic demonstrating the wide 240-degree detection angle and adjustable range (10-85 feet) of the motion sensor, highlighting its effectiveness in various outdoor settings including around corners and along walls.

Dusk-to-Dawn Photocell

The integrated photocell automatically turns the fixture on when it gets dark and off when it becomes light, providing continuous security and saving energy during daylight hours.

Dual-Level Brightness & Modes

- Low-Level Brightness:** The light can operate at approximately 30% brightness during periods of no motion.
- High-Level Brightness:** Upon motion detection, the light automatically switches to 100% brightness.
- Early Evening Timer:** Set the light to stay on at low-level brightness for 0, 3, or 6 hours after dusk before switching to motion-only mode.
- 5 Automatic Modes:** Further customize the light's behavior with five distinct operational modes to suit your specific security needs.

FULLY CUSTOMIZABLE SETTINGS

CONVENIENT CONTROL ACCESS

MOTION SHUT-OFF DELAY
5 sec - 3 min

MOTION SENSITIVITY
85 ft

EARLY EVENING TIMER
0, 3, 6 hrs

MODES of OPERATION
5 modes

PATENTED DUAL-LEVEL BRIGHTNESS

up to 30%

100%

LOW LEVEL STAND-BY

MOTION

HOW IT DUALUX WORKS

Image: A detailed graphic outlining the fully customizable settings of the VAXCEL flood light, including options for motion shut-off delay, sensitivity, early evening timer, various operating modes, and the dual-level brightness feature.

MAINTENANCE

- **Cleaning:** Clean the fixture with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Bulb Replacement:** Ensure power is off before replacing bulbs. Use two 150-watt maximum PAR38 E26 medium base screw-in bulbs. LED compatible bulbs can be used for energy efficiency.
- **Durability:** The fixture is constructed from weather-resistant plastic material, suitable for outdoor use in various conditions.

LONG LASTING DURABILITY



Image: The VAXCEL flood light shown enduring rain and snow, emphasizing its robust outdoor durability and weather-resistant construction.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Light does not turn on.	No power; faulty bulb; sensor malfunction.	Check circuit breaker. Replace bulbs. Ensure sensor is clean and unobstructed.
Light stays on continuously.	Sensor in test mode; continuous motion detected; wiring error.	Check sensor mode. Remove obstructions. Verify wiring connections.
Light flashes or flickers.	Loose wiring; incompatible bulb; power fluctuations.	Check all wiring connections. Use recommended bulbs. Consult an electrician if power issues persist.
Motion sensor not detecting.	Sensor obstructed; incorrect sensitivity setting; improper angle.	Clear obstructions. Adjust sensitivity. Reposition sensor for optimal coverage.

SPECIFICATIONS

Feature	Detail
Brand	VAXCEL
Model Name	T0697
Color	Bronze
Material	Plastic
Product Dimensions	8.75"L x 11.75"W x 8"H
Indoor/Outdoor Usage	Outdoor
Power Source	Hardwired
Installation Type	Wall Mounted (also Eave Mount)
Special Features	Adjustable Heads, Dusk to Dawn Sensor, Motion Sensor
Motion Sensor Range	240 Degree, 85 Ft.
Bulb Base	E26 Medium
Wattage (Max)	2 x 150 watts (bulbs not included)
Voltage	120 Volts
Water Resistance Level	Water Repellent
Certification	ETL Listed

WARRANTY

This VAXCEL product comes with a limited warranty. Please refer to the warranty card included in your packaging for specific terms and conditions, or visit the VAXCEL website for more information.

PRODUCT VIDEO

Watch this video for an overview of VAXCEL lighting products, showcasing various styles and applications.

Your browser does not support the video tag.

Video: An informational video titled "About Vaxcel Lighting" providing a general overview of VAXCEL's lighting solutions.

CUSTOMER SUPPORT

For further assistance, technical support, or warranty claims, please contact VAXCEL customer service. Contact information can typically be found on the VAXCEL website or on the product packaging.