

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [PARIS RHÔNE](#) /
- › [PARIS RHÔNE 26QT Digital Air Fryer Toaster Oven Instruction Manual \(Model PE-AF006\)](#)

## PARIS RHÔNE PE-AF006

# PARIS RHÔNE 26QT Digital Air Fryer Toaster Oven

MODEL: PE-AF006

Instruction Manual

[Overview](#)   [Setup](#)   [Operation](#)   [Safety Instructions](#)   [Product](#)  
[Maintenance](#)   [Troubleshooting](#)   [Specifications](#)   [Warranty & Support](#)

### Introduction

Thank you for purchasing the PARIS RHÔNE 26QT Digital Air Fryer Toaster Oven. This appliance is designed to provide versatile cooking options, including air frying, baking, broiling, roasting, dehydrating, and slow cooking, with 85% less oil. Please read this manual thoroughly before use to ensure safe and optimal performance. Keep this manual for future reference.

### Important Safety Instructions

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Read all instructions before using the appliance.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electric shock, do not immerse cord, plugs, or the main unit in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.

11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to “off”, then remove plug from wall outlet.
13. Do not use appliance for other than intended use.
14. Oversized foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
15. A fire may occur if the toaster oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
16. Do not place any of the following materials in the oven: paper, cardboard, plastic, and the like.
17. Do not store any materials, other than manufacturer’s recommended accessories, in this oven when not in use.
18. Do not place cooking utensils or baking dishes on the glass door.

## Product Overview

---

### Components

The PARIS RHÔNE 26QT Digital Air Fryer Toaster Oven comes with the following components:

- Main Unit (Air Fryer Toaster Oven)
- Drip Tray
- Oven Rack
- Air Fryer Basket
- Recipe Cookbook
- Magnetic Cheat Sheet



Figure 1: Included Accessories (Drip Tray, Oven Rack, Air Fryer Basket, and Recipe Cookbooks).

### Control Panel

The appliance features a digital touch panel with an LED display and a control knob for easy operation.

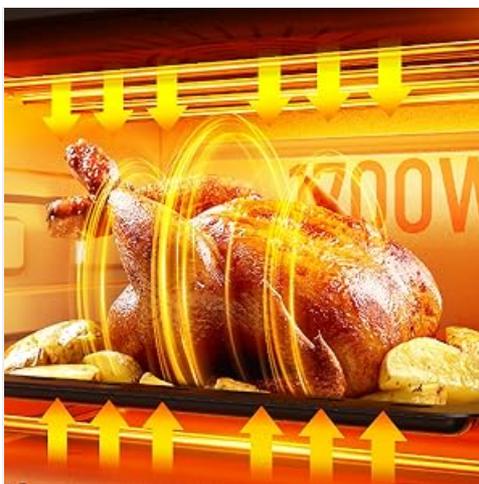


Figure 2: Digital Control Panel and Display.

The display shows temperature, time, and selected presets. The control knob allows you to adjust settings and navigate menus.

## Setup

1. **Unpack:** Carefully remove all packaging materials and accessories.
2. **Clean:** Wipe down the interior and exterior of the oven with a damp cloth. Wash all accessories (Drip Tray, Oven Rack, Air Fryer Basket) with warm, soapy water. Dry thoroughly.
3. **Placement:** Place the air fryer toaster oven on a stable, heat-resistant, and level surface. Ensure there is at least 6 inches (15 cm) of space on all sides and above the appliance for proper ventilation. Do not place it near flammable materials.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet.
5. **Initial Run:** Before first use, it is recommended to run the oven empty for about 15 minutes at 400°F (200°C) to burn off any manufacturing residues. A slight odor or smoke may be present; this is normal. Ensure the area is well-ventilated.

## Operating Instructions

The PARIS RHÔNE Air Fryer Toaster Oven offers 24 intelligent presets and a wide temperature range from 100°F to 450°F, with a customizable cooking time up to 72 hours.

### Basic Operation

1. **Power On:** Press the Power button to turn on the appliance. The LED display will illuminate.
2. **Select Function:** Use the control knob to scroll through the available cooking functions (e.g., Air Fry, Bake, Broil, Roast, Dehydrate, Slow Cook) or the 24 intelligent presets. Press the knob to confirm your selection.
3. **Adjust Temperature/Time:** Once a function or preset is selected, the default temperature and time will be displayed. Turn the control knob to adjust the temperature (100°F to 450°F) and time (up to 72 hours) as needed. Press the knob to switch between adjusting temperature and time.
4. **Start Cooking:** Press the Start/Pause button to begin the cooking process.
5. **Pause/Cancel:** Press the Start/Pause button to temporarily pause cooking. Press it again to resume. To cancel the cooking process, press and hold the Power button.

### Cooking Functions

- **Air Fry:** Utilizes 360-degree hot air circulation for crispy results with minimal oil. Ideal for chicken wings, fries, and other fried foods.
- **Bake:** Perfect for cakes, cookies, and pastries.
- **Broil:** For quick cooking and browning the top of dishes.
- **Roast:** Suitable for meats like whole chicken or beef, and vegetables.
- **Dehydrate:** Low-temperature cooking for drying fruits, vegetables, and making jerky. Can operate up to 72 hours.
- **Slow Cook:** For tender, slow-cooked meals.



Figure 3: Versatile cooking with the Air Fryer Toaster Oven.



### Quick Family-Sized Portions

Figure 4: Illustration of 1700W heating and 360-degree hot air circulation.

Refer to the included recipe cookbook and magnetic cheat sheet for specific cooking times and temperatures for various foods.

## Maintenance and Cleaning

Regular cleaning ensures optimal performance and extends the lifespan of your appliance.

1. **Unplug:** Always unplug the air fryer toaster oven from the power outlet and allow it to cool completely before cleaning.
2. **Exterior:** Wipe the exterior with a damp cloth and mild detergent. Do not use abrasive cleaners or scouring pads.
3. **Interior:** Clean the interior walls with a damp cloth and mild, non-abrasive cleaner. For stubborn food residue, a paste of baking soda and water can be used. Avoid spraying cleaners directly onto the heating elements.
4. **Accessories:** The Drip Tray, Oven Rack, and Air Fryer Basket are dishwasher safe for convenient cleaning. For hand washing, use warm, soapy water and a non-abrasive sponge.
5. **Crumb Tray:** Regularly remove and clean the crumb tray to prevent grease buildup and potential fire hazards.
6. **Storage:** Ensure the appliance and all accessories are clean and dry before storing. Store in a cool, dry place.

## Troubleshooting

If you encounter any issues with your air fryer toaster oven, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; appliance malfunction.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker. If the issue persists, contact customer support.
Food is not cooking evenly.	Overcrowding the basket/rack; incorrect temperature/time settings.	Avoid overcrowding; cook in smaller batches if necessary. Adjust temperature and time according to the recipe or food type. Flip or shake food halfway through cooking.
White smoke coming from the oven.	Grease or food residue on heating elements or crumb tray.	Unplug the appliance and let it cool. Clean the interior, heating elements, and crumb tray thoroughly. Ensure the drip tray is in place.
Digital display shows an error code.	Internal sensor issue or malfunction.	Unplug the appliance for 5 minutes, then plug it back in. If the error persists, contact customer support.

## Specifications

Feature	Detail
Model Name	PE-AF006
Brand	PARIS RHÔNE
Capacity	26 Quarts
Output Wattage	1700 Watts
Voltage	220 Volts
Control Method	Touch
Min Temperature Setting	100 Degrees Fahrenheit
Max Temperature Setting	450 Degrees Fahrenheit
Product Dimensions (D x W x H)	16.89"D x 15.51"W x 15.87"H
Material	Plastic (Outer: Polyethylene)
Special Features	Timer, 24 Presets
Dishwasher Safe Parts	Yes (Accessories)
Recommended Uses	Bake, Broil, Dehydrate, Air Fry, Roast, Slow Cook
UPC	719710545861

## Warranty and Support

This PARIS RHÔNE Air Fryer Toaster Oven (Model PE-AF006) is covered by a **2-year manufacturer's warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use.

The warranty does not cover damage resulting from:

- Accident, misuse, or abuse.
- Unauthorized repairs or modifications.
- Failure to follow operating instructions.
- Normal wear and tear.

For warranty claims, technical support, or any questions regarding your product, please contact PARIS RHÔNE customer service. Please have your model number and proof of purchase ready.

### Customer Service Contact:

Website: [www.parisrhone.com](http://www.parisrhone.com) (or refer to your purchase platform for specific contact details)

Email: [support@parisrhone.com](mailto:support@parisrhone.com) (example email, actual email not provided)

Phone: 1-800-XXX-XXXX (example phone, actual phone not provided)